


**Part#: IB08EAD1B**

**Application: For 07-10 ACURA MDX**

| Item | Part Name                              | QTY | Item | Part Name            | QTY |
|------|--|-----|------|----------------------|-----|
| 1    | Driver/Left Sidebar                    | 1   | 9    | M8x25 Hex Bolt       | 6   |
| 2    | Passenger/Right Sidebar                | 1   | 10   | M8x40 Hex Bolt       | 12  |
| 3    | Driver Front Mounting Bracket (LFB)    | 1   | 11   | M8 Lock Washer       | 18  |
| 4    | Driver Rear Mounting Bracket (LRB)     | 1   | 12   | M8 Hex Nut           | 6   |
| 5    | Passenger Front Mounting Bracket (RFB) | 1   | 13   | M8 Large Flat Washer | 22  |
| 6    | Passenger Rear Mounting Bracket (RRB)  | 1   | 14   | M6 Square Head Bolt  | 16  |
| 7    | Auxiliary Mounting Bracket (AB)        | 4   | 15   | M6 Flat Washers      | 16  |
| 8    | M8 T-Bolt Plate                        | 2   | 16   | M6 Nylon Lock Nuts   | 16  |

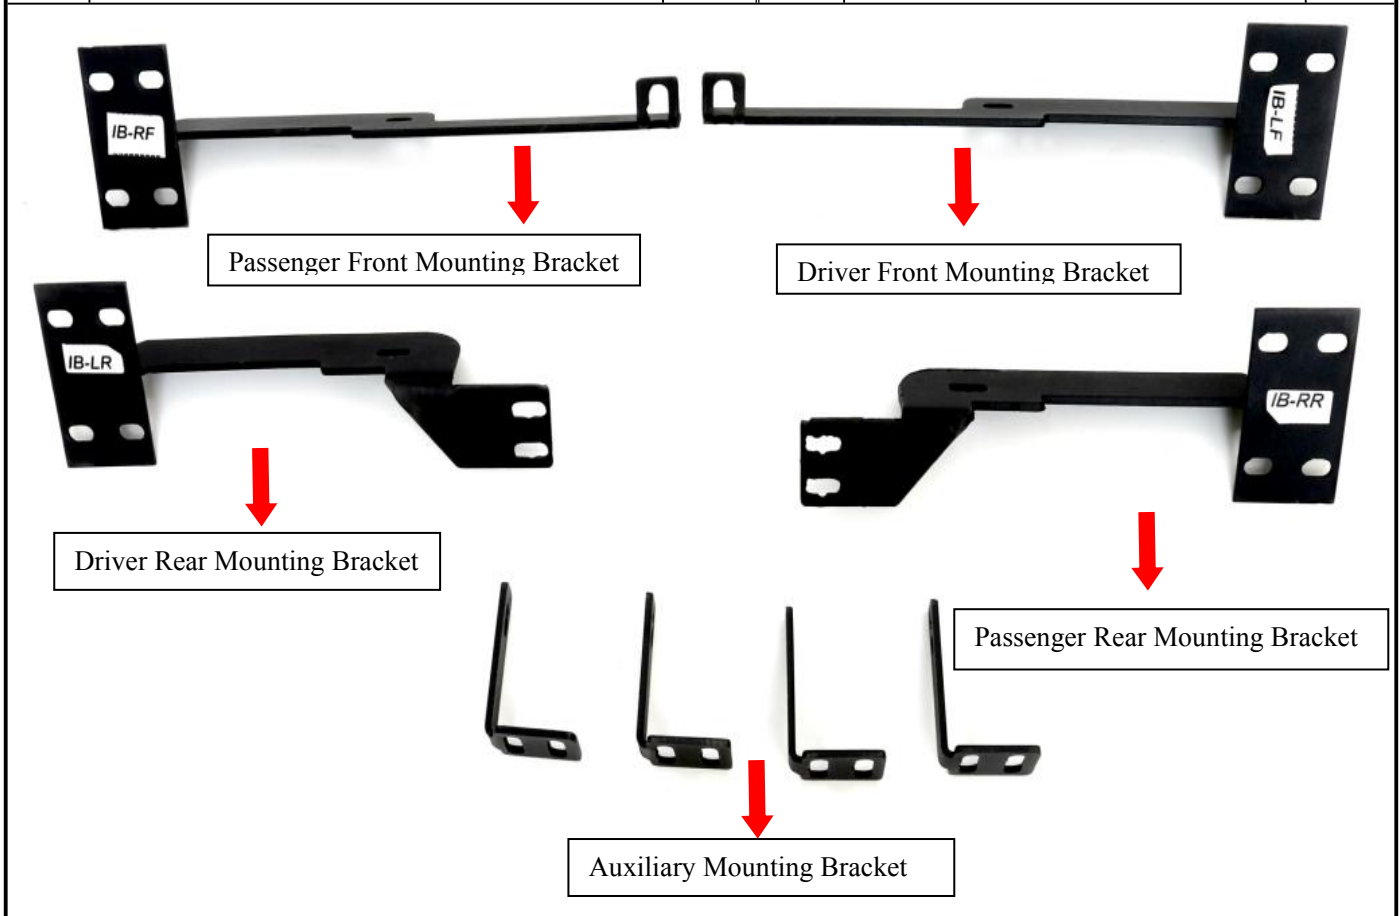

| Step | Installation Instruction  |
|------|---|
| 1    | <b>REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.</b>  |
| 2    | From underneath vehicle, place lefts side front bracket in position . Attach using hex head bolts supplied with flat washers and lock washers and nuts. Secure the auxiliary mount bracket to the front bracket using the bolts, flat washer, lock washer and nuts as shown in below pictures . Do not fully tighten at this time |
| 3    | Attach and secure Rear Mount Bracket to underside of vehicles rear body mount in same manner as the front. Secure the auxiliary mount bracket to the front bracket using the bolts, flat washer, lock washer and nuts as shown in below pictures. Do not fully tighten at this time.  |

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

# Installation Instruction

**Part#: IB08EAD1B**

**Application: For 07-10 ACURA MDX**


|          |   |
|----------|---|
| <b>4</b> | Attach side bar to brackets using the supplied head bolts, flat washers and lock washers.                           |
| <b>5</b> | Level and adjust the Sidebar, drill for second Pinch Weld Bolt if necessary, then tighten all hardware at this time |
| <b>6</b> | Repeat steps 2 – 5 for passenger Sidebar installation   |
| <b>7</b> | Do periodic inspections of the installation to make sure all hardware is secure and tight                           |

**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

**For gloss black finishes:** Mild soap may be used to clean the Sidebar.

## Driver Side Mounting Brackets Shown

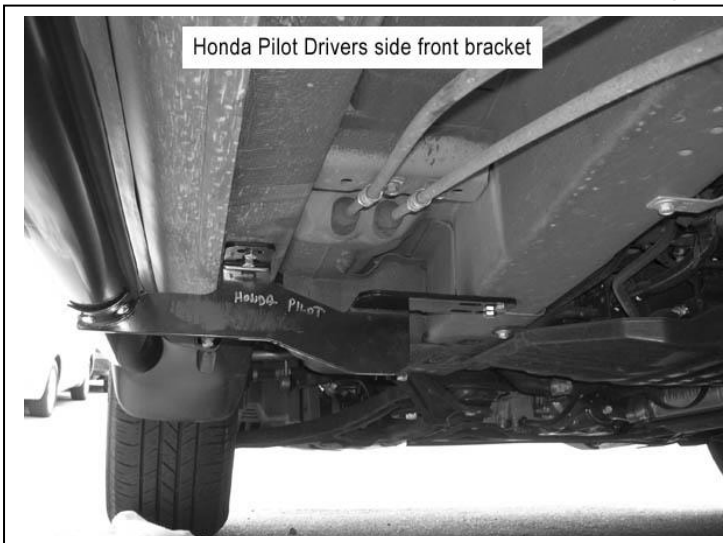

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!