
## iRunning Board Installation Instruction


## Application: 2003-2008 Honda Pilot 2002-2004 Acura MDX

| Step Description   |   |  |      |                                   |     |  |
|--|---|--|------|-----------------------------------|-----|--|
| ltem   | Part Name   | QTY  | Item | Part Name                         | QTY |  |
| 1  | MAIN FRONT BRACKET (FB)   | 2  | 8    | M6 Flat Washers                   | 16  |  |
| 2  | MAIN MIDDLE / REAR BRACKET (CRB)  | 2  | 9    | M6 Square Hex Bolt                | 16  |  |
| 3  | MAIN MIDDLE / FRONT BRACKET (CFB)   | 2  | 10   | M8 Flat Washers                   | 28  |  |
| 4  | MAIN REAR BRACKET (RB)  | 2  | 11   | M8 Nylon Lock Nuts                | 8   |  |
| 5  | MIDDLE PINCH WELD HANGER (CPB)  | 4  | 12   | SELF DRILLING SCREW               | 18  |  |
| 6  | Front/Rear Pinch Weld Hanger (ERPB)   | 4  | 13   | M6 Nylon Lock Nuts                | 16  |  |
| 7  | M8x1.25-20 HEX HEAD BOLTS   | 20   | 14   | Running Boards (Driver+Passenger) | 2   |  |
| FB CFB CRB RB Image: CPB   Image: CFB CCPB CPB   Image: CFB CPB   Image: CFB CPB   |   |  |      |                                   |     |  |
| 1  | Verify all parts are present. Read and understand instructions before beginning.  |  |      |                                   |     |  |
| 2  | Remove plugs and install middle hanger brackets in locations as shown (See Fig 1, 2, 3 and 4).  |  |      |                                   |     |  |
| 3  | Attach middle front and middle rear brackets as shown (See Fig 3 and 4)   |  |      |                                   |     |  |
| 4  | Insert square head bolts as shown (4 per slot, 8 per Step board/Running board) (See Fig 7).<br>Attach step board to middle brackets. Align and hand tighten (See Fig 8).<br>Locate position for front and rear hangers.<br>Attach to rocker panel as shown (See Fig 5 and 6).<br>Attach front and rear brackets as shown (See Fig 5 and 6). |  |      |                                   |     |  |
| 6  | Attach Step board / Running board to  | Attach Step board / Running board to brackets as shown. Align and tighten. |      |                                   |     |  |
| 8 INSTALLATION IS COMPLETE.  |   |  |      |                                   |     |  |
| FINISH PROTECTION<br>Products have a high quality finish that must be cared for like other exposed finish on the vehicle. Protect<br>the finish with a non-abrasive automotive wax on a regular basis. The use of any soap, polish or wax that<br>contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion. |   |  |      |                                   |     |  |

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

## iRunning Board Installation Instruction




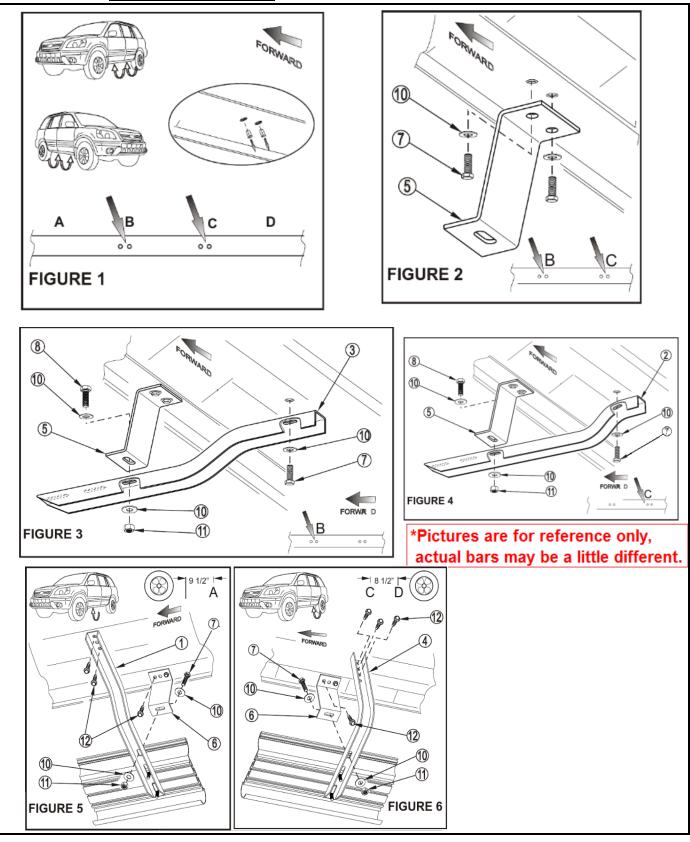


The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

## iRunning Board Installation Instruction

Application: 2003-2008 Honda Pilot 2002-2004 Acura MDX

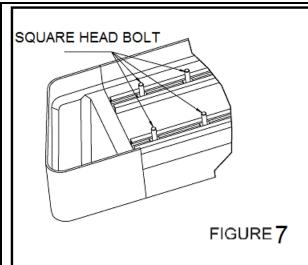

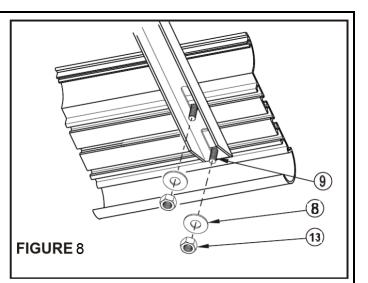

\*Pictures are for reference only, actual bars may be a little different.



The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

View other running boards and step bars made by APG on our website.