




Installation Instruction

Part#: IB10FJH4B

Application: For 87-06 WRANGLER AND UNLIMITED

Item	Description	QTY	Item	Description	QTY
1	Driver/Left Sidebar	1	8	M8 Lock Washer	16
2	Passenger/Right Sidebar	1	9	M8 Flat Washer	16
3	Mounting Bracket	4	10	Driver Front Bar Bracket (BLF)	1
4	M12x50mm Hex Bolt	4	11	Driver Rear Bar Bracket (BLR)	1
5	M12 Flat Washer	4	12	Passenger Front Bar Bracket (BRF)	1
6	M12 Lock Washer	4	13	Passenger Rear Bar Bracket (BRR)	1
7	M8x30mm Hex Bolt	16			

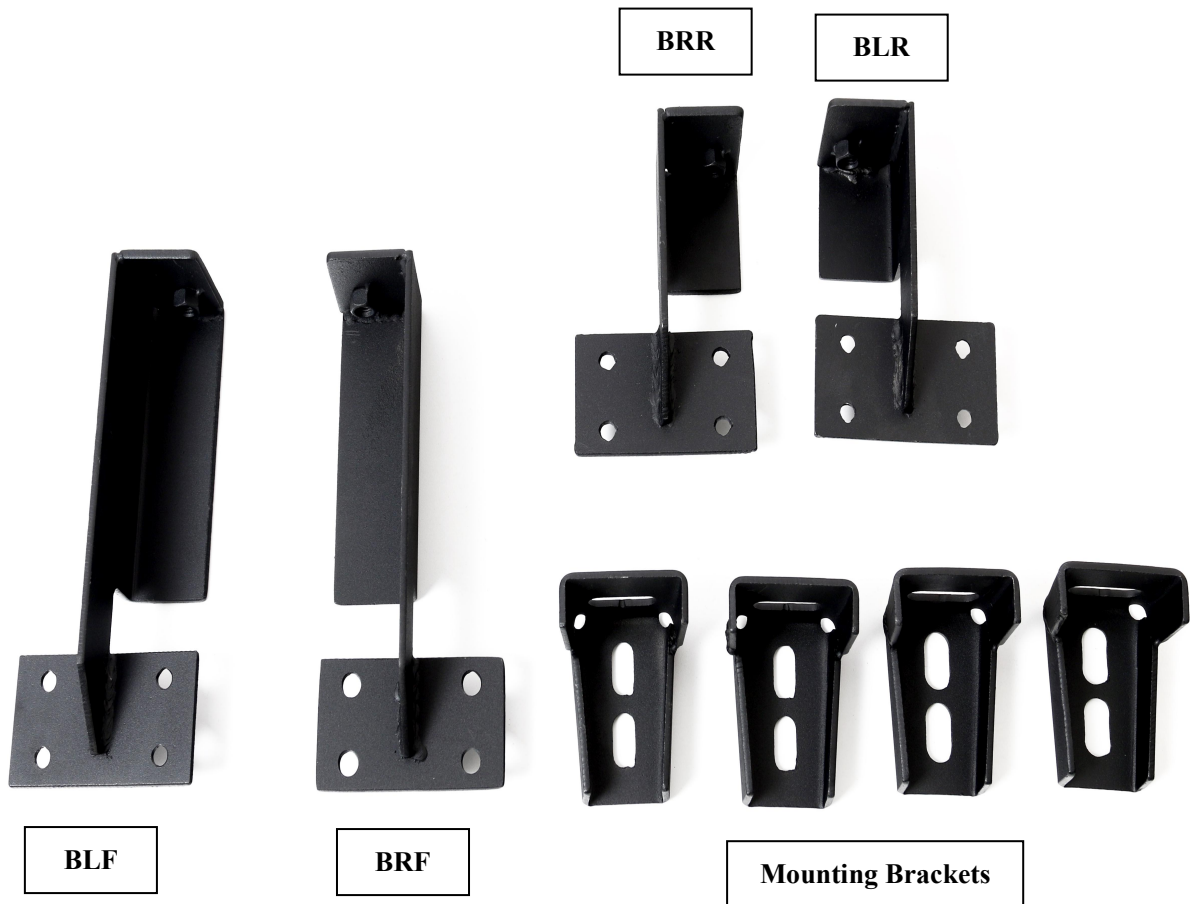


The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Installation Instruction

Part#: IB10FJH4B

Application: For 87-06 WRANGLER AND UNLIMITED

Step	Installation Instruction
<p>REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.</p>	
1	<p>Install the Bar Brackets on the Drive sidebar & Passenger sidebar, as shown Figure 1A & 1B.</p>
2	<p>Remove the 2 existing body mount bolts from frame mounting locations located at front and rear under the frame of the Vehicle.</p> <p>Please note: Do not remove the rubber bushing from the retainer on the vehicle bracket mounts to the bushing with the factory bolts.</p> <div style="display: flex; align-items: center;">  <div style="border: 1px solid black; padding: 5px; margin-left: 10px; width: fit-content;"> <p>*Pictures for reference only, bar should be a little different.*</p> </div> </div>
3	<p>Mount Front and Rear Mounting brackets to body mounts with body mount bolts removed in step 2. Use front hole in mounting bracket for 97 and newer vehicles and rear holes for 87-95. Leave bolts loose to allow for adjustment.</p>
4	<p>Locate sidebar assembly for the side you have started on, the longer leg of the bar goes toward the front of the vehicle. Bolt front of sidebar assembly to front bracket and rear end of sidebar assembly to rear bracket using the M12 bolts, flat washes & lock washers. Finger-tighten only at that time to ensure proper adjustment later.</p>
5	<p>Make sure all parts are properly aligned and bar is level, tighten all fasteners.</p>
6	<p>Repeat steps 2 to 4 for another side of vehicle to complete installation of the sidebar.</p>
<p>To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.</p> <p>For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.</p> <p>For gloss black finishes: Mild soap may be used to clean the Sidebar.</p>	


The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Installation Instruction

Part#: IB10FJH4B

Application: For 87-06 WRANGLER AND UNLIMITED

Sidebar & Bar Bracket Assembly Shown:

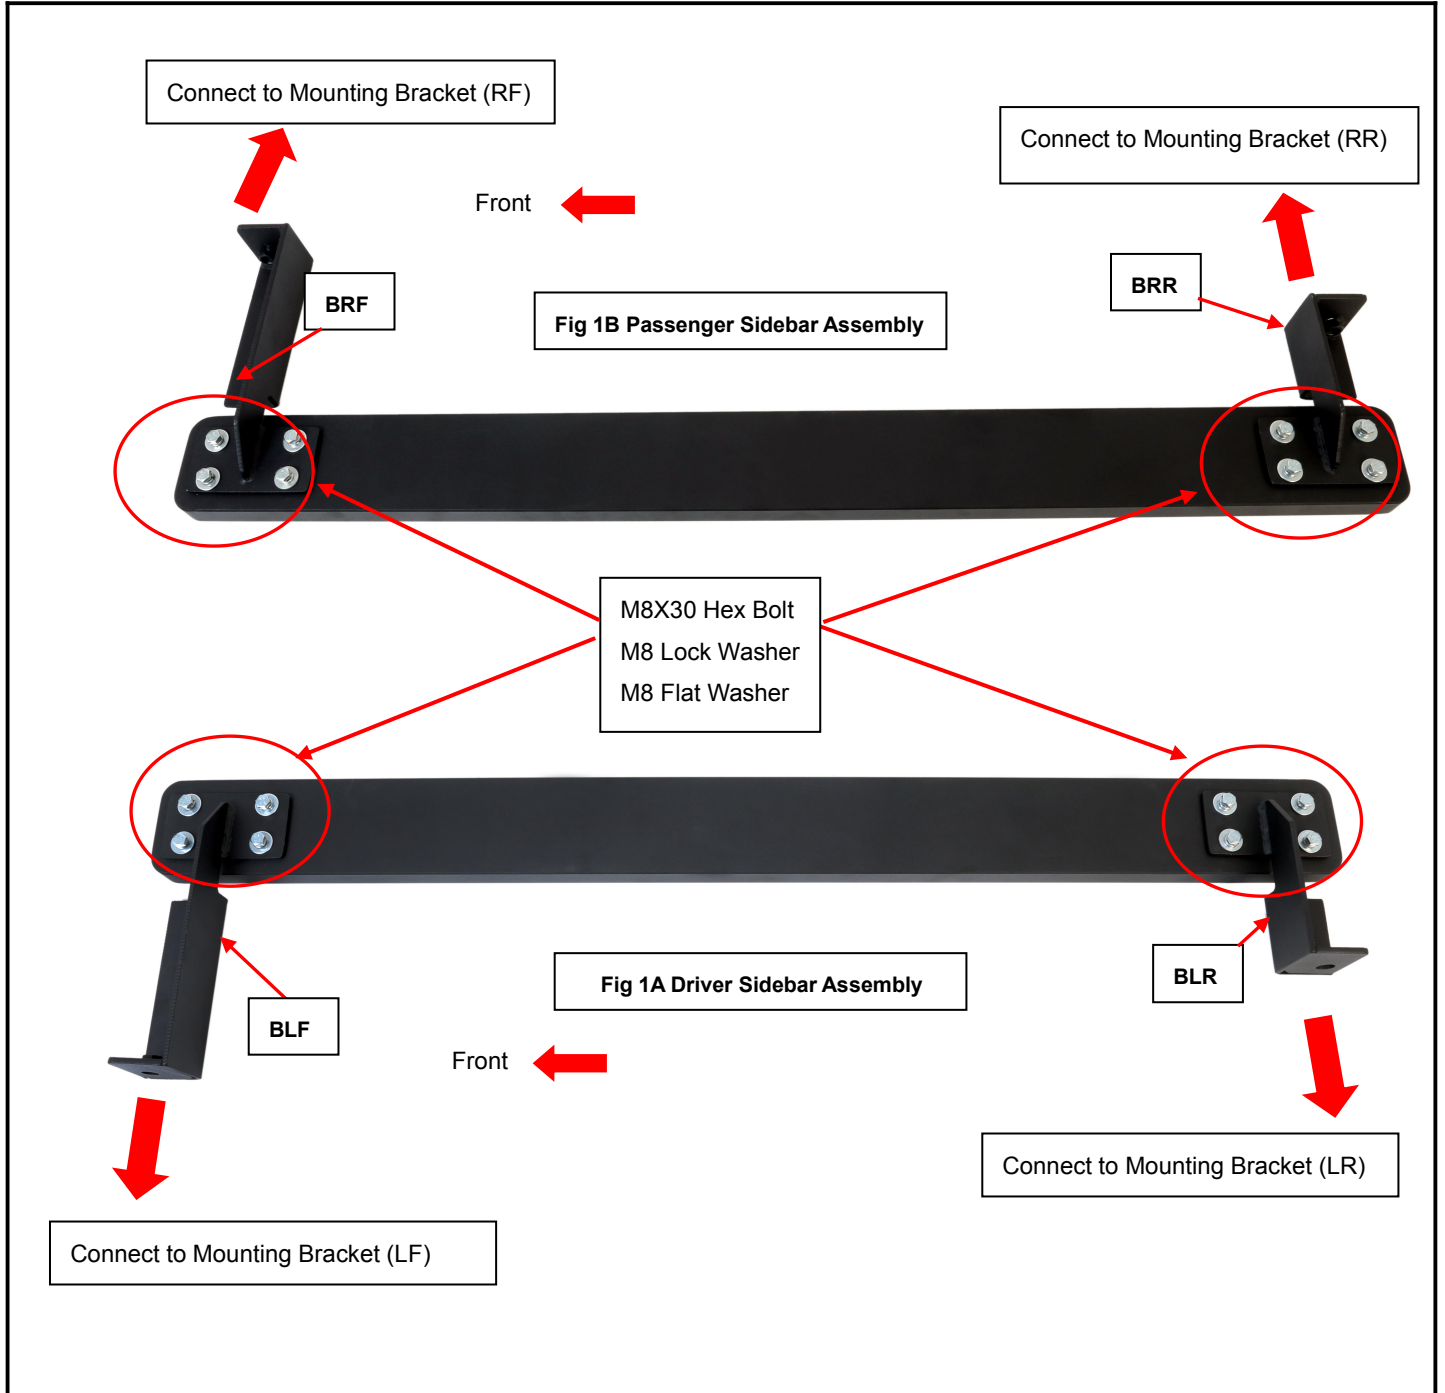

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!