

Installation Instruction

Part#: IB14DAB8B

Application: For 99-04Nissan Pathfinder


| Item | Description | QTY | Item | Description | QTY |
|------|---------------------------|-----|------|-----------------------|-----|
| 1 | 8mm×1.25mm×25mm hex bolts | 12 | 5 | 12mm hex nut | 8 |
| 2 | 12mm×1.75mm×40mm hex bolt | 8 | 6 | Rear Support Bracket | 2 |
| 3 | 8mm flat washers | 12 | 7 | Front Support Bracket | 2 |
| 4 | 12mm flat washers | 16 | 8 | Side bar | 2 |





Front Bracket

Rear Bracket

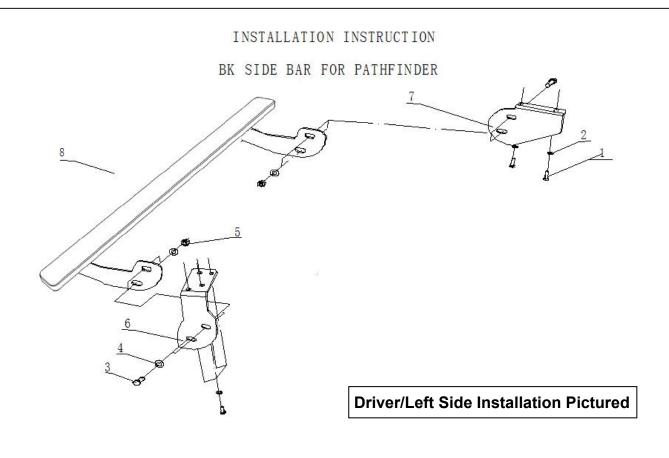

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!