




## Installation Instruction

**Part#:IB14DBB7B**

**Application: For 05-11NISSAN PATHFINDER**

Item	Part Name	QTY	Item	Part Name	QTY
1	Driver/Left Sidebar	1	9	13 x37mm OD x 3mm Flat Washers	24
2	Passenger/Right Sidebar	1	10	8.4 x 24mm OD x 2mm Flat Washers	12
3	Driver/Left Side Panel Bracket(LB)	3	11	8mm Lock Washers	12
4	Passenger/Right Side Panel Bracket (RB)	3	12	8mm Hex Nuts	12
5	Bar Bracket (BB)	6	13	M6 Nylon Lock Nuts	24
6	12-1.75mm x 30mm Hex Head Bolts	12	14	M6 Square Hex Bolt	24
7	12mm Lock Washers	12	15	M6 Flat Washers	24
8	12mm Hex Nuts	12			

Driver Side Panel Bracket (3 pcs)

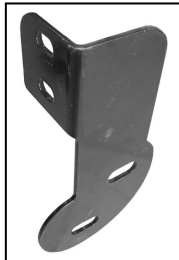

Bar Bracket 6pcs)



Passenger Side Panel Bracket (3 pcs)

Step	Installation Instruction
1	<b><u>CHECK PART LIST AND MAKE SURE ALL COMPONENTS ARE PRESENT. READ FOLLOWING INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. DRILLING REQUIRED.</u></b>
2	On the passenger side of the vehicle, locate the six factory threaded studs located on the side panel underneath of the vehicle ( <b>Figure 1</b> ).
3	Partially attach all three passenger Side Panel Brackets to the factory threaded studs using the included (6) 8mm Flat Washers, (6) 8mm Lock Washers, and (6) 8mm Hex Nuts ( <b>Figure 1</b> ).
4	Once all three Side Panel Brackets are partially installed, loosely attach the Sidebar Brackets on the front side of the Side Panel Brackets using the included (6) 12mm x 30mm Hex Head Bolts, (6) 12mm Lock Washers, (6) 12mm Hex Nuts, and (6) 12mm Flat Washers. <b>NOTE:</b> The cradles on the Sidebar Brackets should be facing the front of the vehicle when installed ( <b>Figure 1 &amp; 2</b> ).
5	Position passenger Sidebar onto Brackets and attach it using the included (12) M6 Square Hex Bolt , (12)M6 Nylon Lock Nuts, and (12) M6 Flat Washer ( <b>Figure 3</b> ).
6	Level and adjust Sidebar; then tighten all hardware at this time.
7	Repeat steps 2-6 for driver Sidebar.
8	Do periodic inspections to the installation to make sure that all hardware is secure and tight.

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

# Installation Instruction

Part#:IB14DBB7B


Application: For 05-11NISSAN PATHFINDER

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.



**For Polished Finishes:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

**For black finishes:** Mild soap may be used to clean the Sidebar.

## Passenger Side Installation Shown

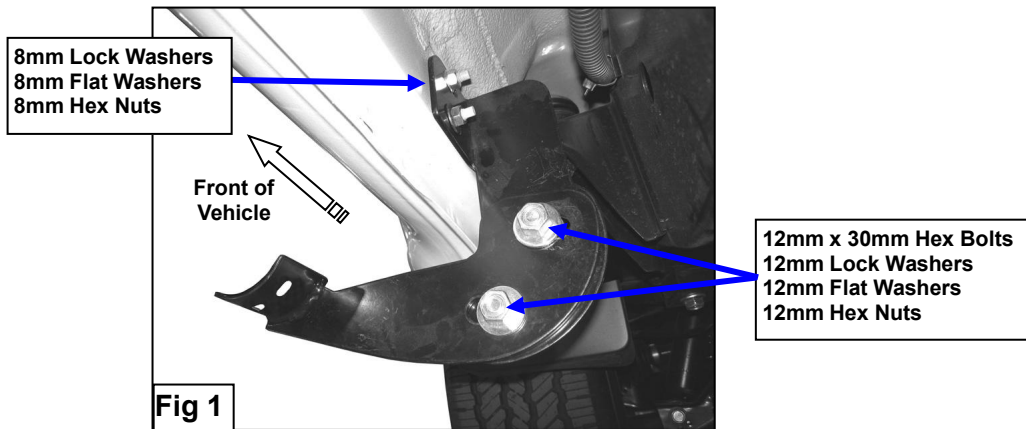

**\*Pictures are for reference only, actual brackets & bars may be a little different \***

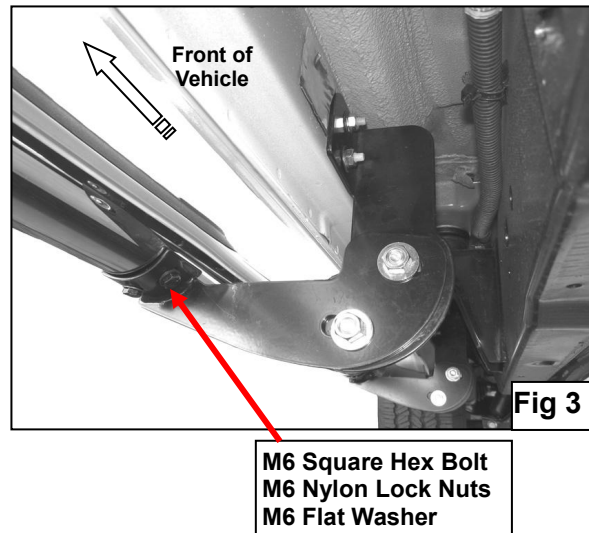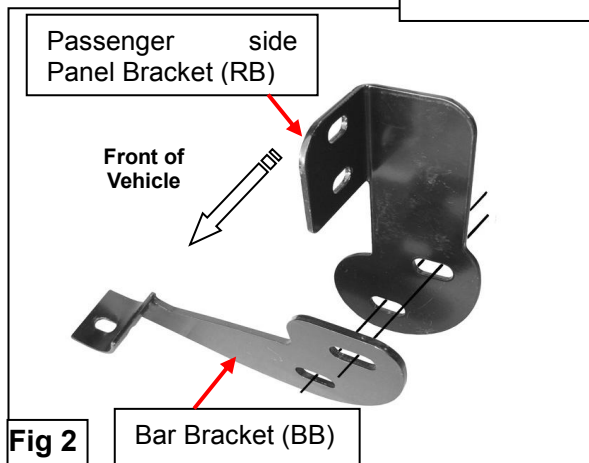

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!