

Installation Instructions for IB20EAD0

by APS Auto Parts Specialist Inc.


Application: For 2007-2017 Toyota Tundra Regular Cab
Estimated Time: 1 to 2 hours



Disclaimer: Instructions intended for persons aged 18+ please do not attempt without adult supervision. Instructions are not intended to replace professional installation. Damage from improper installation, misuse or modification to the product voids the manufacturer's warranty.

PARTS LIST:

Item	QTY	Description	Item	QTY	Description
#1	2	Running Board(use for left or right)	#7	8	M8 Lock Washers
#2	1	Driver/Left Front Mounting Bracket(DFM)	#8	8	8mm x 24mm OD x 2mm Flat Washers
#3	1	Passenger/Right Front Mounting Bracket(PFM)	#9	16	M6X1.0-20mm T-Bolts
#4	1	Driver/Left Rear Mounting Bracket(DRM)	#10	16	6mm x 22mm OD x 2mm Flat Washers
#5	1	Passenger/Right Rear Mounting Bracket(PRM)	#11	16	M6 Nylon Lock Nuts
#6	8	M8X1.25-20mm Hex Bolts			

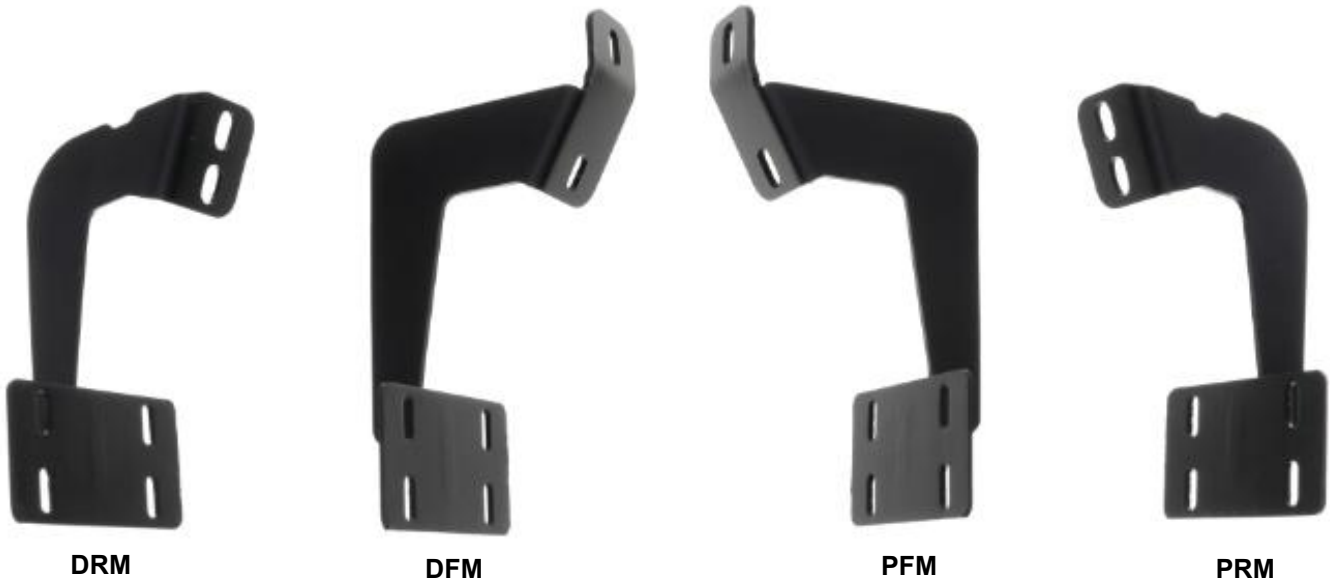


- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS RECOMMENDED.**
- Starting on the driver side front of the vehicle, remove the existing (2) factory bolts, (or plastic plugs), on the side panel located by the front tire opening, **(Figure 1)**. This will be the mounting location for the driver side front Mounting Bracket.
- Select the driver side Front Bracket, **(Figure 2)**. Attach the Bracket to the vehicle using the included (2) M8 x 30mm Hex Bolts, (2)M8 Lock Washers and (2) M8 Flat Washers, **(Figure 3)**. Do not tighten hardware at this time.
- Next, move to the last mounting location at the back of the cab. Select the driver side Rear Bracket,. Repeat **Steps 2 & 3** to install the rear Bracket, **(Figure 4)**.
- Select the Running Board. Slip (8)M6 T-Bolts into each bottom channel **(Figure 5)** Carefully position the Running Board onto the (2)Mounting Brackets. **IMPORTANT:** Do not slide the Running Board on the Brackets or damage to the finish may result. Attach the Running Board to the Mounting Brackets with (4) M6 T-bolts,(4) M6 flat washers and (4) M6 nylon lock nuts **(Figure 6)**. Do not tighten hardware.
- Level and adjust the Running Board properly and tighten all hardware.
- Repeat **Steps 2—6** for passenger side installation.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.


For Polished Finishes: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Board.

For black finishes: Mild soap may be used to clean the Running Board.

Driver Side Installation Pictured

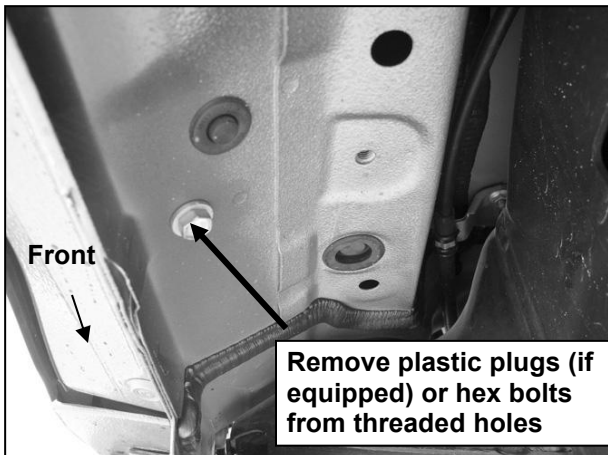

(Fig 1) Driver/Left Front Mounting Location Pictured

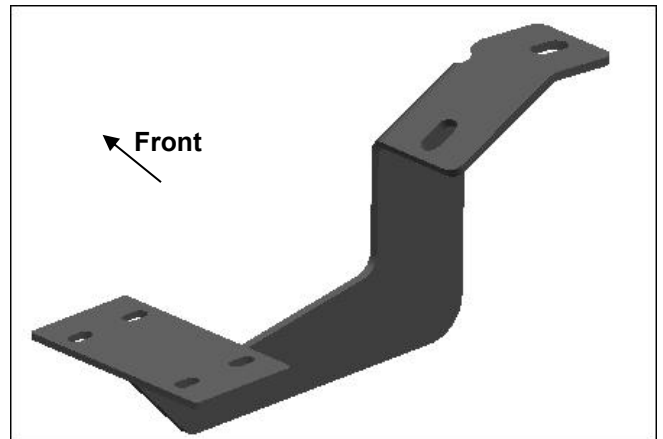

(Fig 2) Driver/Left Front Mounting Bracket



(Fig 3) Driver/Left Front Mounting Location Pictured



(Fig 4) Driver/Left Rear Bracket Pictured



- (4) M6 T-bolts
- (4) M6 Flat Washers
- (4) M6 Nylon Lock nuts

