

## Installation Instruction

**Part#: IB20EAJ1B**

**Application: For 07-12 Toyota Fj Cruiser**

Item	Part Name	QTY	Item	Part Name	QTY
1	Drive Side Bar	1	2	Passenger Side Bar	1
3	Front Brackets (Driver/Passenger)	2	4	Middle and Rear bracket(Driver/Passenger)	4
5	8-1.25mmx 40mm Hex Head Bolt	12	6	8mm Lock Washer	12
7	8mm Flat Washer	12	8	M6X1-25mm Square Hex Bolt	12
9	M6 Flat Washers	12	10	M6X1mm Nylon Lock Nuts	12



Front Bracket



Middle & Rear Bracket

Step	Installation
1	<b><u>REMOVE CONTENTS FROM BOX.VERIFY ALL PARTS ARE PRESENT.READ INSTRUCTIONS CAREFULLY .USE ILLUSTRATION TO PORPERLY IDENTIFY BARCKETS AND SIDEBRS.</u></b>
2	Starting from passenger side. Remove (6) existing bolts and set aside. And then remove the existing running board, if equipped. Install (1) front bracket and (2) middle/rear brackets with (6) M8 x 40mm Hex Head Bolts, (6) M8 Lock Washers, (6) M8 Flat Washers, leave loose. As shown on <b>Fig1. NOTE:</b> If vehicle does not come with existing running boards. Use existing bolts locate underneath the vehicle.
3	Attach Bar on to brackets using (12)M6X1-25mm Square Hex Bolt, (12) M6 Flat Washers and (12) M6 Nylon Lock Nuts,. Finger tighten. As shown on <b>Fig 2.</b>
4	Level Bar and then tighten all the fasteners.
5	Repeat Step 2- 4 on opposite side.

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

# Installation Instruction

Part#: IB20EAJ1B

Application: For 07-12 Toyota Fj Cruiser

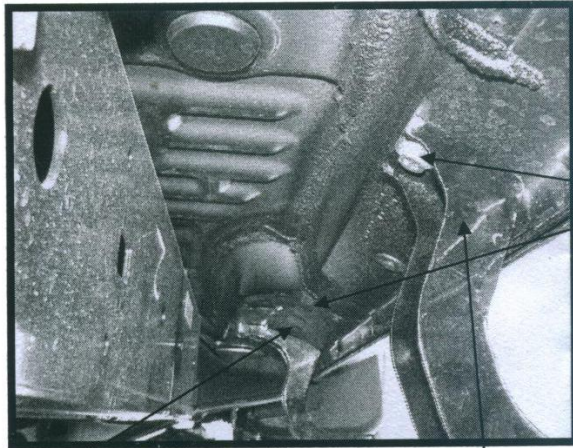


FIG. #1 PASSENGER  
SIDE SHOWN

M8 HARDWARE

FRONT BRACKET

MIDDLE & REAR  
BRACKET

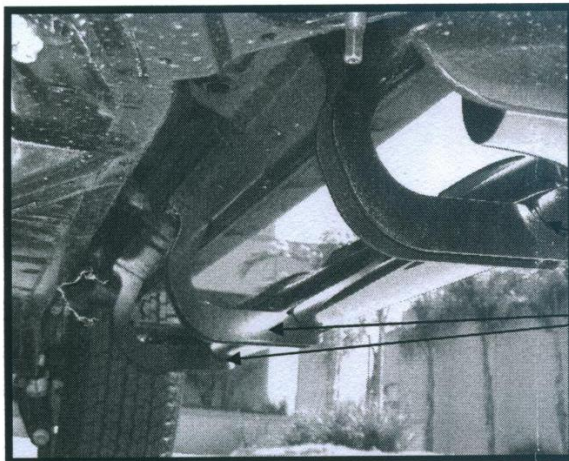


FIG. #2 DRIVER SIDE  
SHOWN

M6 Square Hex Bol

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!