


**Application: FOR 2010-2017 TOYOTA 4RUNNER LIMITED/ 2010-2013 TOYOTA 4RUNNER SR5/ EXCL. 2014-2017 SR5 & 2010-2017 TRAIL EDITION**

Item	Part Name	QTY	Item	Part Name	QTY
1	Driver side running board	1	6	8mm Lock Washers	12
2	Passenger side running board	1	7	M8 Flat Washers	12
3	Front Mounting Bracket (DFM/PFM)	2	8	M6 Square Head Bolt	12
4	Center & Rear Mounting Bracket (DCM/PCM)	4	9	M6 Flat Washers	12
5	8-1.25mm x 30mm HexBolts	12	10	M6 Nylon Lock Nuts	12

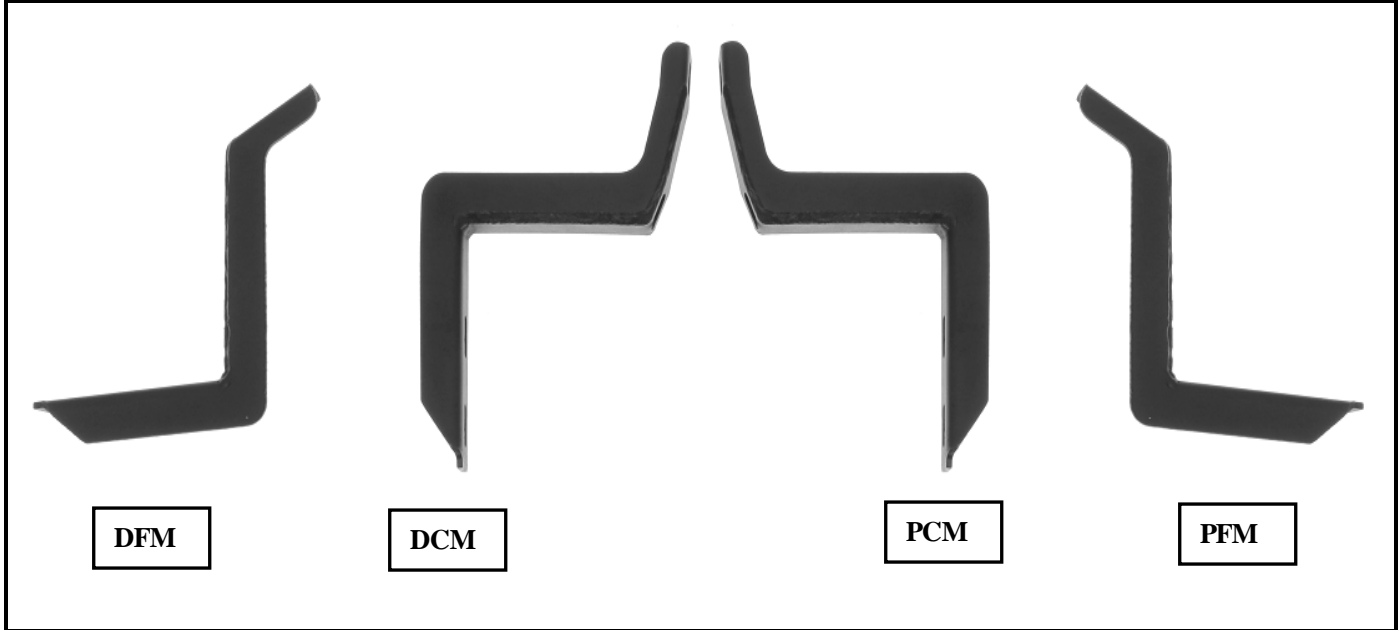

## Installation Procedure

Step	Installation Instruction
1	<b>REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.</b>
2	Start installation on the passenger side of the vehicle, remove the existing (2) factory bolts located by the front tire opening securing the factory rocker panel bracket to the vehicle, <b>(Figure 1)</b> . Select (1) Front Mounting Bracket. Hold the Front Bracket over the rocker panel bracket and line up the (2) mounting holes. Secure the brackets to the vehicle using the included longer (2) 8mmx30mm HEX Bolts, (2) 8mm Lock Washers and (2) M8 Flat Washers, <b>(Figure 2)</b> . Do not tighten hardware at this time.
3	The center and rear brackets are identical. Select (1) Center & Rear Bracket and repeat the procedure as described in <b>Step 2</b> to install it in the center mounting location, <b>(Figure 3)</b> . <b>NOTE:</b> Install (1) mounting bracket at a time. Do not tighten hardware at this time.
4	Repeat <b>Step 3</b> for rear Mounting Bracket installation.
5	Carefully unwrap the Running Board and select passenger side Board. Select (6) Square Head Bolt. Insert (3) Square Head Bolt into each channel on the bottom of the Running Board, <b>(Figure 4)</b> . Slide the Square Head Bolt forward or back to line up with the (3) previously installed Mounting Bracket, <b>(Figure 5)</b> . Hold the Running Board up to the vehicle at a slight angle and gently push it into position against the rocker panel, <b>(Figure 6)</b> . Line up the Square Head Bolt with the slots in the Brackets.

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

## iRunning Board Installation Instruction

**Application: FOR 2010-2017 TOYOTA 4RUNNER LIMITED/ 2010-2013 TOYOTA 4RUNNER SR5/ EXCL. 2014-2017 SR5 & 2010-2017 TRAIL EDITION**

6	Attach the Running Board to the Mounting Brackets with the included (4) M6 Square Head Bolt, (4) M6 Flat Washers and (4) M6 Nylon Lock Nuts, <b>(Figure 7 &amp; 8)</b> . Do not tighten at this time.
7	Level and adjust the Sidebar as desired and tighten all hardware. Repeat <b>Steps 2 - 6</b> for the driver side Running Board installation.
8	Do periodic inspections to the installation to make sure that all hardware is secure and tight the Running Board and tighten all hardware..
9	Repeat <b>Steps 2-8</b> for driver side Running Board installation.

**To protect your investment:** wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For Aluminum Alloy:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Board.


**For gloss black finishes:** Mild soap may be used to clean the Running Board Brackets.

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

# iRunning Board Installation Instruction

**Application: FOR 2010-2017 TOYOTA 4RUNNER LIMITED/ 2010-2013 TOYOTA 4RUNNER SR5/ EXCL. 2014-2017 SR5 & 2010-2017 TRAIL EDITION**

## Passenger Side Installation Pictured

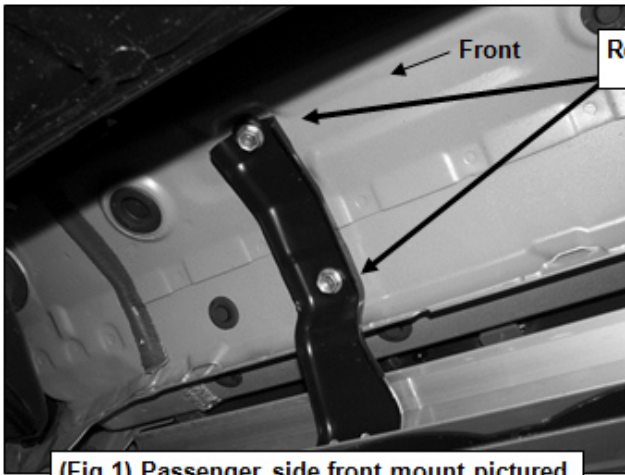

(Fig 1) Passenger side front mount pictured

Remove factory hex bolts

Install the Mounting Brackets one at a time over the factory rocker panel brackets


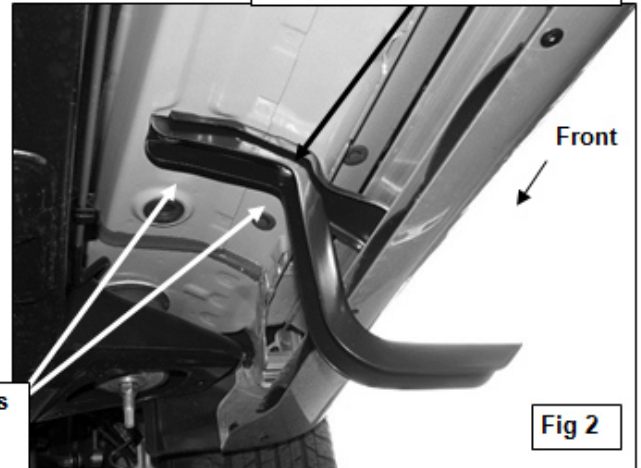


Fig 2

- (2) 8mm x 30mm Hex Bolts
- (2) 8mm Flat Washers
- (2) 8mm Lock Washers



(Fig 3) Passenger side rear bracket location pictured

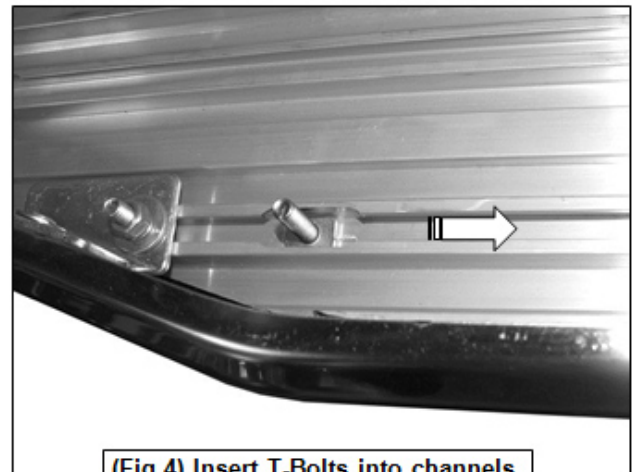



(Fig 4) Insert T-Bolts into channels on bottom of Running Board

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



# iRunning Board Installation Instruction

Application: FOR 2010-2017 TOYOTA 4RUNNER LIMITED/ 2010-2013 TOYOTA 4RUNNER SR5/ EXCL. 2014-2017 SR5 & 2010-2017 TRAIL EDITION

## Passenger Side Installation Pictured

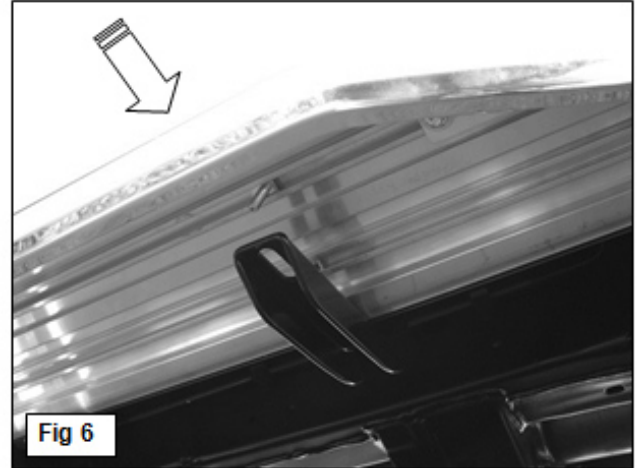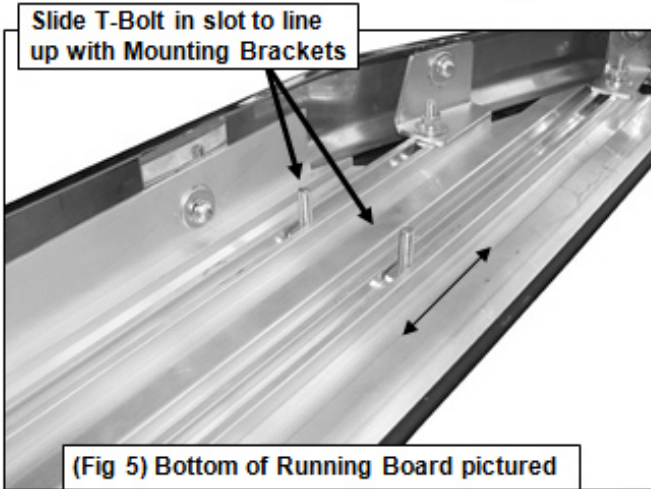

Tilt the Running Board up and gently push back into position against rocker panel. Line up T-Bolts with Brackets

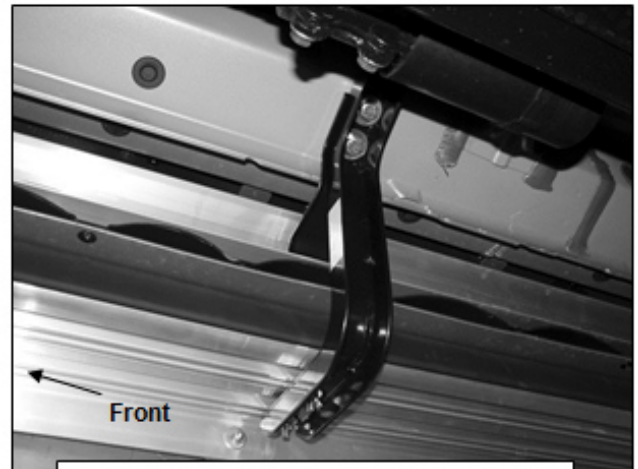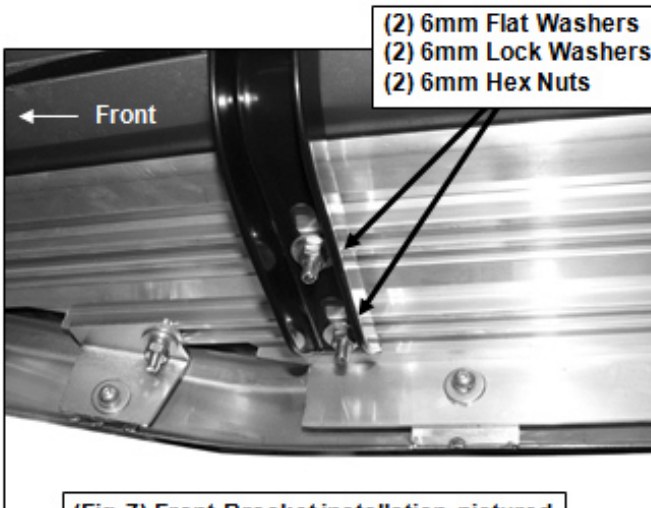

**\*Pictures are for reference only, actual bars may be a little different.**

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



# iRunning Board Installation Instruction

**Application: FOR 2010-2017 TOYOTA 4RUNNER LIMITED/ 2010-2013 TOYOTA 4RUNNER SR5/ EXCL. 2014-2017 SR5 & 2010-2017 TRAIL EDITION**



The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Discover other running boards and step bars on our website.