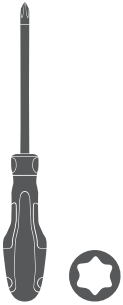


Parts List

1	License plate relocation bracket
4	Pan-head thread-forming screw, 16mm
4	Phillips-head thread-forming screw

Tools Required

Phillips Screwdriver	Torx bit, T20
-------------------------	---------------

**Level of Difficulty**

Easy

Product Image**Notes and Maintenance**

Before you begin installation, read all instructions thoroughly.


Proper tools will improve the quality of installation and reduce the time required.

For black finishes, mild soap may be used to clean the product.

Step 1

Locate and remove the 4 self-threading screws from the skid plate on the bull bar.

Place the license plate relocation bracket up to the bull bar skid plate. Secure the relocation bracket using the four provided 16mm pan-head thread-forming screws.

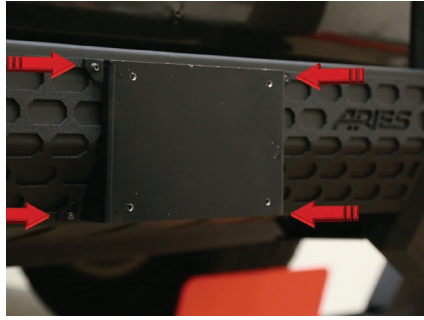

Step 2

Place the license plate up to the relocation bracket and attach using four Phillips-head thread-forming screws.



Step 3

Congratulations on the installation of your new ARIES AdvantEDGE™ bull bar license plate relocation bracket.

With the bracket installed, periodic inspections should be performed to ensure all mounting hardware remains tight.

To protect your investment, see the 'Notes and Maintenance' section on the first page of this instruction manual.

