



INSTALLATION INSTRUCTIONS


2010-14 Dodge Ram Crew / Mega 2500/3500 2/4WD

NOTE: (tow hooks will not be re-attached)

PART # P5056

PARTS LIST:

Qty	Description	Qty	Description
1	Grill Guard Bar	6	12mm x 30mm Hex Bolt
1	Driver/Left Mounting Bracket	12	12mm Flat washer
1	Passenger/Right Mounting Bracket	6	12mm Lock Washer
8	10mm x 60mm Hex Bolt	6	12mm Nut
16	10mm Flat Washers	2	8mm Nut clips
8	10mm Lock Washers	2	8mm hex bolts
1	Support flange	2	8mm Flat washers
8	10mm Nut	2	8mm Lock washers

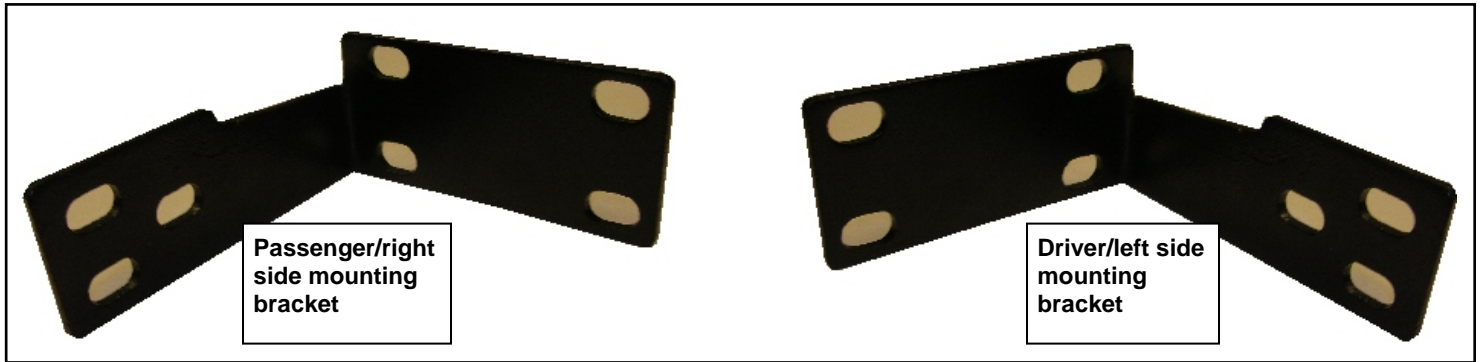




PROCEDURE:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
2. Start by Selecting your LED light (**Sold Separately**) mounting hardware & brackets, you will need to first attached the hardware to the support flange, (Example of LED light attached Fig 1) **NOTE: if you have your own LED light, LED Manufactures will have similar but different mounting styles or brackets, once you determine you mounting options attach it to the support flange as seen in (Fig1)**

3. With the LED light attached to the support flange select the (2) 8mm nut clips place each nut clip into the slotted holes on either side of the support flange, as seen in **(Fig 2)** with the support flange prepare you will need to lay the grill guard face down to install the support flange **NOTE:** (it is recommended to lay out some of the cardboard your grill guard came in or a blanket to protect the grill guard finish). place the grill guard face down with this done place the support flange with the LED attached into the Center flange attach each side of the support flange to the inner brackets inside the center flange of the grill guard with (2) 8mm hex bolts, (2) 8mm flat washers, & (2) 8mm lock washers as seen in **(Fig 3)** Snug but do not tighten at this time.
4. Next proceed with your install by removing the factory tow hook of the vehicle Passenger side (Note: tow hook will not be reattached), attach the mounting bracket in place of the tow hook and secure the mount bracket with the supplied (4) 10mm x 60mm hex bolt, (8) 10mm flat washers (4) 10mm lock washers (4) 10mm nut **(Fig 4)** shows mount bracket attached. Snug but do not tighten hardware at this time. Repeat this step for the driver/Left side installation.
5. With help begin to install Grille Guard, move the Passenger/Right side and Driver/Left side Mounting Brackets in as far as possible, and (loosen hardware slightly if necessary). Position the Grille Guard up to the Outer side of the Passenger/Right side Mounting Bracket and line up the mounting holes in the Mounting Bracket with the holes in the Grille Guard, bolt together with the included (3) 12mm x 30mm Hex bolts (6) 12mm flat Washer, (3) 12mm lock washers and (3) 12mm Hex Nut, Repeat this step for the Driver/left side. **(Fig 5)** shows grill guard attached to mount brackets, Snug but do not tighten hardware at this time.
6. Adjust the Grille Guard as required for alignment. Tighten all mounting hardware, your install of the grill guard is now completed.
7. **For the Led lights wiring please refer to the manufactures installation.**
8. Do periodic inspections to the installation to make sure all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

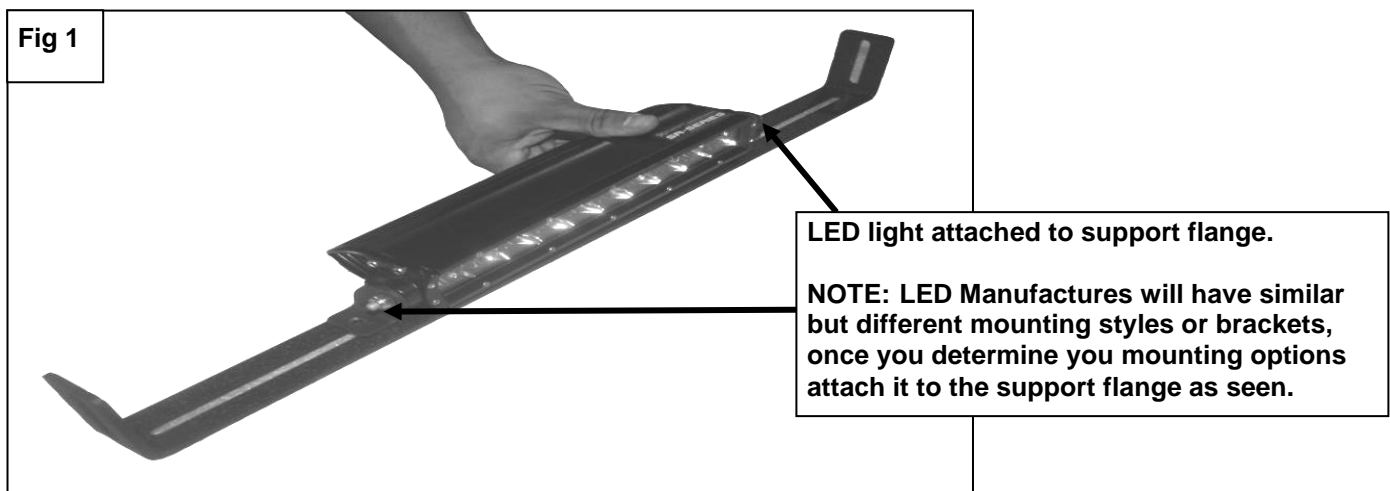

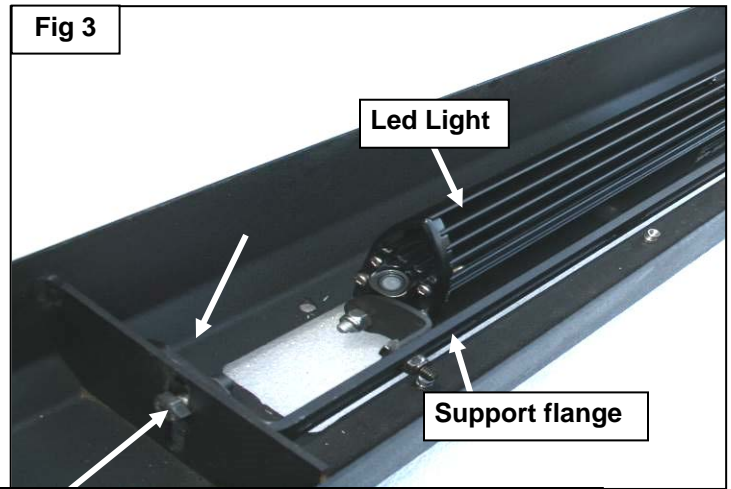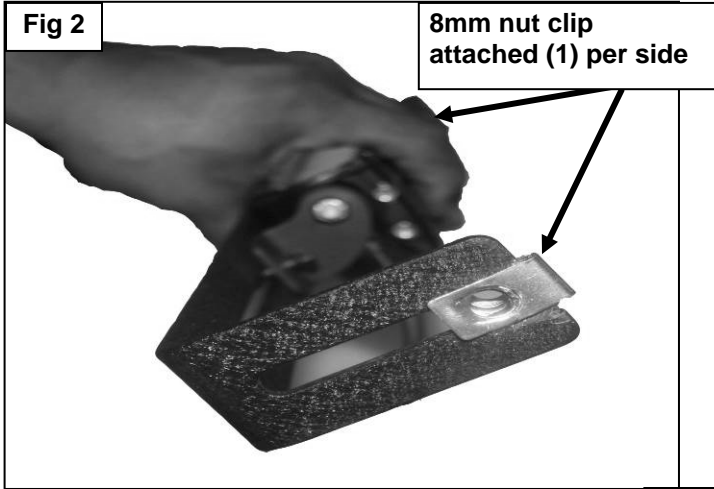

Secure support flange into center flange with
 (1) 8mm Hex head bolt
 (1) 8mm Flat Washers
 (1) 8mm Lock washer
 Per side.

