











INSTALLATION INSTRUCTION
For Ford Expedition 97-13
ITEM NO:4503

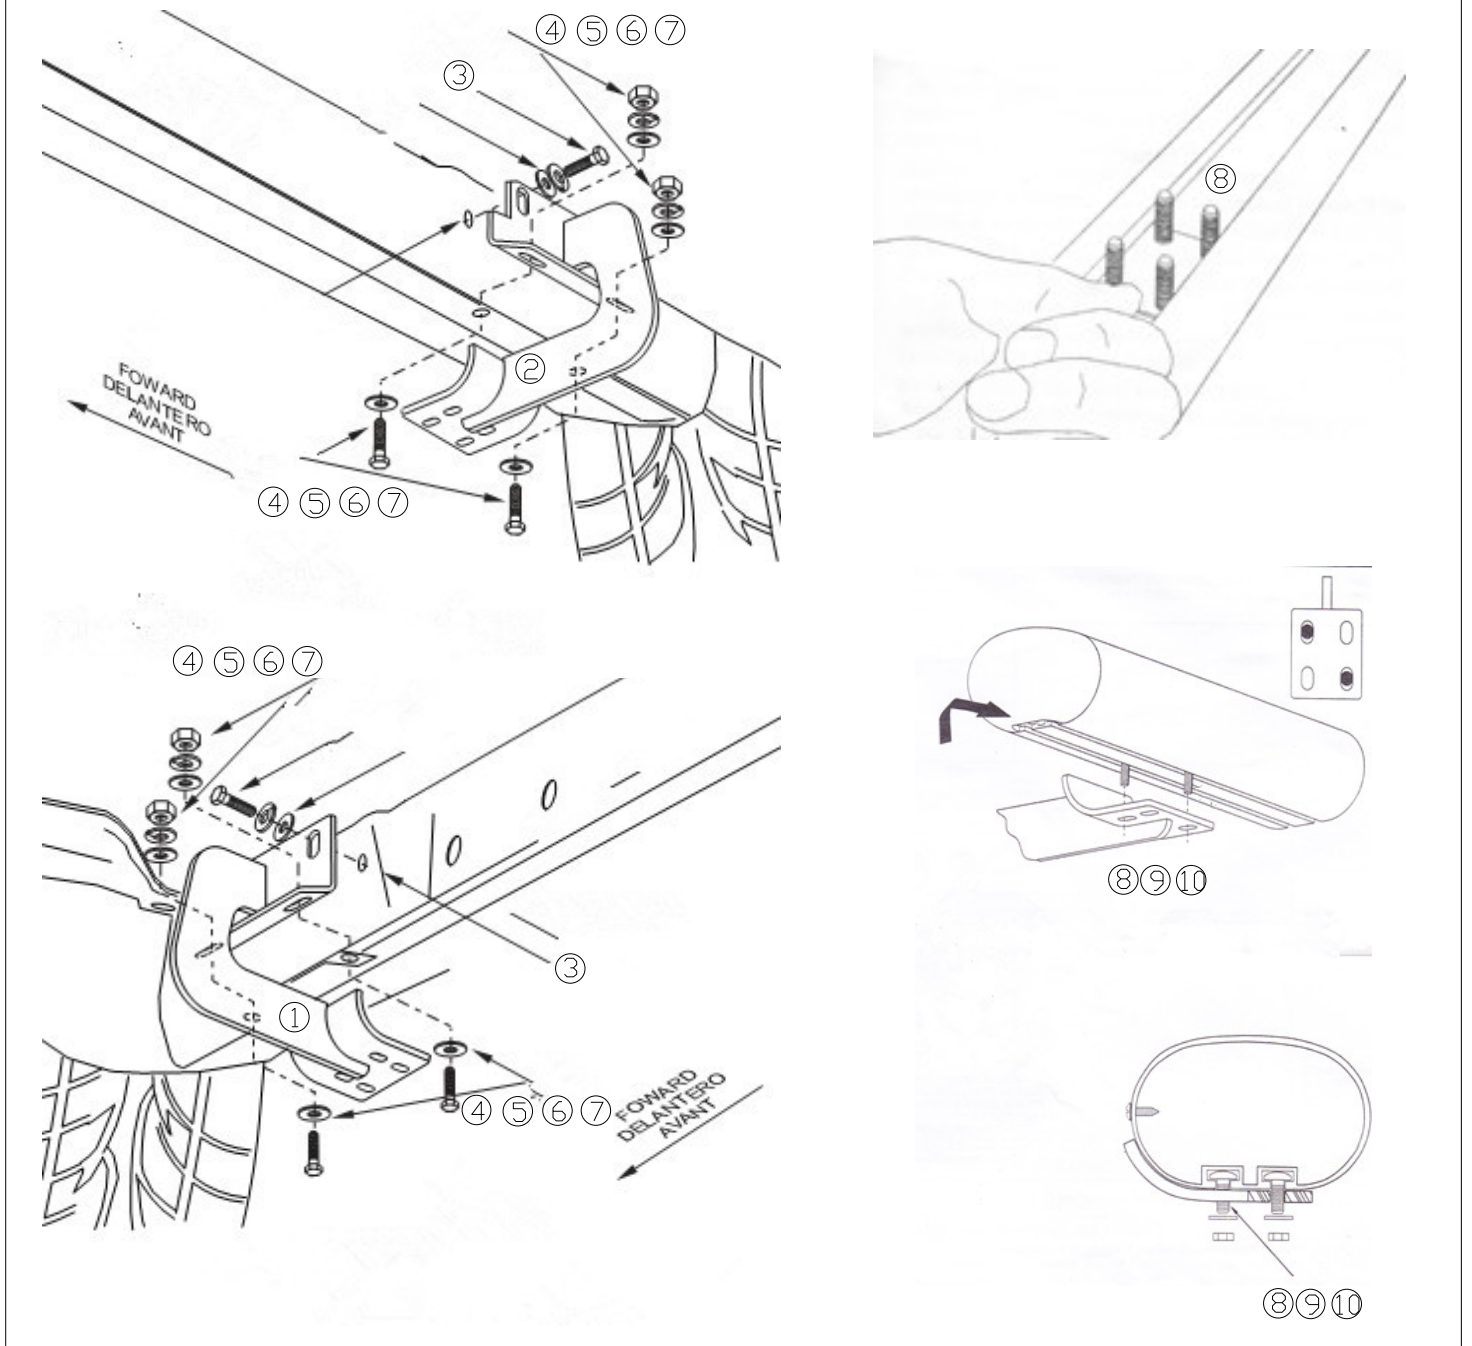
ATTENTION

1. Please read this installation instruction before installing this part.
When install it, please pay attention to protecting your vehicles.
2. When you use it, please check this parts at a fix time-lapse, such as one month or two month.

PARTS LIST

No	Name	Photo	Qty	Remarks	No	Name	Photo	Qty	Remarks
①	Mount Bracket1		2	lateral symmetry	⑧	"T"Bolt		4	
②	Mount Bracket2		2	lateral symmetry	⑨	flat washer		16	M6
③	M8 Hex Bolt		8	M8*30	⑩	LOCK NUT		16	M6
④	M8 Hex Bolt		8	M8*25					
⑤	Flat Washer		16	M8					
⑥	Lock Washer		8	M8					
⑦	Hex Nut		8	M8					

Installation Diagram



INSTALLATION STEPS

STEP 1: Check the parts in the box carefully if match above list .

STEP 2: Pls prepare the tools for installation, follow as: 10-12wrench, 14-17 wrench .

STEP 3: Put the mount bracket into the girder of the car, and tighten it with ③④ .

STEP 4: Install the Side Bar to the mount bracket, and tighten it with ⑧ .

STEP 5: Installation is finished.

Learn more about other running boards and step bars by [Aries](#) on our website.