



INSTALLATION INSTRUCTIONS

2005-13 TOYOTA TACOMA EXT CAB SHORT BED 2/4WD
SIDE BAR PART #**202008/202008-2**


PARTS LIST

- | | |
|---------------------------------|--|
| (2) SIDE TUBES WITH STEPS | (8) 8MM x 30MM 1.25 PITCH HEX HEAD BOLTS |
| (2) FRONT MOUNT BRACKETS | (8) 8MM FLAT WASHERS |
| (2) REAR MOUNT BRACKETS | (8) 8MM LOCK WASHERS |
| (8) 3/8" SAE FLAT WASHERS | |
| (8) 3/8" x 1" BUTTON HEAD BOLTS | |

PROCEDURE

1. Begin installation by working on driver side of the vehicle.
2. Remove plastic plugs on rocker panel to locate mounting holes for brackets. Attach and secure Front and Rear Mount Bracket to existing holes using 8MM bolts, 8MM flat washers, and 8MM lock washers. For each outer hole and hand tighten.
4. Attach Side Tube to Front, and Rear Brackets using 3/8" x 1" bolts, 3/8" SAE flat washers. Hand tighten. Adjust Side Tube so that it is level and centered, and tighten all bolts to complete the driver-side assembly.
5. Repeat process for passenger side of vehicle to complete installation.

DRIVER SIDE BRACKETS SHOWN:

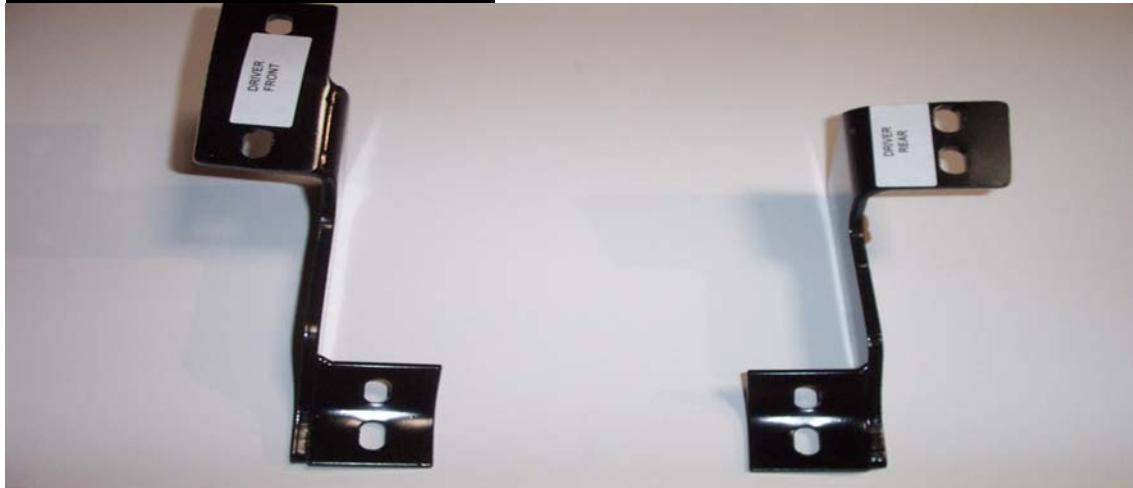

NOTE: IT IS ADVISABLE TO RE-CHECK ALL FASTENERS FOR TIGHTNESS AFTER ONE WEEK.