



INSTALLATION INSTRUCTIONS

2003-10 GMC H2 / SUT 4WD (REQUIRES FACTORY ROCKER BAR)

PART # 204075/204075-2

PARTS LIST

(2) SIDE TUBES WITH STEPS (16)
7/16" x 1 1/4" HEX HEAD BOLTS

(32) 7/16" FLAT WASHERS
(16) 7/16" HEX LOCK NUTS

PROCEDURE

1. Begin installation by working on driver side of the vehicle (refer to Figures 1 and 2).
2. Line up holes of the driver-side Side Bar brackets to the back side of the vehicles rocker panel protection brackets as shown in Figure 2, and secure to each bracket using (2) 7/16" x 1 1/4" bolts, (4) 7/16" flat washers, and (2) 7/16" lock nuts. Hand tighten.
3. Adjust Side Bar so that it is level and centered and tighten the two inner brackets first, and then the two outer brackets to complete the driver-side assembly.
4. Repeat process for passenger side of vehicle to complete installation.

FIGURE 1


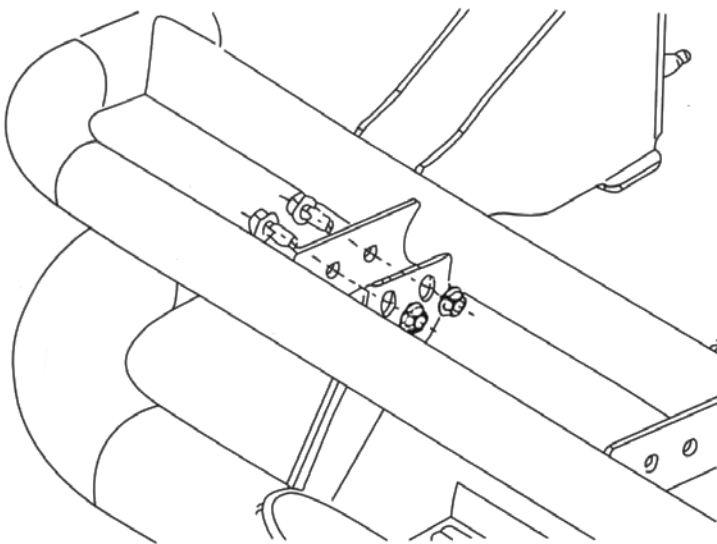


FIGURE 2

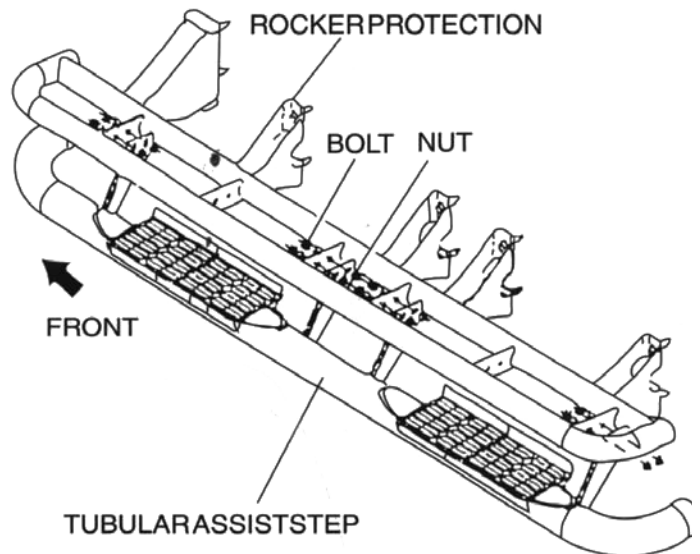

DRIVER'S SIDE SHOWN
PASSENGER SIDE OPPOSITE