



INSTALLATION INSTRUCTIONS

206005 / 206005-2

2005-10 HONDA RIDGELINE

PARTS LIST:

Qty	Description	Qty	Description
1	Driver/Left Side Bar	12	10mm x 25mm Hex Bolt
1	Passenger/Right Side Bar	12	10mm Flat Washer
1	Driver/Left Front Mounting Bracket	12	10mm Lock Washer
1	Passenger/Right Front Mounting Bracket	20	8mm x 25mm Hex Bolt
1	Driver/Left Middle Mounting Bracket	20	8mm x Flat Washer
1	Passenger/ Middle Mounting Bracket	20	8mm x Lock Washer
1	Driver/Left Rear Mounting Bracket		
1	Passenger/ Rear Mounting Bracket		

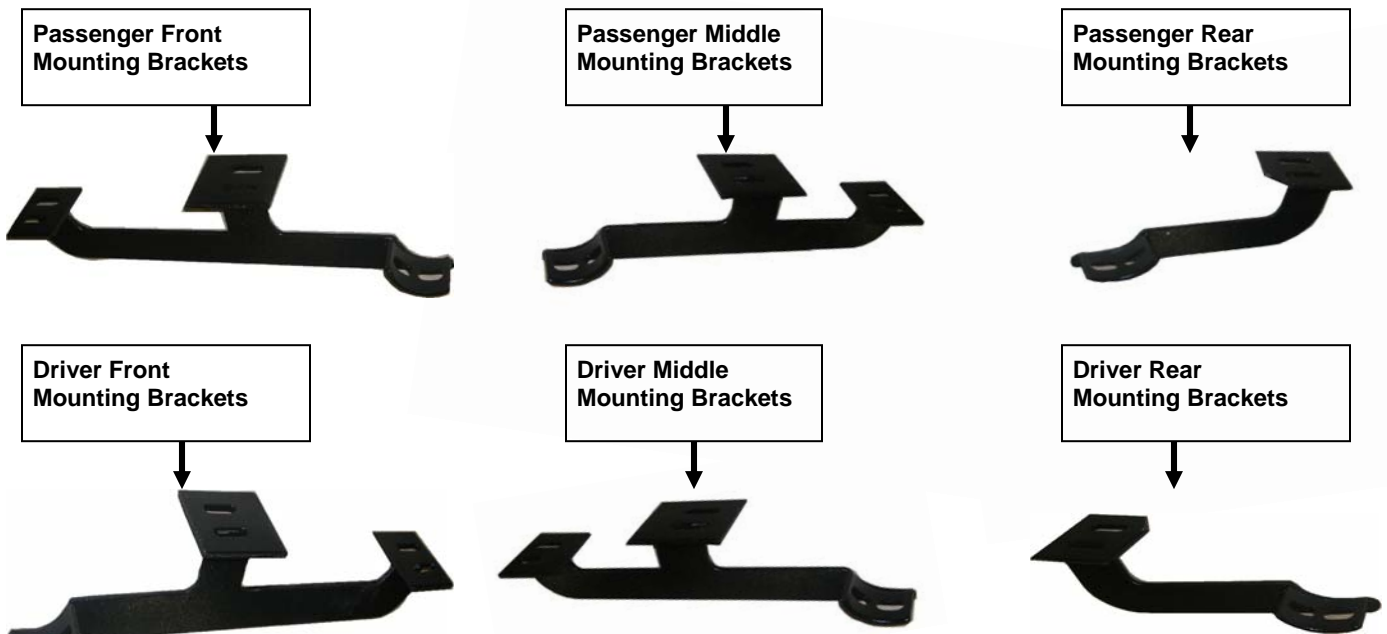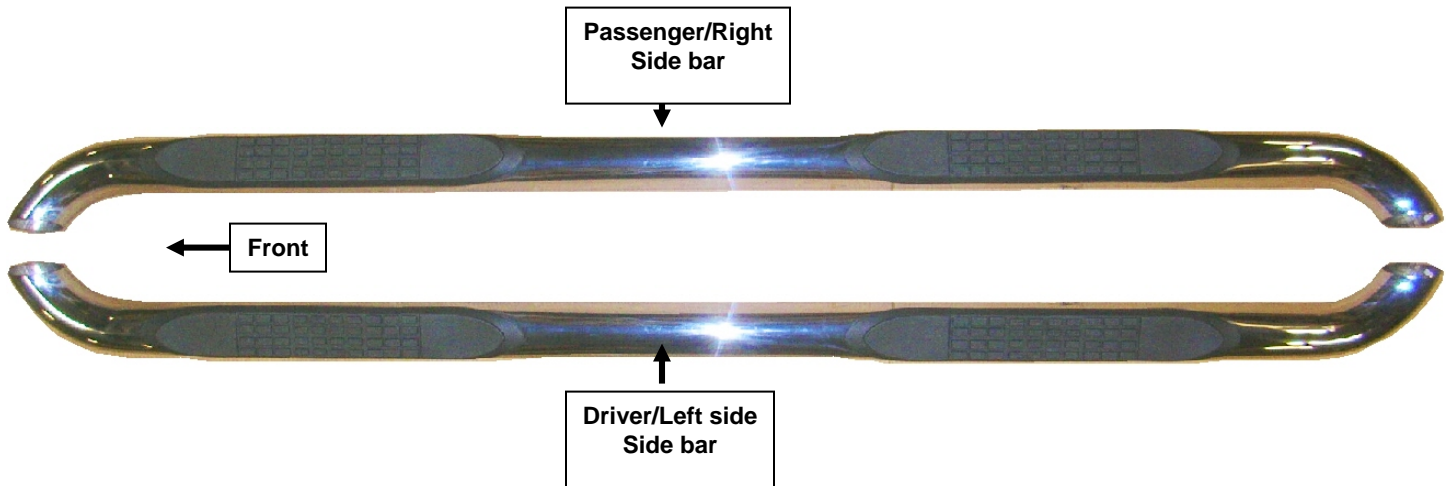

PROCEDURE:

1. **REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
2. Starting with the Passenger/Right side, Proceed with your install by locating the factory mounting holes underneath Vehicle (**Fig 1**) shows location of mounting holes, **note:** on some vehicles you will have to remove the plastic push pins cover holes. Select the Passenger/Right side front mounting bracket from the list above, and attach to Vehicle with the supplied (4) 8mm Hex bolts (4) 8mm flat washers (4) 8mm lock washers (**Fig 1A**) shows bracket attached. Snug but do not tighten hardware at this time.
3. Locating the factory mounting holes underneath Vehicle (**Fig 2**) shows location of mounting holes **note:** on some vehicles you will have to remove the plastic push pins cover holes. Select the Passenger/Right side middle mounting bracket from the parts list above, and attach to Vehicle with the supplied hardware (4) 8mm Hex bolts (4) 8mm flat washers (4) 8mm lock washers (**Fig 2A**) shows bracket attached. Snug but do not tighten hardware at this time.
4. Locating the factory mounting holes underneath Vehicle (**Fig 3**) shows location of mounting holes **note:** on some vehicles you will have to remove the plastic push pins cover holes. Select the Passenger/Right side rear mounting bracket from the parts list above, and attach to Vehicle with the supplied hardware (4) 8mm Hex bolts (4) 8mm flat washers (4) 8mm lock washers (**Fig 3A**) shows bracket attached. Snug but do not tighten hardware at this time
5. With the brackets attached select the Passenger/Right sidebar and install to brackets with the supplied hardware (6) 10mm x 25mm Hex bolts, (6) 10mm flat washers (6) 10mm lock washers (**Fig 4**) shows direction of brackets to sidebar. Snug but do not tighten hardware at this time.
6. Level and align Sidebar properly; then tighten all hardware at this time.
7. Repeat steps 2-5 for driver/left Sidebar.
8. Do periodic inspections to the installation to make sure all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.

PASSENGER SIDE INSTALLATION PICTURED

