

## INSTALLATION INSTRUCTION

ITEM NO:M4515









APPLICATION:For Toyota Tundra Double Cab/Crew Max 07-13

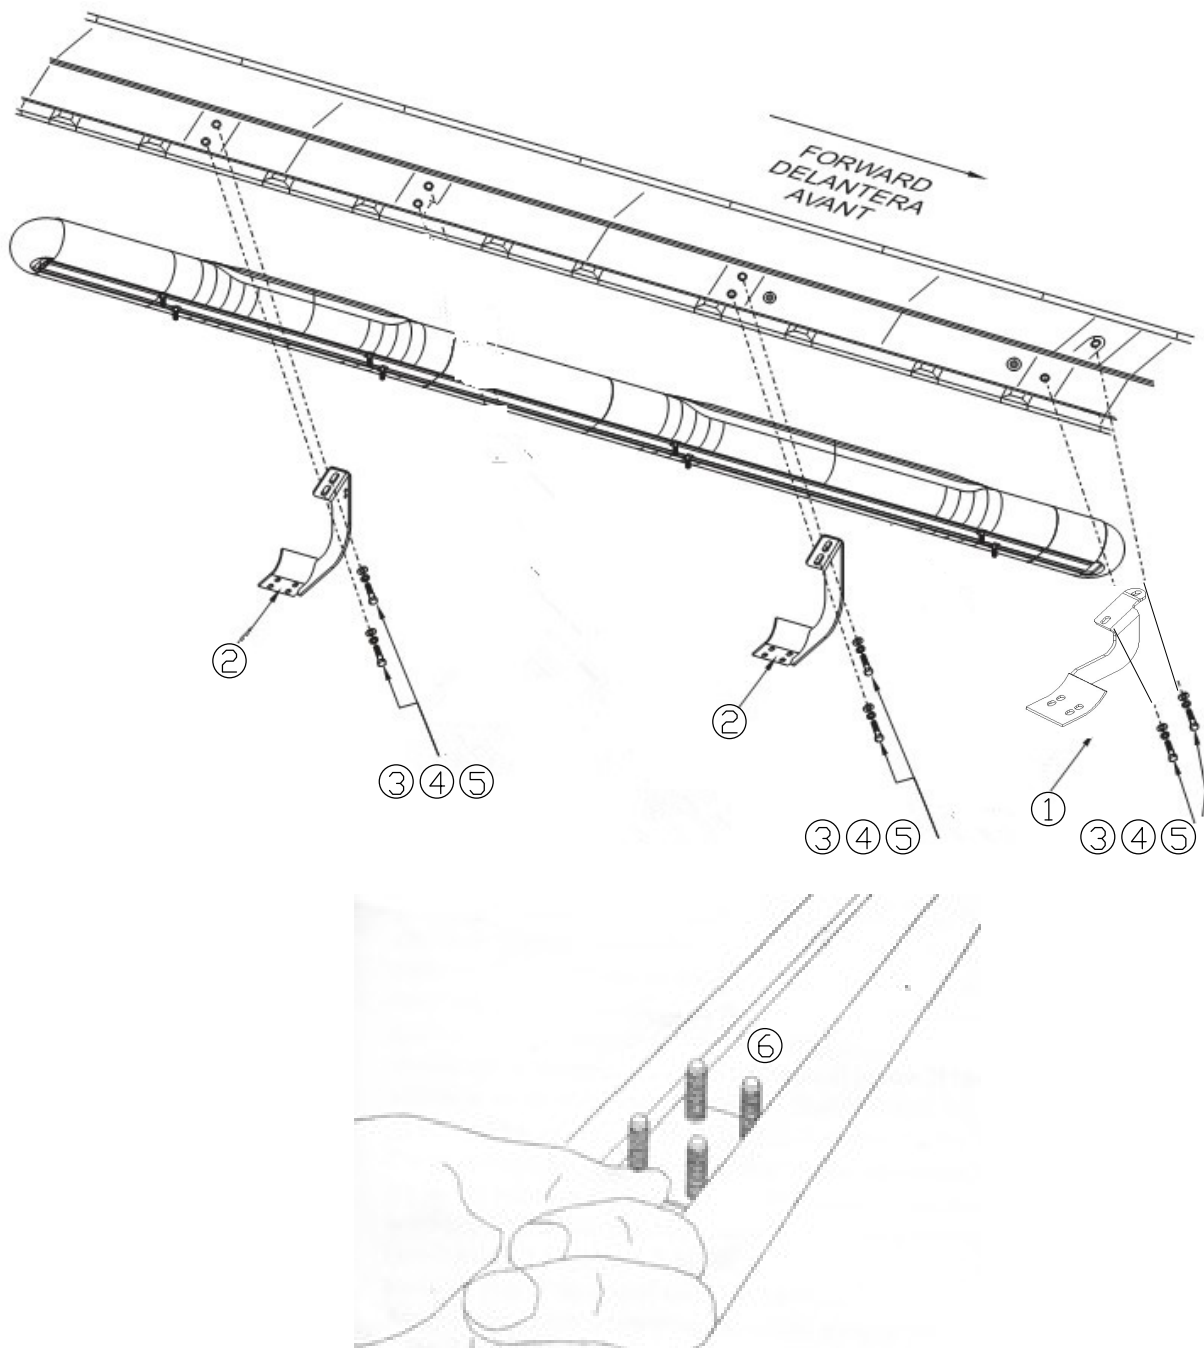
### ATTENTION

1. Please read this installation instruction before installing this part.  
When install it, please pay attention to protecting your vehicles.

2. When you use it, please check this parts at a fix time-lapse, such as one month or two month.

### PARTS LIST

No	Name	Photo	Qty	Remarks	No	Name	Photo	Qty	Remarks
①	Mount bracket		2	Lateral symmetry	⑦	Flat washer		24	M6
②	Mount bracket		4	Lateral symmetry	⑧	LOCK NUT		24	M6
③	Hex Bolt		12	M8*30					
④	Lock washer		12	M8					
⑤	Flat washer		12	M8					
⑥	"T" Bolt		6						



### INSTALLATION STEPS

STEP 1: Check the parts in the box carefully if match above list .

STEP 2: Pls prepare the tools for installation, follow as: 8-10、12-14 wrench.

STEP 3: Put the mount bracket into the girder of the car, and tighten it with the ③④⑤.

STEP 4: Install the Side Step on the mount bracket , and tighten it with ⑥⑦⑧ .

STEP 5: Installation is finished.

[View other side steps and nerf bars made by Aries on our website.](#)