


**INSTALLATION INSTRUCTIONS**  
**GRILL GUARD**  
**2004-10 CHEVY COLORADO / GMC CANYON 2WD & 4WD**  
**PART # 4080 / 4080-2**

**PARTS LIST:**

Qty	Description	Qty	Description
1	Grill Guard	16	12mm Flat Washers
1	Driver/Left mounting bracket	8	12mm Hex Nuts
1	Passenger/Right mounting bracket	2	10mm x 30mm Button head bolts
1	Driver/Left brace bracket	4	10mm Lock Washers
1	Passenger/Right brace bracket	8	10mm Flat Washers
4	12mm x 100mm Hex Bolts	4	10mm Hex Nuts
4	12mm x 40mm Hex Bolts	2	10mm x 40mm Hex Bolts
8	12mm Lock Washers		

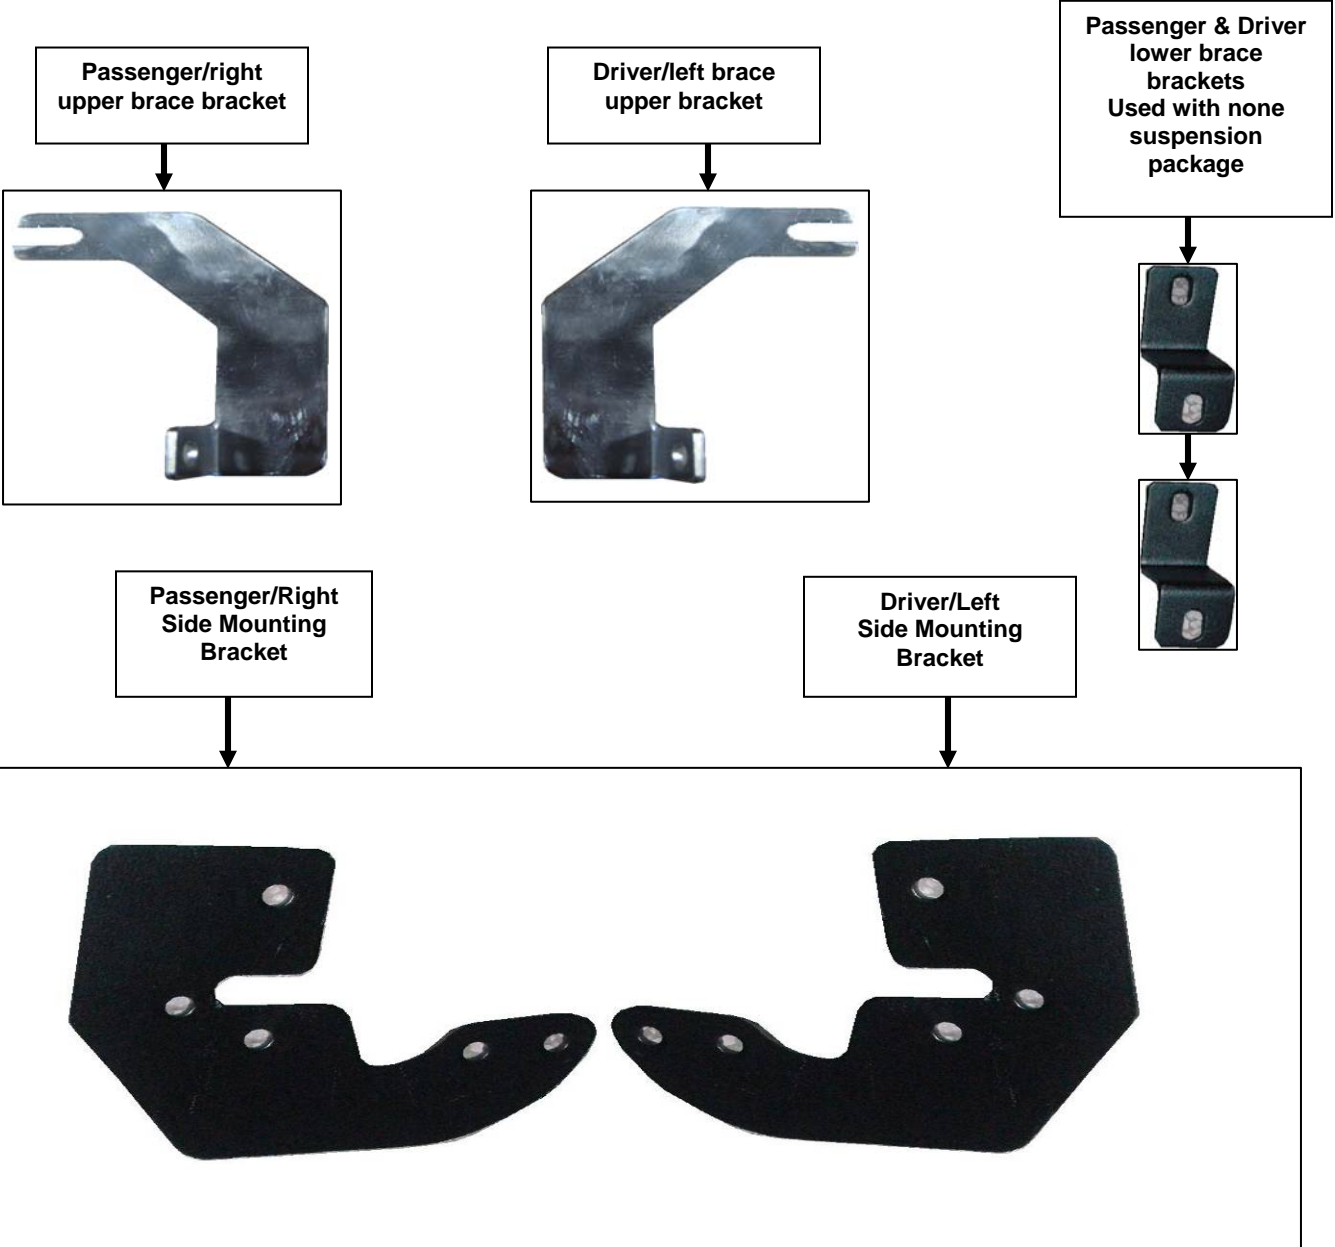


## PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. CUTTING IS REQUIRED. ASSISTANCE IS RECOMMENDED.**
2. Start by removing plastic lower valance from the lower bumper remove the two pushpins one on each side of the fender well and using a flat tip screwdriver, pry the tabs out from the valance and remove. **NOTE:** If the lower valance is to be installed, it will need to be trimmed where it interferes with the Grill Guard brackets.
3. Once plastic valance is removed, locate and remove the plastic splash guard.
4. **NOTE:** Depending on the model of truck, **(Z71 or Offroad Package)** your vehicle maybe equipped with a metal cross bar. If this is the case you will need to remove it as well **(Fig 1)**. This will not be reattached after mount brackets are installed. Select the Driver/left side mounting brackets from the list of parts above. Position Mounting Bracket to the inside of the frame rail **(Fig 2)** showing mounting holes in frame and insert (2) 12mm x 100mm Hex Bolts, (2) 12mm flat washers, (2) 12mm Flat Washers, (2) 12mm Lock Washers and (2) 12mm Hex Nuts as shown in **(Fig 2A)** Snug but do not tighten hardware.
5. **For vehicles with out Z71, Offroad package,** Select the Driver/left side mounting brackets from the list of parts above, place Mounting Bracket to the inside of the frame and Small Mounting Bracket to the outside of the frame. Line up upper holes on the brackets with holes on the frame and secure them together with the included (1)12mm x 100mm hex bolt, (1) 12mm nut, (2) 12mm flat washers. Line up bottom holes on the Brackets and secure them together with included (1) 10mm x 40mm hex bolt, (1) 10mm nut, and (2) 10mm flat washers **(Fig 3)**. shows Driver/Left side mounting bracket attached
6. Select the driver/left side upper brace bracket from the list of parts above, located between the grill and the top of the factory bumper is the bumpers mounting bolt **(Fig 4)** shows location of bolts, loosen just enough to slip the bracket between the bolt, Snug but do not tighten hardware.
7. Repeat steps 2-6 for Passenger/right side of vehicle. Snug but do not tighten hardware.
8. With help, position the Grill guard to the lower mounting brackets, and secure using the included (4) 12mm x 40mm hex bolts, (4) 12mm lock washers, (8) 12mm flat washers and (4) 12mm nuts, **(Fig 5 shows location of bolts)**. Once done secure the top upper brace brackets with the (2) 10mm Button head bolts, (4) 10mm flat washers, (2) 10mm lock washers and (2) 10mm nuts **(Fig 5A)** shows location of bolts attached to guard, Level and adjust the Grill guard and tighten all hardware.
9. Hold the splash guard up to the mounting points. Mark the splash guard where the mount brackets interfere with the Mounting Brackets double check the location marked to cut, when satisfied with your marks trim off the access plastic with a utility knife **(Fig 6)** shows area to trim off.
10. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment,** wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.


**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Grill Guard.

**For gloss black finishes:** Mild soap may be used to clean the Grill Guard.

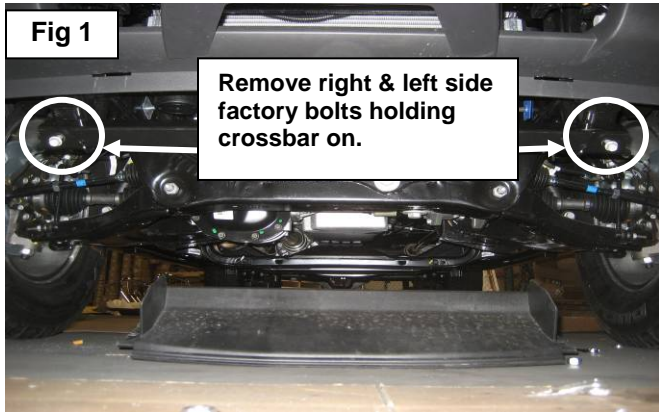


**Fig 1**

Remove right & left side factory bolts holding crossbar on.

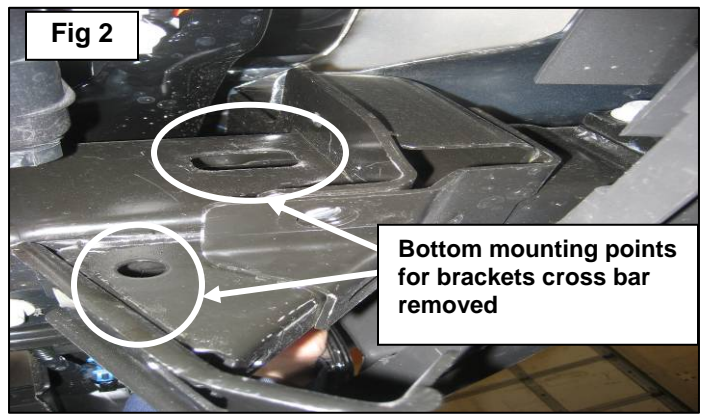


**Fig 2**

Bottom mounting points for brackets cross bar removed

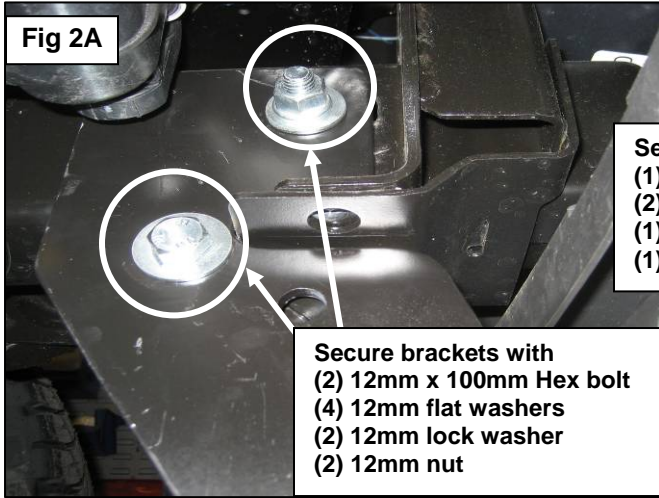

**Fig 2A**


Secure brackets with  
 (2) 12mm x 100mm Hex bolt  
 (4) 12mm flat washers  
 (2) 12mm lock washer  
 (2) 12mm nut

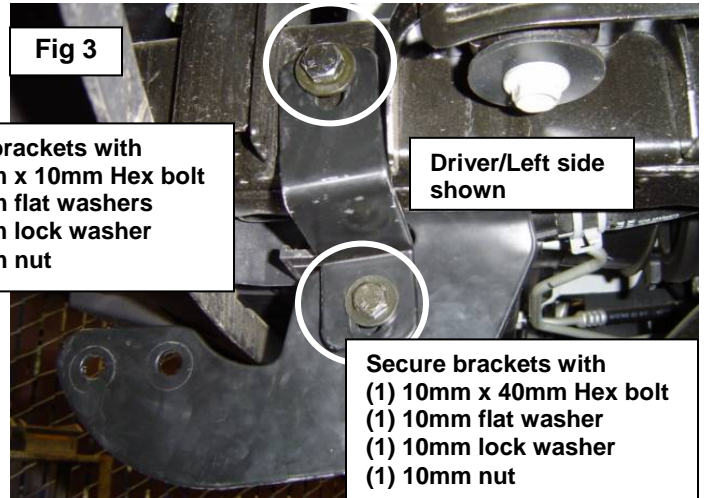

**Fig 3**


Driver/Left side shown

Secure brackets with  
 (1) 10mm x 40mm Hex bolt  
 (1) 10mm flat washer  
 (1) 10mm lock washer  
 (1) 10mm nut

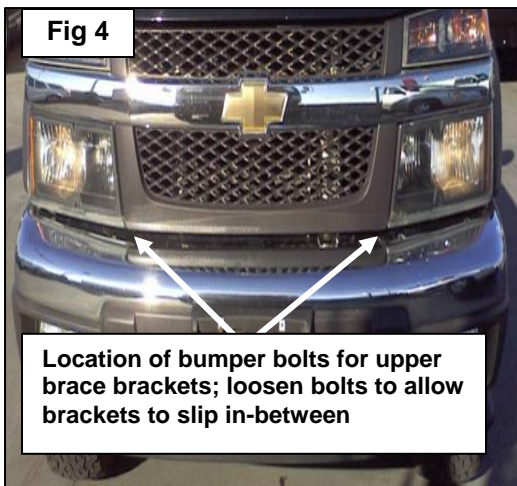

**Fig 4**


Location of bumper bolts for upper brace brackets; loosen bolts to allow brackets to slip in-between

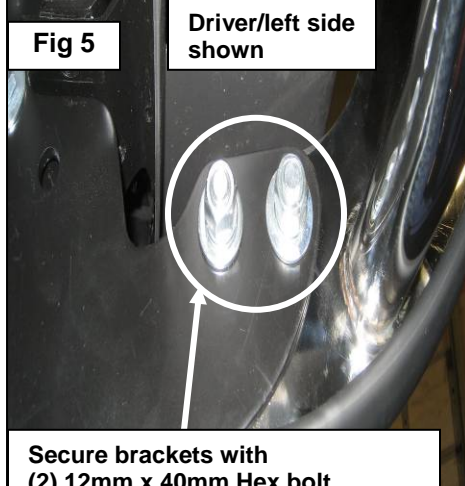

**Fig 5**

Driver/left side shown


Secure brackets with  
 (2) 12mm x 40mm Hex bolt  
 (4) 12mm flat washers  
 (2) 12mm lock washer  
 (2) 12mm nut

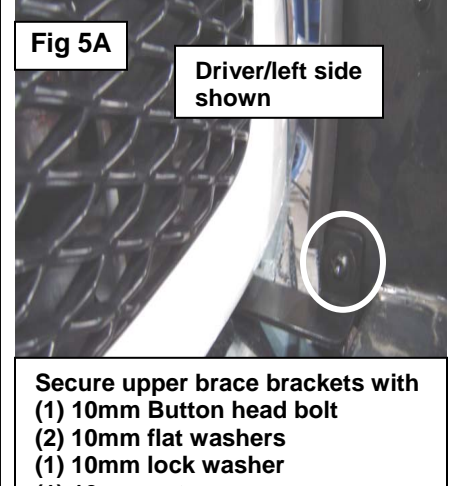

**Fig 5A**

Driver/left side shown

Secure upper brace brackets with  
 (1) 10mm Button head bolt  
 (2) 10mm flat washers  
 (1) 10mm lock washer  
 (1) 10mm nut

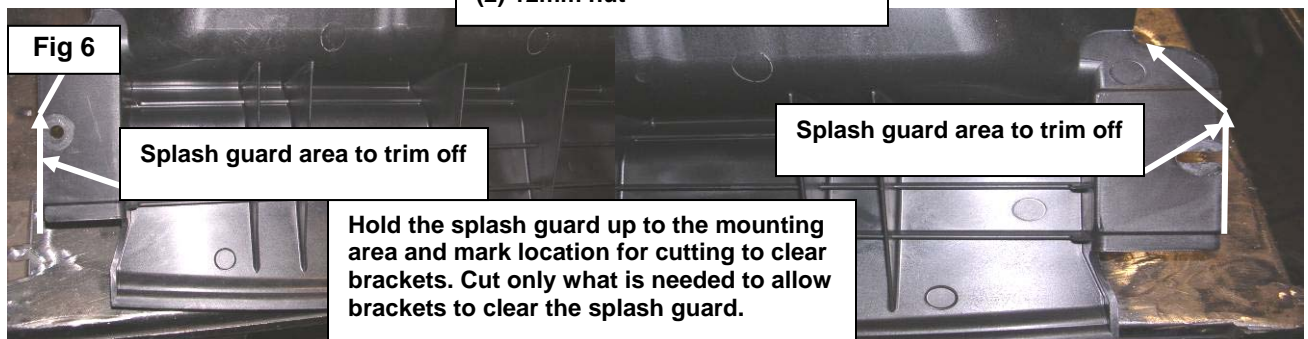

**Fig 6**

Splash guard area to trim off

Splash guard area to trim off

Hold the splash guard up to the mounting area and mark location for cutting to clear brackets. Cut only what is needed to allow brackets to clear the splash guard.