




SPBASE20MM

**Package Contents:**

(1) **SPBASE20MM** - 90mm Windshield Suction Base with Metal 20mm Ball Head

**1** Attach mount to windshield and engage suction lock lever.

**2** Attach 20mm-compatible pedestal (including Arkon Heavy-Duty Series). Loosen knob to remove existing base, then tighten knob to secure.

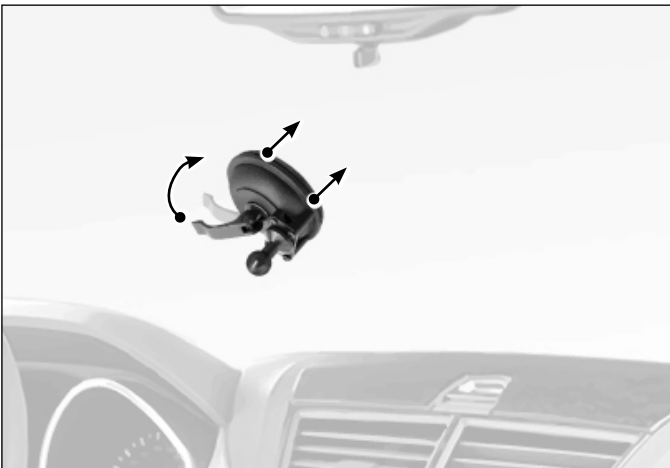

**Safety Precautions**

Arkon is not responsible for any damages to your vehicle, your device, or yourself due to the installation or use of this product.

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

**ARKON**  
RESOURCES INC.

*The Mobile Mounting Specialists™*