




**SAFETY WARNINGS**




**DO NOT USE FOR FUELS OR SOLVENTS**

**KEEP AWAY FROM OPEN FLAMES  
OR EXCESSIVE HEAT**

**FOR TIGHT APPLICATIONS  
USE THE SHORT #ATF 103**

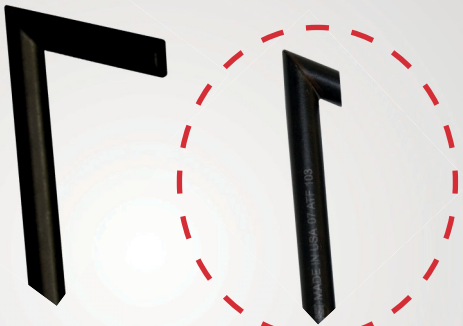

**PROPER INSTALLATION**

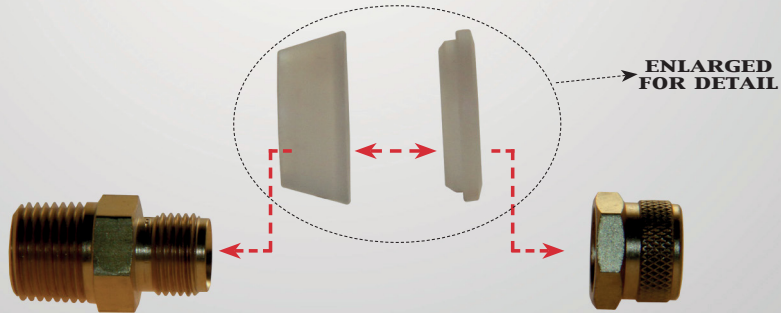

**ONLY NECESSARY IF WHITE PLASTIC FERRULES SHOULD FALL OUT**



**ASSENMACHER  
SPECIALTY TOOLS**

**AST DRIVE LINE FILLER SYSTEM & ADAPTERS**




AST# **ATF 108V**  
**VOLVO 5/16 x 24**



AST# **ATFTOY118**  
**TOYOTA**  
**18 x 1.5**




AST# **ATF 102**  
**BMW, HONDA, NISSAN &**  
**GENERAL USE. IDEAL FOR**  
**HONDA SUV DIFFERENTIAL FILL**

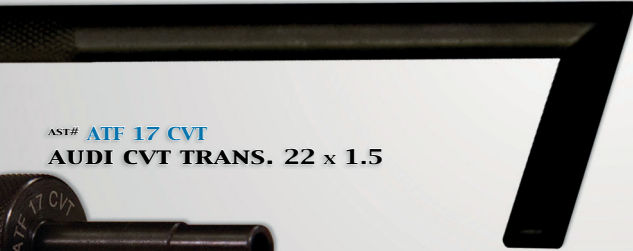

AST# **ATF 17 CVT**  
**AUDI CVT TRANS. 22 x 1.5**



AST# **ATF 16 DSG**  
**VW/AUDI DSG TRANS. 24 x 1.5**

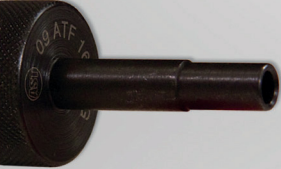

AST# **ATF 104**  
**VW LONG ADAPTER - ALSO FITS PORSCHE**



AST# **ATF 105**  
**VW 10 x 1.0 - ALSO FITS MINI COOPER**



AST# **ATF 103**  
**VW SHORT ADAPTER**



AST# **ATF 129**  
**MERCEDES 722.9 TRANS.**  
**12 x 1.5**




AST# **ATF 101**  
**FORD 1/8 NPT**



**2002 VW PASSAT**




**HONDA PILOT DIFFERENTIAL FILL**

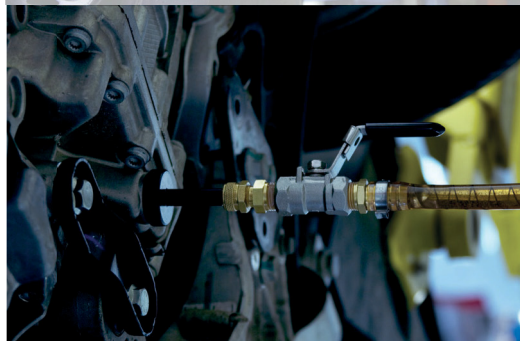


**2008 VW JETTA**



**2005 FORD EXPLORER**

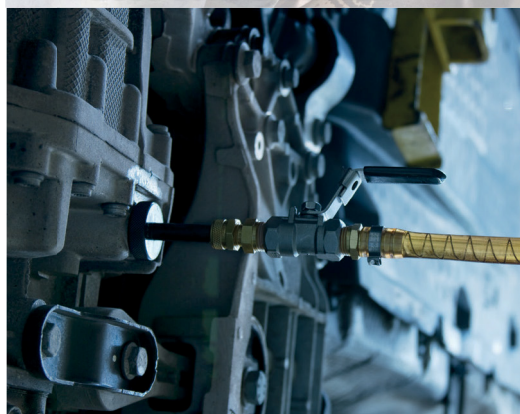

**2008 VW EOS**

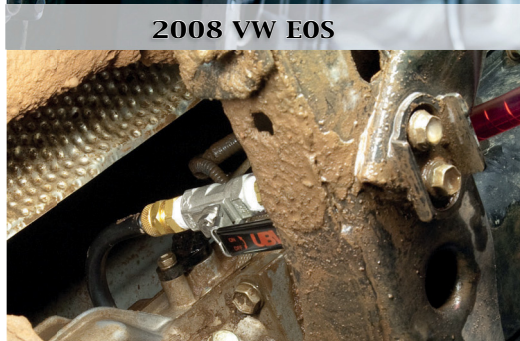

**2005 TOYOTA 4-RUNNER**