
## **Auto Meter GAUGE WORKS**

Instr. No. 2650-1049

## Dodge Ram Dash Pods



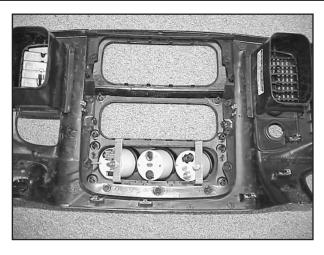

- 1. Remove stock dash panel by snapping it off the dash. See the shop manual for more information.
- 2. Remove small storage pocket from lowest position on panel. (Some vehicles may have seat warmer, shift on the fly, etc. switches installed in this position. The switches will have to be relocated to install the dash pod.) The pocket is held in position with 4 small screws and the pocket pops out the back of the panel.
- 3. Install gauges in dash pod.
- 4. Install dash pod in panel from the front of the panel. Dash pod is held in position with two U-Brackets and two spin nuts. U-Brackets are installed on 1st and 3rd gauges (see photo).
- 5. Wire gauges into vehicle using installation instructions supplied with gauges.
- 6. Snap panel back on dash.

Learn more about gauges and dashboards we have.