

INSTALLATION INSTRUCTIONS
**HALL-EFFECT ELECTRIC
 SPEEDOMETER SENDERS (SQUARE WAVE)**
 3 Wire Sender, with Optional Cable Hook-Up


2650-1168



Model 5291

Steps for installation:

1. Place Drive Key in sender.
2. Place sender on Transmission Take-off.
3. Tighten Installation Nut.
4. Wire sender as shown.

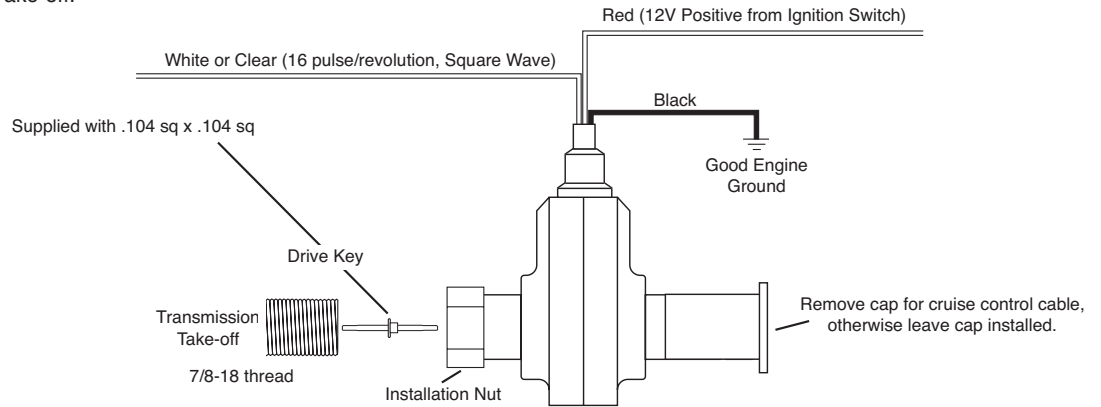

Model 5292 (Ford Models Only)

Steps for installation:

1. Remove stock speedometer cable.
2. Remove c-clip off of cable.
3. Remove nylon gear.
4. Install drive key into sender.
5. Install gear on sender.
6. Install c-clip on sender.
7. Insert sender into transmission.
8. Tighten mounting bracket to the transmission with the existing bolt.
9. Wire sender as shown.

