

Installation Instructions

Hood Scoops


For proper installation and best possible fit, please read all instructions BEFORE you begin.

Important Safety Information




- CAUTION - Before driving, ensure that the hood scoops are properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check that all components are secured.

Contents **NOTE:** Actual product may vary from illustration.

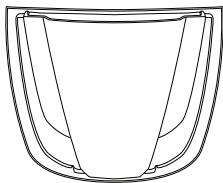

Hood Scoop x1

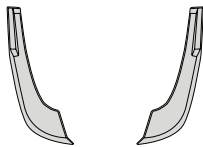

Chrome Accents X2



Gasket X1




Decal x2



Alcohol Pad x3



Car Wash Supplies



Clean Towel



Masking Tape



Scissors


Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle's hood to remove any debris and/or dirt.
- Dry the hood with a clean towel.

Installation Steps **NOTE:** Actual application may vary slightly from illustrations.




Wash hood thoroughly.

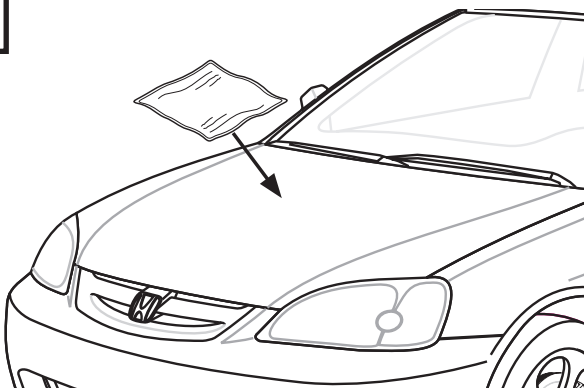

1

Center part on hood, and mark edges for reference with masking tape.

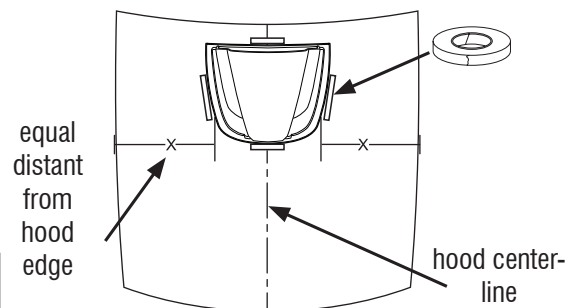


2

Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Clean painted surface of hood where scoop will attach with alcohol pad.

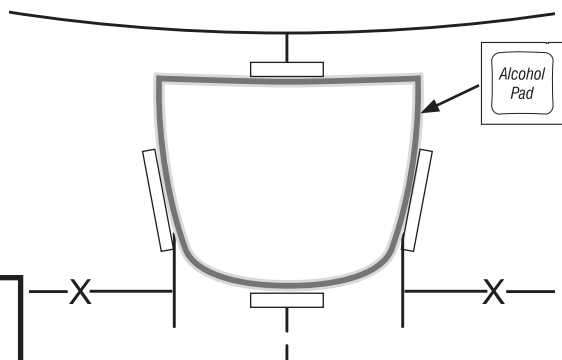

3


Affix gasket to hood scoop edge.

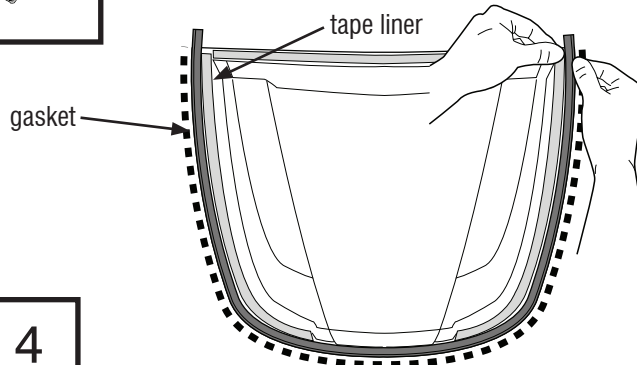

4




Use scissors to trim excess gasket to be flush with scoop edge.

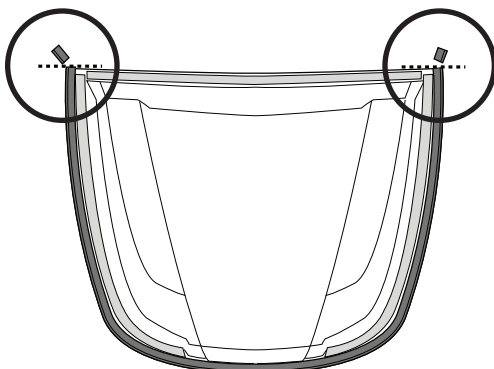



5

Clean top area of hood scoop with an alcohol pad.

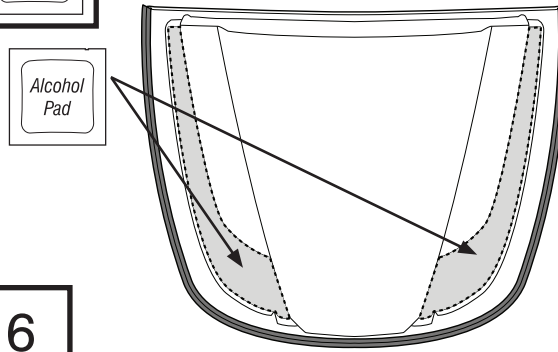



6

Apply decal to chrome accent piece.

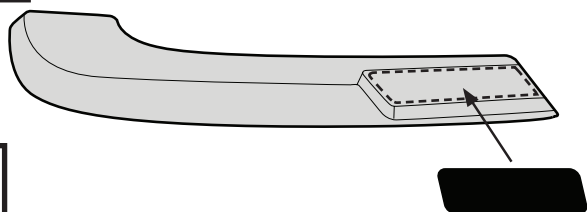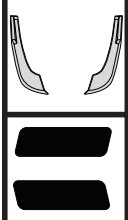


7

Peel back 2" (5 cm) of tape liner from center flange of bottom of chrome accent piece. Completely remove tape liner from the remaining three (3) locations

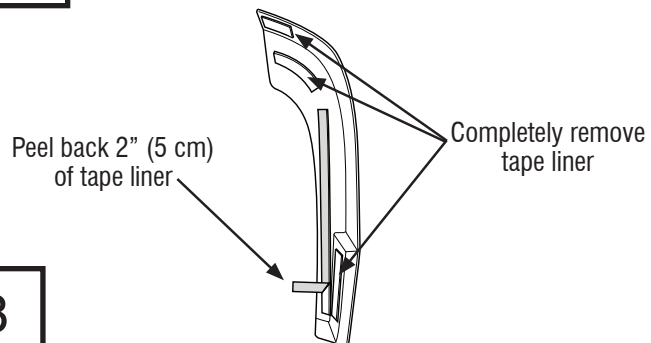


8

Position chrome accent piece to top of hood scoop and apply pressure to exposed tape.

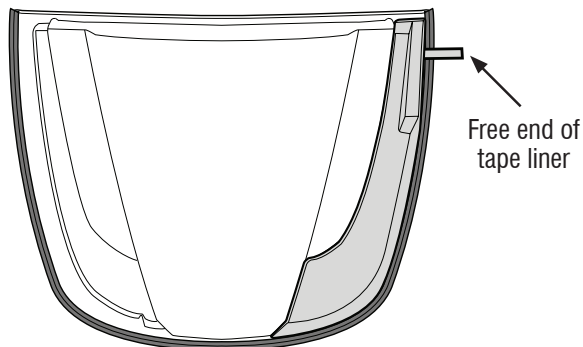

9

With the chrome accent piece in its final position, remove remaining tape liner by pulling on free ends. Apply pressure to all edges to ensure adhesion.

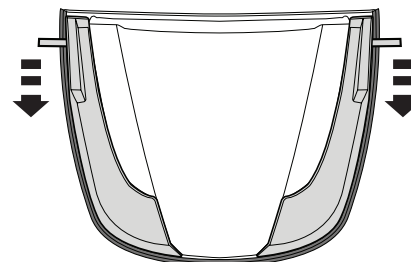


10

Repeat **Steps 7-10** for remaining chrome accent piece.

Installation Steps

NOTE: Actual application may vary slightly from illustrations.

Peel back 2" (5 cm) of tape liner from each flange on the bottom of the hood scoop.

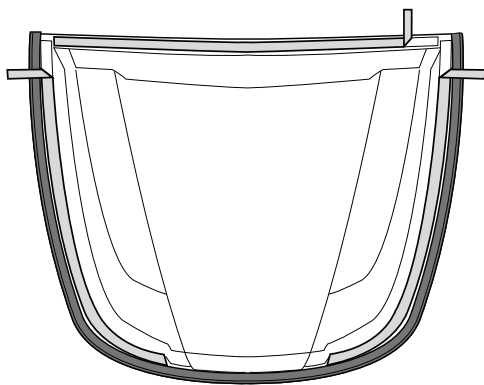

11

Position scoop on hood and apply pressure to exposed tape. In its final position, remove remaining tape by pulling on free ends. Apply pressure to all edges to ensure adhesion.



12

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

Congratulations!

You have purchased one of the many quality Auto Ventshade™ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



Learn more about custom hoods we have.