

Installation Instructions

Hood Scoops


For proper installation and best possible fit, please read all instructions **BEFORE** you begin.

Important Safety Information



- CAUTION - Before driving, ensure that the hood scoops are properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check that all components are secured.


Contents **NOTE:** Actual product may vary from illustration.

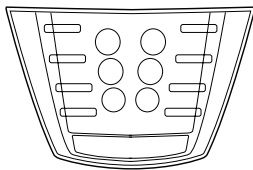

Hood Scoop (1)



Chrome Accent (1)

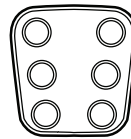

Chrome Insert (1)




Alcohol Pad (3)

Tools Required



Car Wash Supplies



Clean Towel



Masking Tape


Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle's hood to remove any debris and/or dirt.
- Dry the hood with a clean towel.

Installation Steps **NOTE:** Actual application may vary slightly from illustrations.




Wash hood thoroughly.

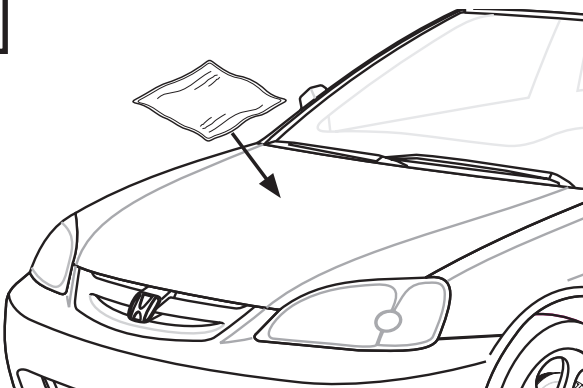

1

Center part on hood, and mark edges for reference with masking tape.

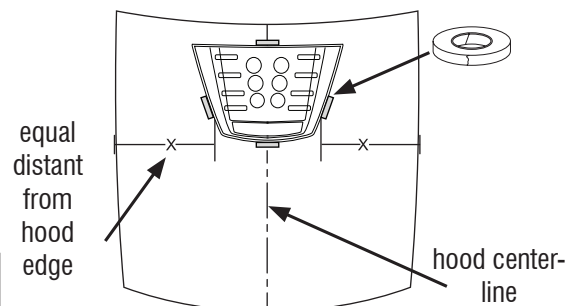


2

Installation Steps

NOTE: Actual application may vary slightly from illustrations.

Remove hood scoop and clean painted surface of hood where scoop will attach with alcohol pad.

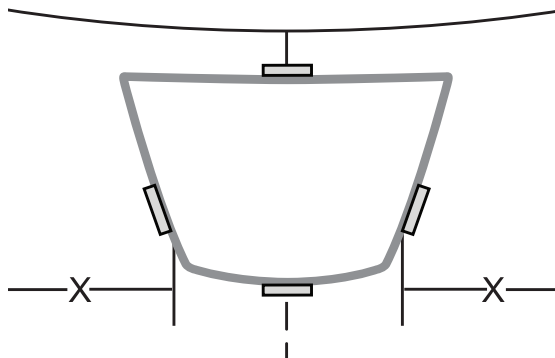


3

Alcohol Pad


Clean underside of hood scoop with alcohol pad at marked locations.

Alcohol Pad

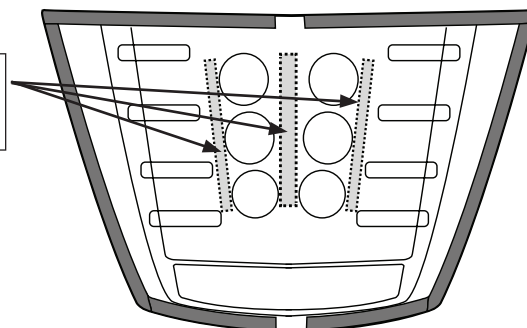


4

Completely remove tape liner from top of chrome insert piece.

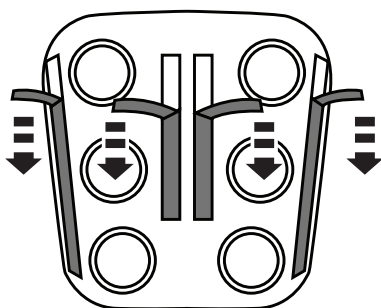


5

Align chrome insert piece on **underside** of hood scoop and apply pressure to taped areas to adhere insert piece to hood scoop.

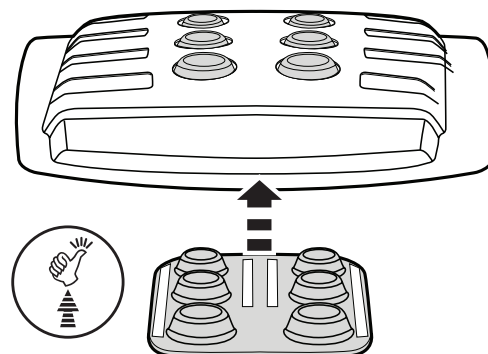

6

Completely remove of tape liner from bottom of chrome accent piece.

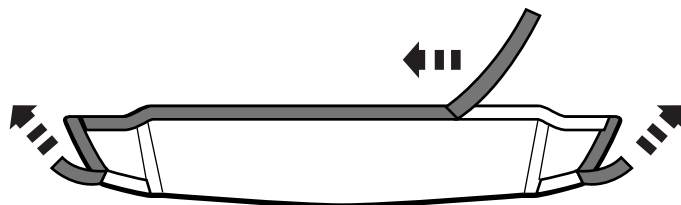


7

Alcohol Pad


Clean front upsideside of hood scoop with alcohol pad at marked location.

Alcohol Pad

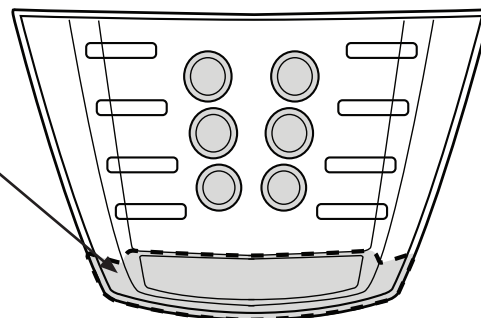


8

Align chrome accent piece on **upsideside** of hood scoop front and apply pressure to taped areas to adhere accent piece to hood scoop.

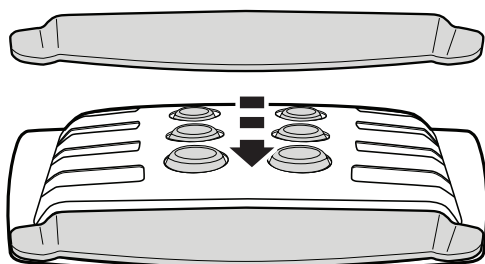

9

Peel back 2" (5 cm) of tape liner from each flange on the bottom of the hood scoop.

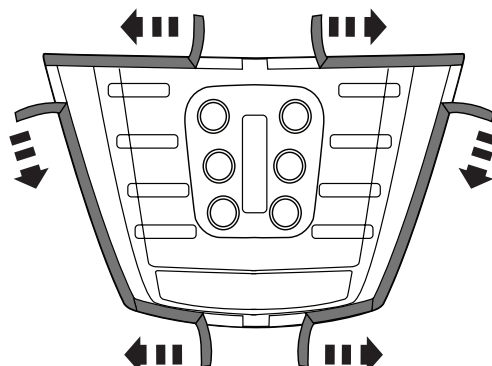


10

Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Position scoop on hood and apply pressure to exposed tape. In its final position, remove remaining tape by pulling on free ends.

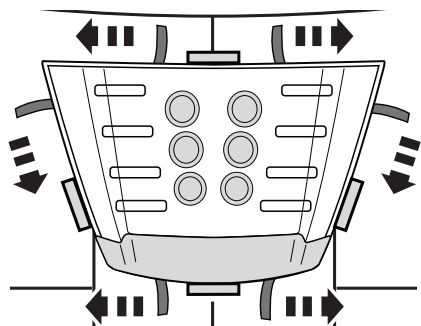

11

Apply pressure to all edges to ensure adhesion. Remove masking tape.

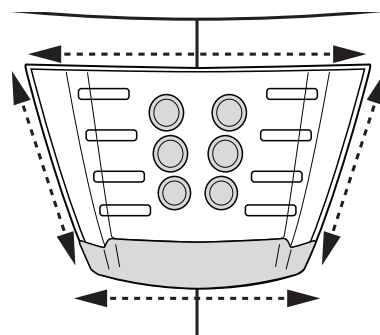

12

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

Congratulations!

You have purchased one of the many quality Auto Ventshade™ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

