### Installation Instructions



# Bugflector<sup>®</sup> - Bugflector II<sup>®</sup> - Carflector<sup>®</sup> - Chrome Hood Shield

# **Important Safety Information**



- CAUTION Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- · Do not use cleaning solvents of any kind.
- · Periodically check all components for tightness.

**Contents** NOTE: Actual product may vary from illustration.







Bump On x4

## **Tools Required**







Clean Towel




Phillips Screwdriver

# **Preparation Before Painting / Installation**

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

**Installation Steps NOTE:** Actual application may vary slightly from illustrations.

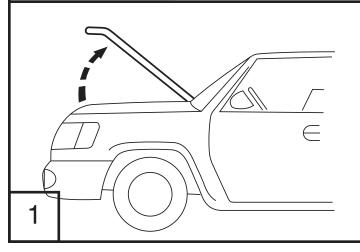

Vehicles equiped with hood mounted bumper stops: Bumper stops must be removed prior to installation.

