

Bugflector<sup>®</sup> - Bugflector II<sup>®</sup> - Carflector<sup>®</sup> - Chrome Hood Shield<sup>T</sup>

## **Important Safety Information**



- CAUTION Before driving, ensure that the hood shield is properly anchored to vehicle.
  Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

#### **Contents** NOTE: Actual product may vary from illustration.









Hood shield

Screw x4

Well Nut x4

Bump On x4

### **Tools Required**



Car Wash Supplies



Clean Towel




Phillips head screwdriver

### **Preparation Before Painting / Installation**


- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle's hood to remove any debris and/or dirt.
- Dry the hood with a clean towel.

# Installation Steps NOTE: Actual application may vary slightly from illustrations.


Open Hood. Locate (4) circular holes on the underside of hood. Clean the area around these with a soft cloth.

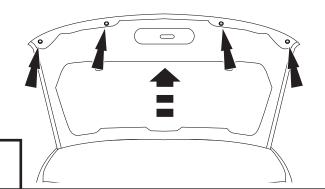

Attach fasteners to hoodshield by inserting screw through hood shield, and into well nut. Partially thread screw into well nut.





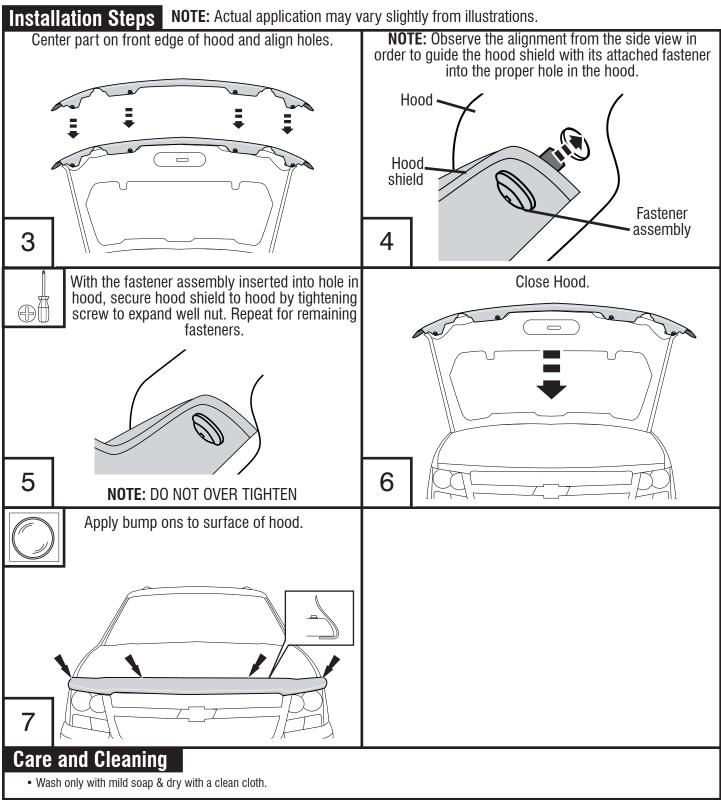

#### Congratulations!

You have purchased one of the many quality Auto Ventshade<sup>™</sup> branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.





