Installation Instructions



$\mathbf{Bugflector}^{\mathbb{R}}$ - $\mathbf{Bugflector}$ II $^{\mathbb{R}}$ - $\mathbf{Carflector}^{\mathbb{R}}$ - \mathbf{Chrome} Hood $\mathbf{Shield}^{^{\mathsf{TM}}}$

Important Safety Information



- CAUTION Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- . Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents NOTE: Actual product may vary from illustration.



Hood shield



Bump On x4



Hood Insert x2



Washer x2



crews



Fastener x2

Tools Required



Car Wash Supplies



Clean Towel



Phillips screwdriver





Tape

Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps NOTE: Actual application may vary slightly from illustrations.

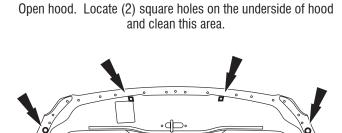




Press (2) hood inserts into the (2) square holes. If necessary use tape to hold them firmly in place.



1

2

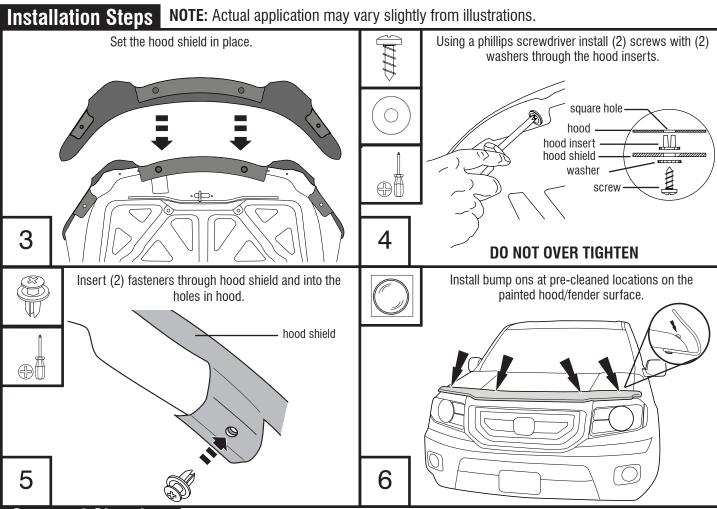

Care and Cleaning

• Wash only with mild soap & dry with a clean cloth.

Congratulations!

You have purchased one of the many quality Auto Ventshade[™] branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.





