

Installation Instructions



Bugflector[®] - Bugflector II[®] - Carflector[®] - Chrome Hood Shield[™]

Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents

NOTE: Actual product may vary from illustration.



Hood shield




Bump On
x4



Hood Insert
x4



Washer
x4



Screws
x4

Tools Required




Car Wash Supplies



Clean Towel



Phillips
screwdriver

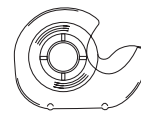

Tape


Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Open hood. Locate rubber weatherstrip on leading edge of hood.

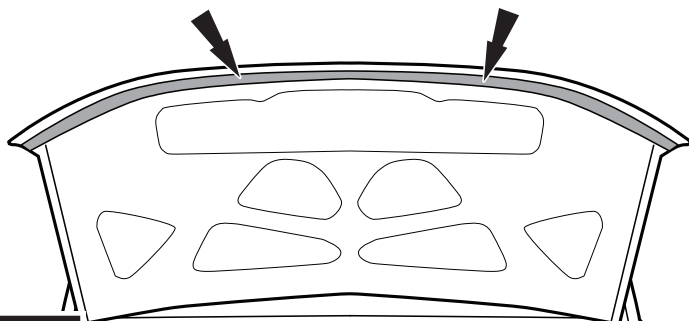

1

Gently pull the edge of the weatherstrip down to reveal (4) square holes.

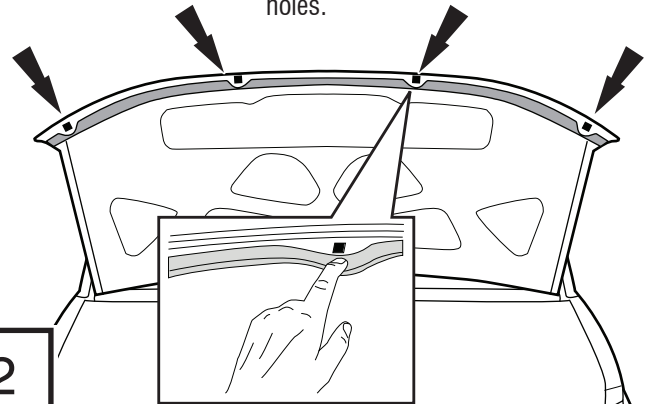



2

Installation Steps

NOTE: Actual application may vary slightly from illustrations.




Press (4) hood inserts into the (4) square holes. If necessary use tape to hold them firmly in place.

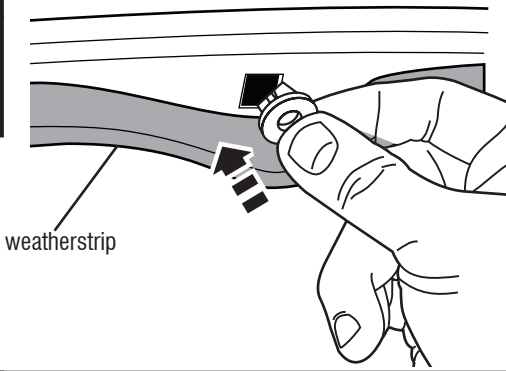

weatherstrip

3



Set the hood shield in place, aligning hood shield holes with the previously installed hood inserts.

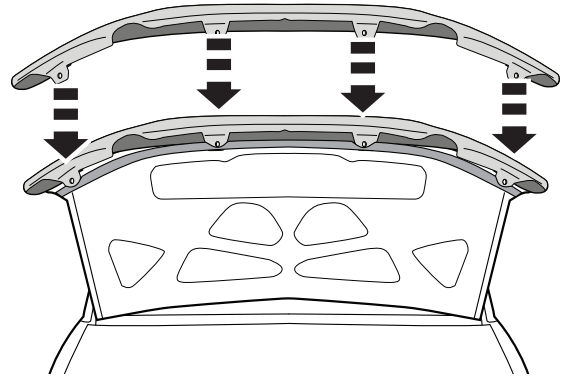

4




Using a phillips screwdriver install (4) screws with (4) washers through the hood shield and into the hood inserts.

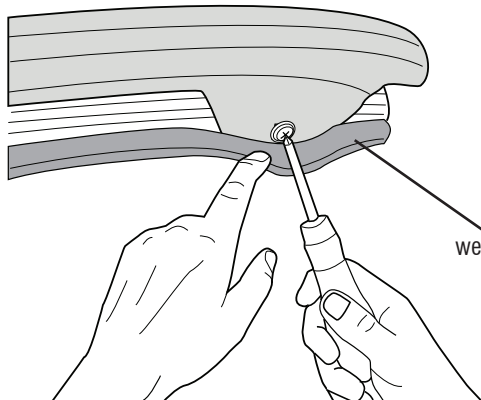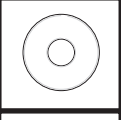

weatherstrip



5

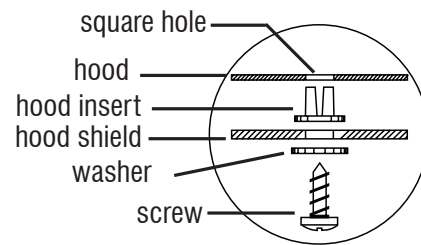

square hole

hood

hood insert


hood shield

washer

screw

DO NOT OVER TIGHTEN


Reposition the rubber weatherstrip back in place **OVER** the hood shield flanges.

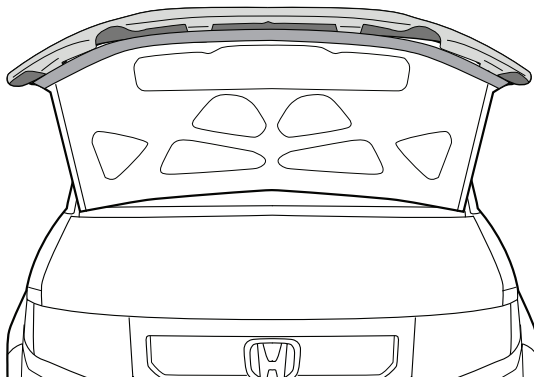

6



Close hood. Install bump ons at pre-cleaned locations on the painted hood/fender surface.

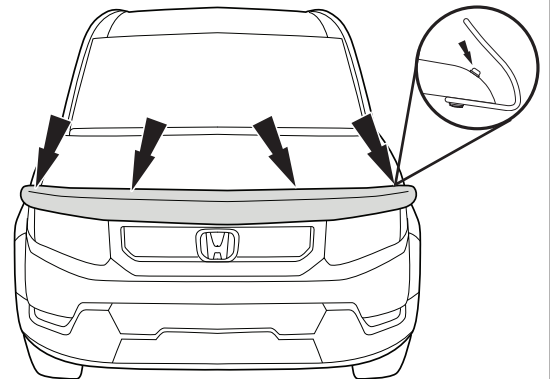

7

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

Congratulations!

You have purchased one of the many quality Auto Ventshade™ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



When it comes to quality stone and bug deflectors, AVS is the brand you can depend on.