

Bugflector<sup>®</sup> - Bugflector II<sup>®</sup> - Carflector<sup>®</sup> - Chrome Hood Shield<sup>™</sup>

# **Important Safety Information**



- CAUTION Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

#### **Contents** NOTE: Actual product may vary from illustration.







Bump On x4 (# 98024)



Fastener X4 (# 98059)

# **Tools Required**







Clean Towel




Phillips Head Screwdriver


### **Preparation Before Painting / Installation**


- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

### **Installation Steps NOTE:** Actual application may vary slightly from illustrations.

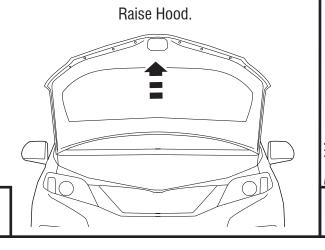

Locate (4) circular holes on the underside of hood. Clean the area around holes with a clean coth.

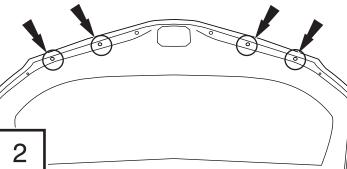

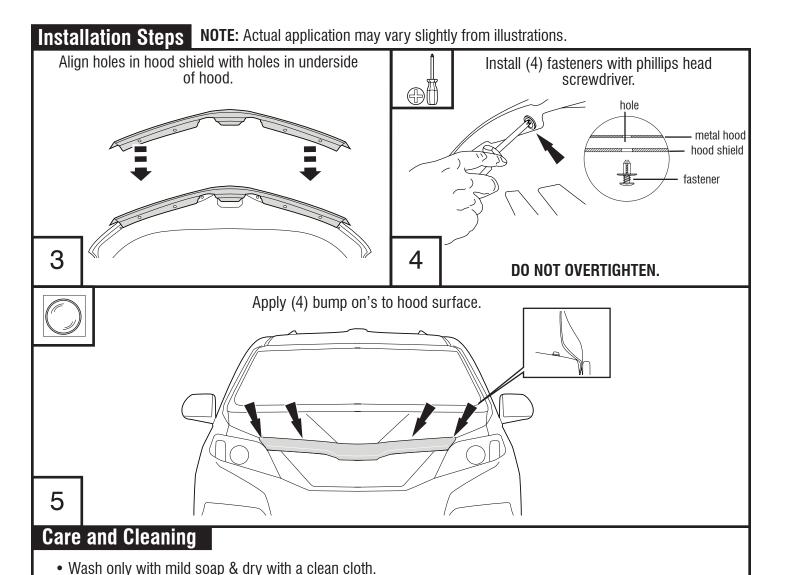

# **Congratulations!**

You have purchased one of the many quality Auto Ventshade™ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



