

Installation Instructions

Bugflector[®] - Bugflector II[®] - Carflector[®] - Chrome Hood Shield[™] Important Safety Information • CAUTION - Before driving, ensure that the hood shield is properly anchored to vehicle. • Do not use automatic "brush-style" car washes. Do not use cleaning solvents of any kind. Periodically check all components for tightness. **NOTE:** Actual product may vary from illustration. Contents Alcohol Pad Hood Shield Alcohol Pad x2 Self Tapping Washer x2 Bump On x4 Screw x2 **Tools Required** -01 **Car Wash Supplies** Clean Towel Appropriate hand tools **Preparation Before Painting / Installation** • A trial fit is recommended to ensure proper positioning and fit. • Check fit of parts before painting as we will not accept the return of modified or painted parts. • Wash your vehicle's hood to remove any debris and/or dirt. Dry the hood with a clean towel. Ideal installation temperature is between 65°F - 110°F (18°C - 43°C) **Installation Steps NOTE:** Actual application may vary slightly from illustrations. Clean hood shield mounting location. Peel back tape liner. Alcohol

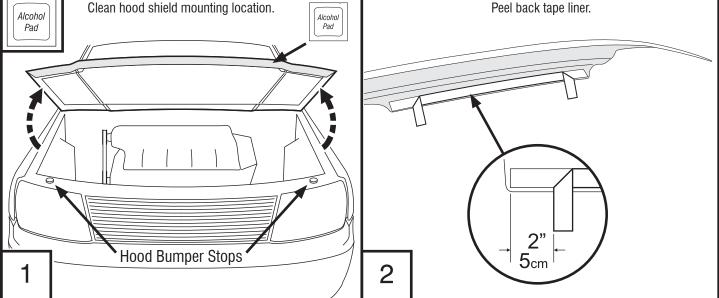

NOTE: Actual application may vary slightly from drawings.

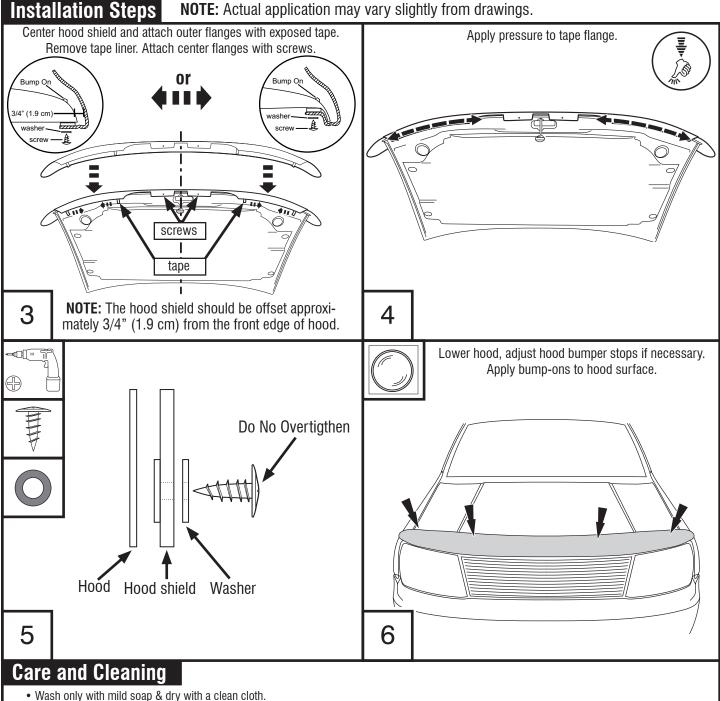

Congratulations!

You have purchased one of the many quality Auto Ventshade[™] branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.







When it comes to quality stone and bug deflectors, AVS is the brand you can depend on.