

Installation Instructions



AUTO VENT SHADE™

Ventvisor® Deflector

Important Safety Information



- CAUTION - Before driving, ensure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents - 2 Piece Set **NOTE:** Actual product may vary from illustration.



Front Driver Side Visor




Front Passenger Side Visor



Alcohol Pads x2



GP3 Clip x4



Scotch brite pad

Contents - 4 Piece Set



Front Driver Side Visor



Front Passenger Side Visor



Rear Driver Side Visor




Rear Passenger Side Visor



Alcohol Pads x4



GP3 Clip x8

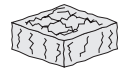


Scotch brite pad

Tools Required



Car Wash Supplies

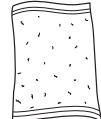

Clean Towel




Flathead Screwdriver

Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps **NOTE:** Actual application may vary slightly from illustrations.

Lower front drivers side window.

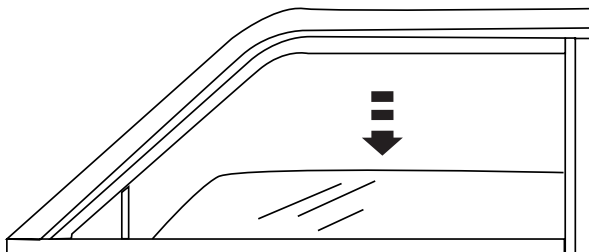

1



Buff **INSIDE** the rubber window channel with Scotch brite scuff pad, and wipe clean with an alcohol pad and dry with a clean cloth.




2

Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Remove the tape liner from the front and rear flanges of visor. Peel back 2" (5 cm) of tape liner from each end of the lateral flange.

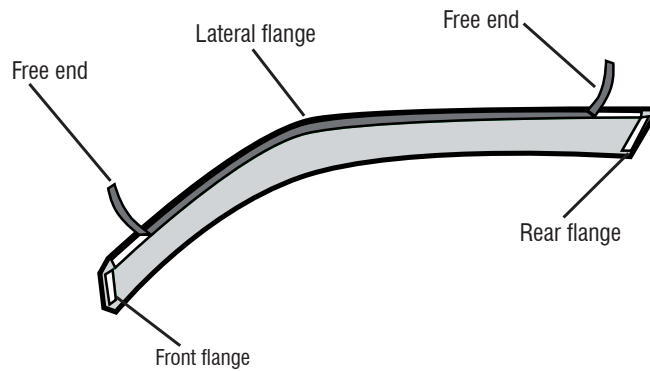


3

Insert the rear end flange of the visor into the rubber window channel first. Then flex the visor slightly and rotate the visor into position inside the rubber window channel.

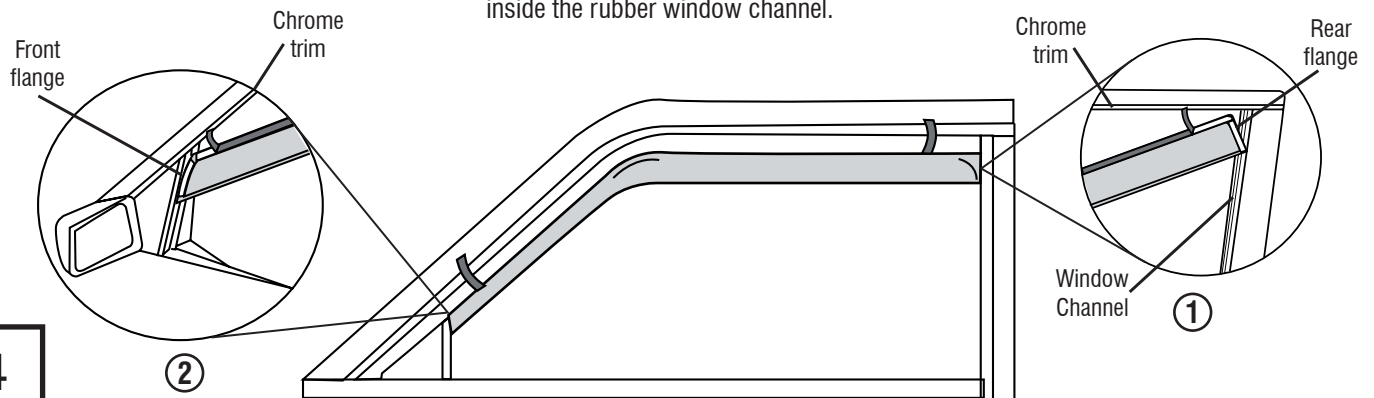


4

Remove remaining tape liner by pulling on free ends.

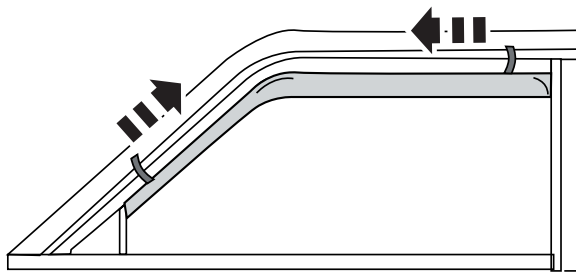




5

Apply pressure along the inside rubber window channel to press tape against the inside of the window channel.

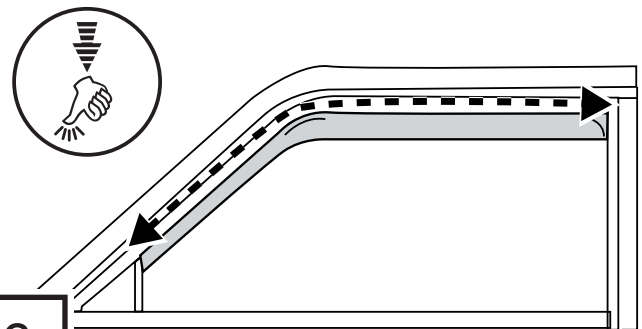

6

Place a black GP-3 clip inside the window channel at the front and rear end flanges. Use a flat blade screwdriver to press the clip into place. Be sure the rubber window channel overlaps the inner leg of the clip.

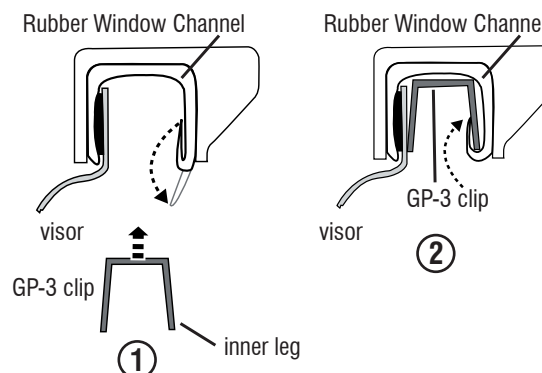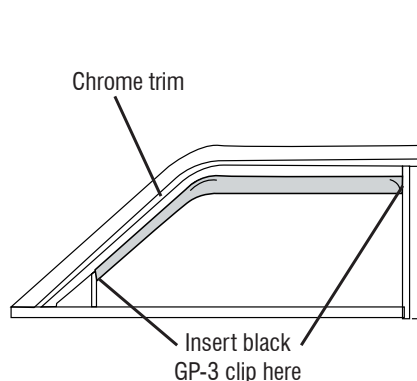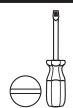


(1) Pull inner rubber window channel flap down, then insert GP-3 clip and snap it into place with a screwdriver.
(2) Then release the inner rubber window channel flap so that it overlaps the GP-3 clip.

7

Installation Steps

NOTE: Actual application may vary slightly from illustrations.

Roll window up and leave closed for 24 hours to ensure tape adhesion.

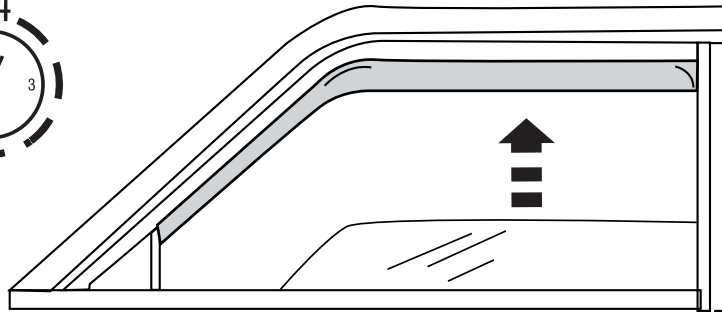


8

Repeat **Steps 1-8** for opposite side.

4 Piece Set

The rear visor attaches with the same preparation methods as the front, except that the **FRONT** end flange is inserted into the rubber window channel first. Figure 9 shows the rear visor in its final position. Repeat for opposite side.

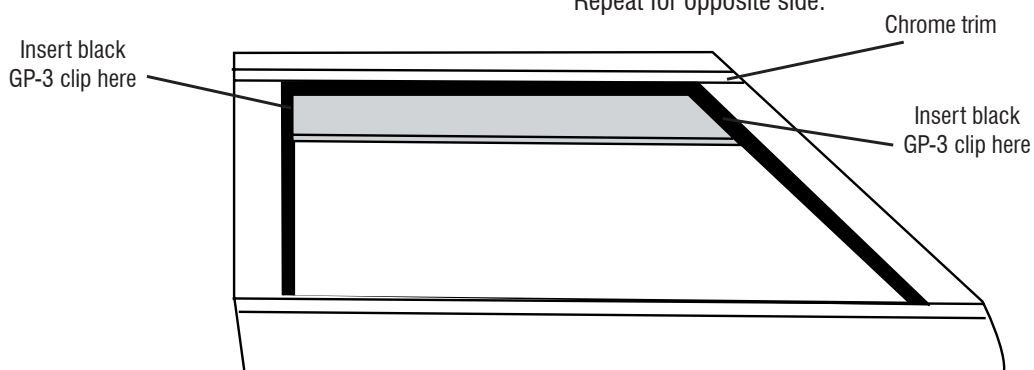

9

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

Congratulations!

You have purchased one of the many quality Auto Ventshade™ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



When it comes to quality rain guards and wind deflectors, AVS is the brand you can depend on.