

Installation Instructions


Ventshade® Deflector

Important Safety Information



- CAUTION - Before driving, ensure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents - 2 Piece Set



Front Driver
Side Visor



Front Passenger
Side Visor



Clips x8

Contents - 4 Piece Set



Front Driver
Side Visor



Front Passenger
Side Visor



Rear Driver's
Visor



Rear Passenger's
Visor




Clips x14


Tools Required



Car Wash Supplies

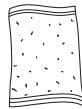

Clean Towel

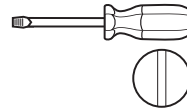

Flathead Screwdriver



Putty Knife

Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.


Installation Steps

NOTE: Actual application may vary slightly from illustrations.



Lower window. Use a putty knife to grasp and pull down the rubber window channel.

rubber window channel

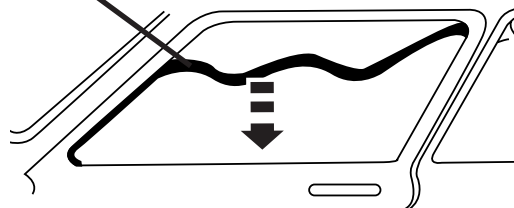

1

NOTE: on most GM cars channels may be fixed at either the front or rear. Do not pull fixed channels completely away from door frame. FOR 1977-1979 MODELS rubber window channels may come out completely.

Installation Steps Without Vent Post

NOTE: Actual application may vary slightly from illustrations.


Locate deflector in upper window frame and place in position as shown.



2

With Vent Post

Insert end flange between the weather strip and the vent post and push the deflector up into position.

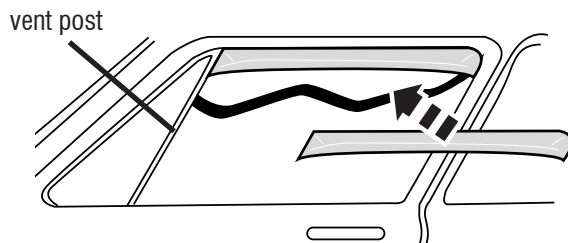


3




Place the clips evenly along shade.

NOTE: 4 door car fronts without a vent post use (4) clips, 4-door car fronts with a vent post use (3) clips, 2-door cars use (4) clips.

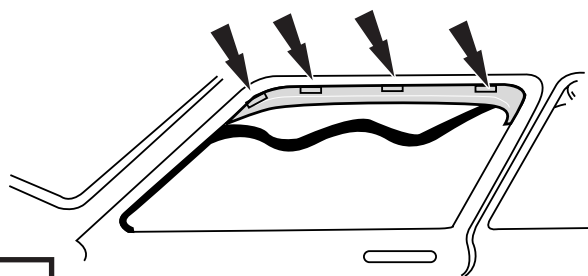


without vent post


4

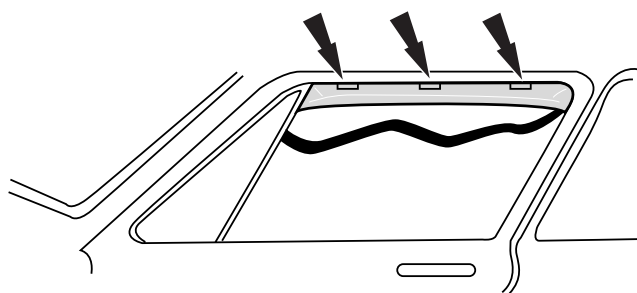

with vent post

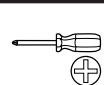


Use a screwdriver to push the clip up into position.

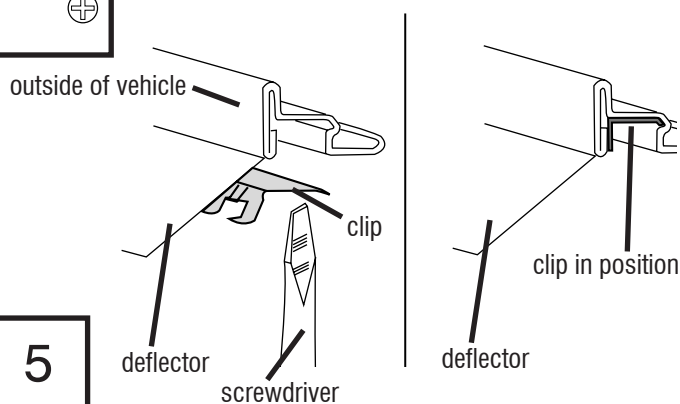

5


Replace rubber window channel and raise window to fully seat window channel.

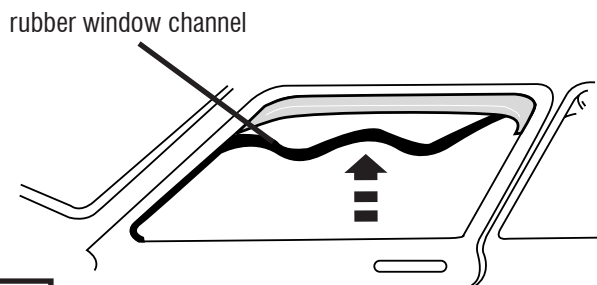


6

Rear door installation

Lower window, and pull down window channel.

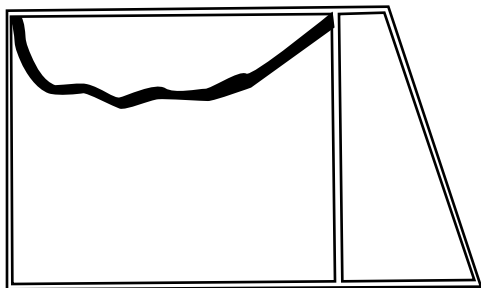

OR

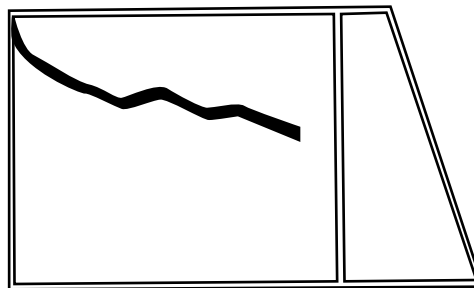


7

NOTE: on most GM cars channels may be fixed at either the front or rear. Do not pull fixed channels completely away from door frame. FOR 1977-1979 MODELS rubber window channels may come out completely.

Installation Steps

NOTE: Actual application may vary slightly from illustrations.

Position deflector in the upper window frame and division post.

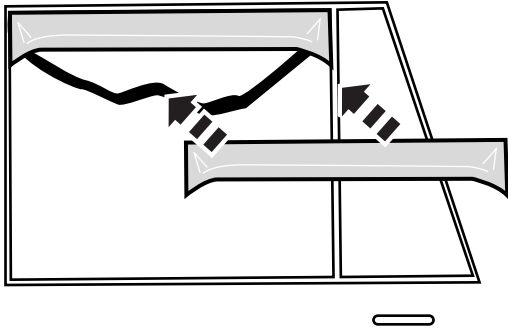


8




9

Place clips as shown. Install as per **Step 5** above.
NOTE: All 4-door cars rears use (3) clips.

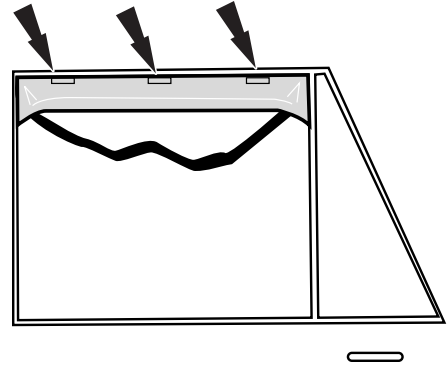

Replace rubber window channel and raise window to fully seat window channel.

rubber window channel

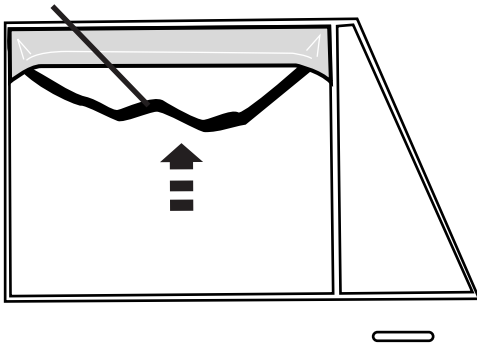

10

Repeat **Steps 1-10** for remaining windows

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

Congratulations!

You have purchased one of the many quality Auto Ventshade™ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



When it comes to quality rain guards and wind deflectors, AVS is the brand you can depend on.