

Installation Instructions

Ventshade® Deflector

Important Safety Information



- CAUTION - Before driving, ensure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents - 2 Piece Set



Front Driver
Side Visor



Front Passenger
Side Visor



TapeTabs x8



Alcohol Pad x2

Contents - 4 Piece Set



Front Driver
Side Visor



Front Passenger
Side Visor



Rear Driver's
Visor



Rear Passenger's
Visor



Tape Tabs x16



Alcohol Pad x4

Tools Required



Car Wash Supplies



Clean Towel



Putty knife

Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps


NOTE: Actual application may vary slightly from illustrations.



Alcohol Pad

Lower window. Use a putty knife to grasp and pull down the rubber window channel. Clean the inside of the window channel with an alcohol pad.

rubber window channel

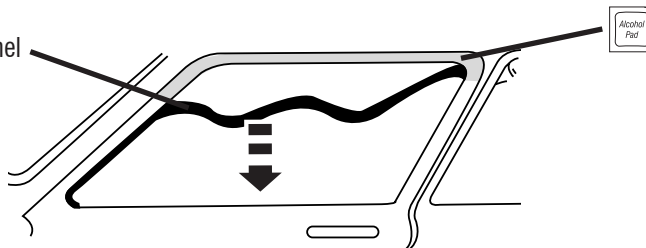


1


NOTE: on most GM cars channels may be fixed at either the front or rear. Do not pull fixed channels completely away from door frame. FOR 1977-1979 MODELS rubber window channels may come out completely.

Installation Steps

NOTE: Actual application may vary slightly from illustrations.




Apply the tape tabs to the flange of the deflector in the locations shown.

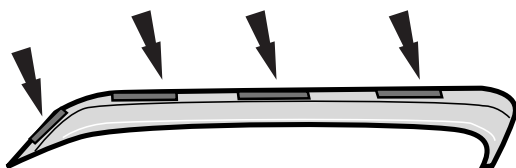

2

Carefully peel back the tape liner off of the tape tabs.

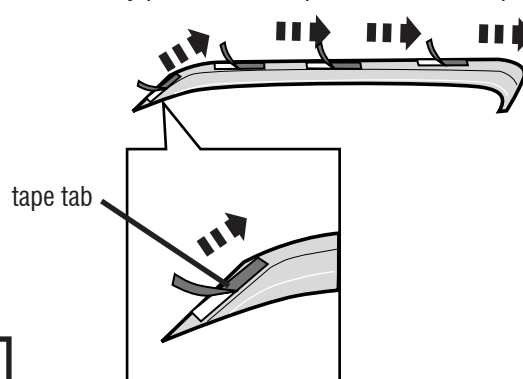

3

Without Vent Post


Locate deflector in upper window frame and place in position as shown.



4


With Vent Post

Insert end flange between the weather strip and the vent post and push the deflector up into position.

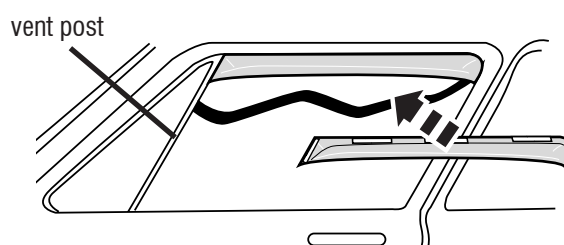


5

Run your fingers along the inside of the metal window frame to press the tape tabs against the inside of the window frame.

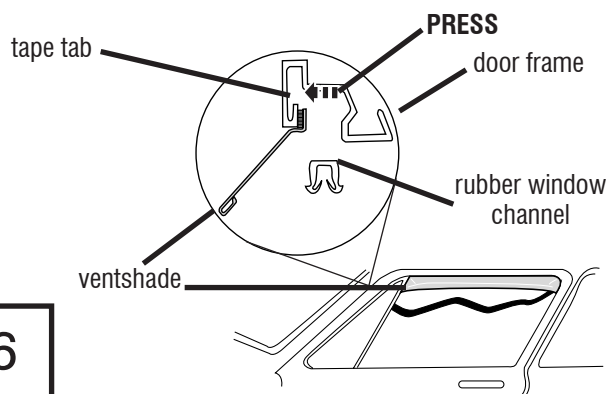

6


Replace the rubber window channel, and raise window. Leave window up for 24 hours for better conformity and adhesion of the tape.

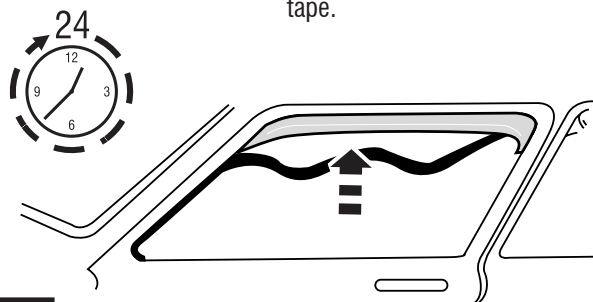


7

Rear door installation

Lower window, and pull down window channel.

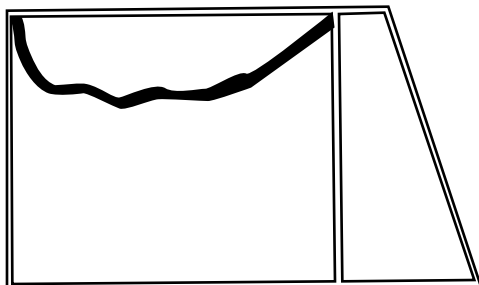

OR

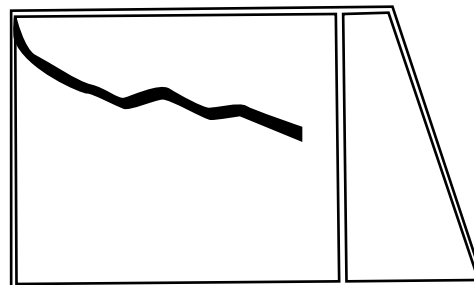


8

NOTE: on most GM cars channels may be fixed at either the front or rear. Do not pull fixed channels completely away from door frame. FOR 1977-1979 MODELS rubber window channels may come out completely.

Installation Steps


NOTE: Actual application may vary slightly from illustrations.



Place tape tabs as shown. Install as per **Step 2-3** above.

9


Position deflector in the upper window frame and division post.

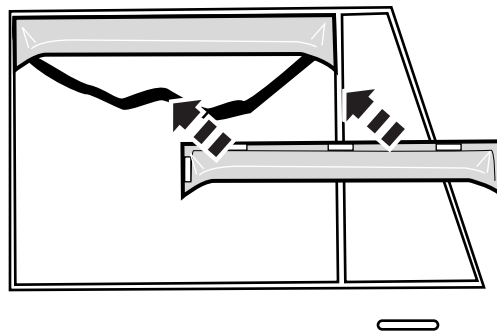

10

Replace the rubber window channel, and raise window. Leave window up for 24 hours for better conformity and adhesion of the tape.

rubber window channel

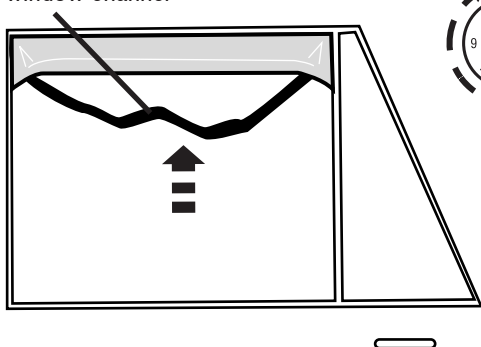

11

Repeat **Steps 1-11** for remaining windows

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

Congratulations!

You have purchased one of the many quality Auto Ventshade™ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



When it comes to quality rain guards and wind deflectors, AVS is the brand you can depend on.