

# **Important Safety Information**



- CAUTION Before driving, ensure that the vent visor is properly secured to vehicle.
- · Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- · Periodically check all components for tightness.

#### **Contents - 2 Piece Set**







Front Passenger Side Visor



Alcohol Pad x2



Tape Tabs x10

## **Tools Required**








Clean Towel


### **Preparation Before Painting / Installation**

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

### **Installation Steps NOTE:** Actual application may vary slightly from illustrations.

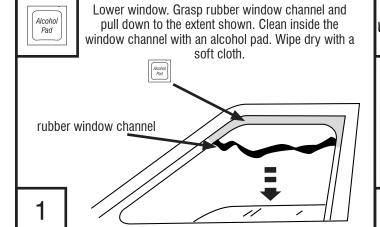

Apply the tape tabs to the flange of the deflector in the locations shown.



2

