

Installation Instructions



AUTO VENT SHADE™


Ventshade® Deflector

Important Safety Information




- CAUTION - Before driving, ensure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.


Contents - 2 Piece Set




Front Driver Side Visor




Front Passenger Side Visor



GP-1 Clip x 8



GM-3 Clip x 8




GM-4 Clip x 2

Tools Required




Car Wash Supplies



Clean Towel



Pencil



Flathead Screwdriver

Preparation Before Painting / Installation


- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps

NOTE: Actual application may vary slightly from illustrations.




Lower window. Use a pencil to mark clip installation locations on rubber trim as shown. **Two-piece clip** locations are indicated by white triangles; the location of the **one-piece clip** (one inch down from the top) is indicated by black triangle.

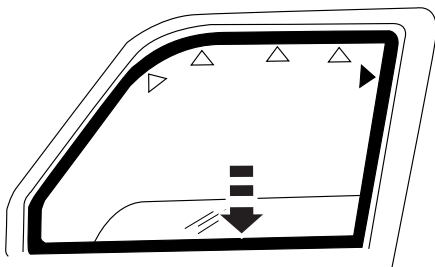

1


The rubber window channel has weather seals which press against the window when it is rolled up. Pull one of the seals down with thumb at one of the two-piece clip locations.

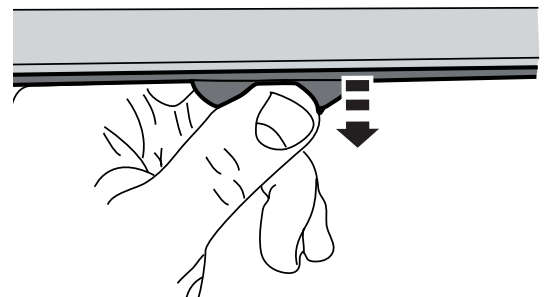



2

Installation Steps

NOTE: Actual application may vary slightly from illustrations.



Insert a GP-1 clip as shown. Push it all the way up into the window channel, then release seal with thumb. Pull the other window seal out from under the clip to seat it properly. See cross section.

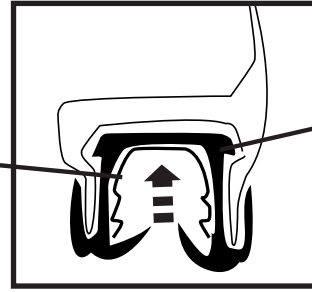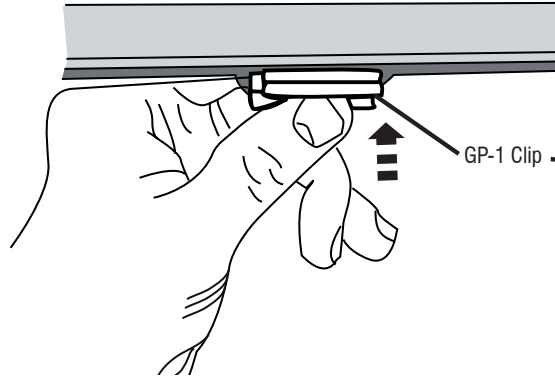



Rubber Window Channel

GP-1 Clip

CROSS SECTION

3

Place flange of deflector into rubber cavity of window. Figure 4 shows deflector in position. See cross section of deflector flange in the window channel.

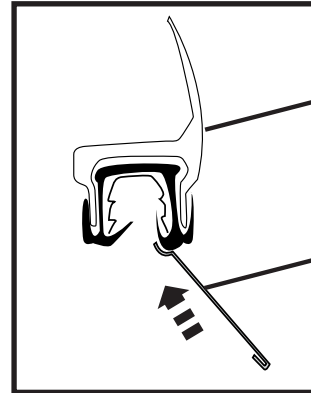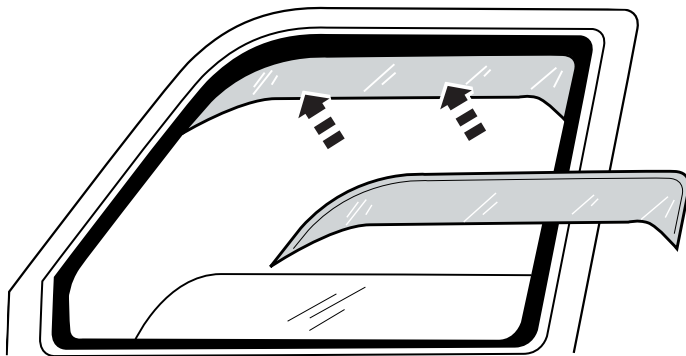


Outside of Door Frame



Deflector

CROSS SECTION

4




Install the GM-3 components of the two-part clips into the GP-1 parts installed in **Steps 1-3**. Use a screwdriver to push the GM-3 clips up into place. **NOTE: The barbs on the GM-3 clip must lock into place in the GM-1 clip, so it is very important that they are installed at the proper locations, as marked in Step 1.**

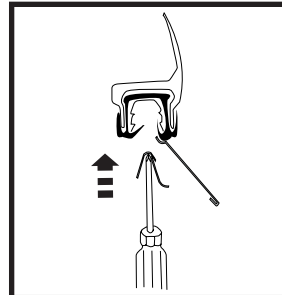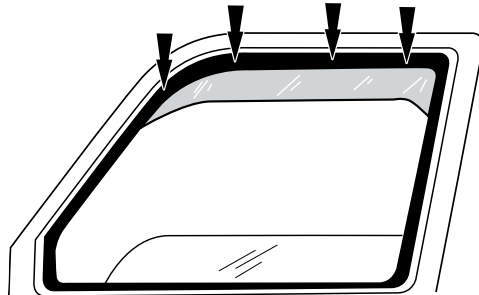


CROSS SECTION

5



Place GM-4 clip at the rear of the deflector, with the curved bottom of foot facing outward. **NOTE:** there should be a one-inch gap between top of clip and bottom edge of top of window frame. Seat the clip by pushing it back into the channel with a screwdriver.

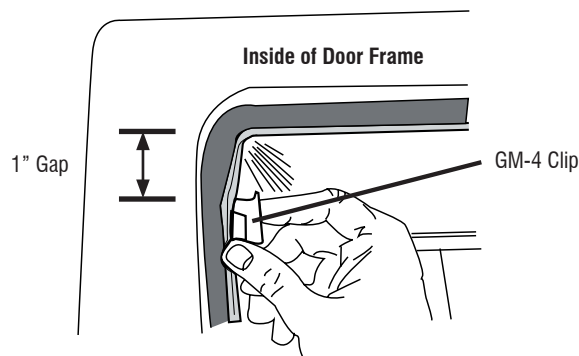

Inside of Door Frame

1" Gap

GM-4 Clip

6

Installation Steps

NOTE: Actual application may vary slightly from illustrations.

Repeat **Steps 1-6** for opposite side

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

Congratulations!

You have purchased one of the many quality Auto Ventshade™ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



When it comes to quality rain guards and wind deflectors, AVS is the brand you can depend on.