

1. Rain deflectors are stamped to show their position - L.F. for left front, R.F. for right front.
2. Pull rubber window channel down from top of window frame approximately halfway down the window frame.
3. Position the rain deflector on the window frame.
4. With rain deflector in position, center punch and drill 3/32 inch diameter hole through rear hole in rain deflector and install one of the screws furnished. See figure 1.
5. Holding shade in position, center punch and drill remaining holes and insert screws. See figure 2.
6. Reinstall the rubber window channel.

NOTE: Holes should be drilled at 90 degrees to surface of metal. Drilled holes should be touched up with paint to prevent rusting. Caulking compound should be applied to screws to seal holes.

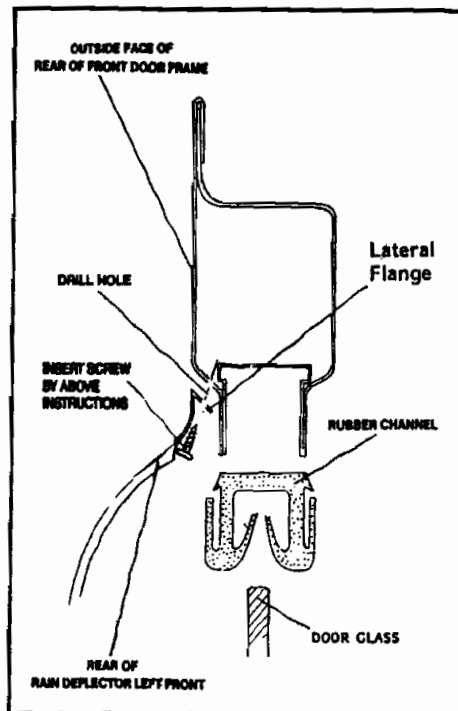


Figure 1

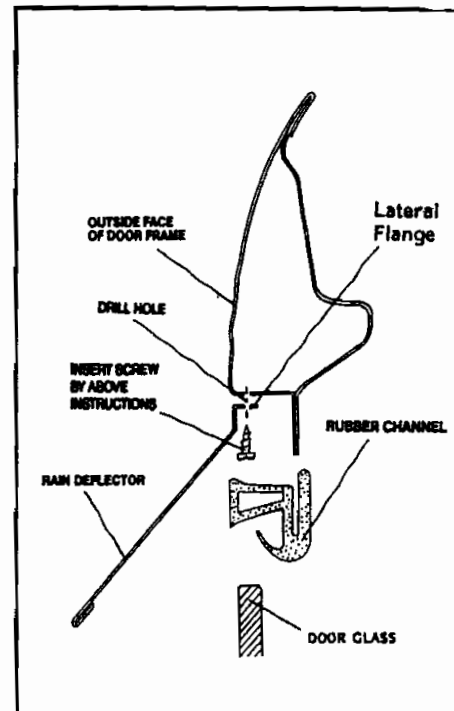


Figure 2