


## **Important Safety Information**



- CAUTION Before driving, ensure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- · Do not use cleaning solvents of any kind.
- · Periodically check all components for tightness.










Scotch Brite Scuff Pad

Alcohol Pad x2

#### **Contents - 4 Piece Set**





Rear Driver Side Visor

Rear Passenger Side Visor

Scotch Brite

Scuff Pad

Alcohol Pad

Alcohol Pad x4

### **Tools Required**



Car Wash Supplies



Clean Towel


# **Preparation Before Painting / Installation**

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.


### **Installation Steps** NOTE: Actual application may vary slightly from illustrations.




Alcohol Pad Buff the inside surface of the window channel with scotch brite pad, then clean with alcohol pad.

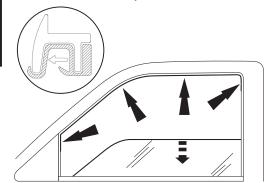

Remove tape liner from front & rear flanges. Peel back 2" of tape line from each end of top flange.

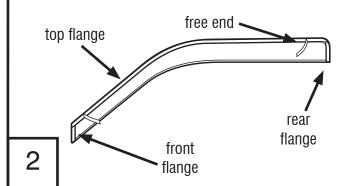

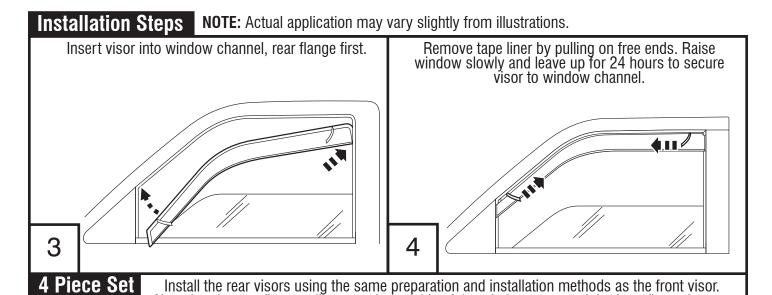

Install the rear visors using the same preparation and installation methods as the front visor. Note that the rear flange adheres to the outside of the window post, and the front flange inserts between the rubber & window frame.

Repeat steps 1 thru 5 for passenger side

# **Care and Cleaning**

· Wash only with mild soap & dry with a clean cloth.

### **Congratulations!**

You have purchased one of the many quality Auto Ventshade™ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.





