



Important Safety Information




- CAUTION Before driving, ensure that the vent visor is properly secured to vehicle.
- · Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- · Periodically check all components for tightness.





Contents - 4 Piece Set




Tools Required




Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.


Installation Steps NOTE: Actual application may vary slightly from illustrations.

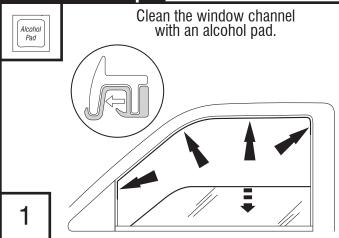

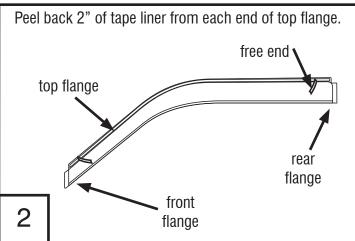


Installation Steps NOTE: Actual application may vary slightly from illustrations.

Insert visor into window channel, rear flange first. Insert rear flange between rubber trim and door post. Insert front flange between the rubber door trim and the metal door frame. The top flange slides into the window channel.

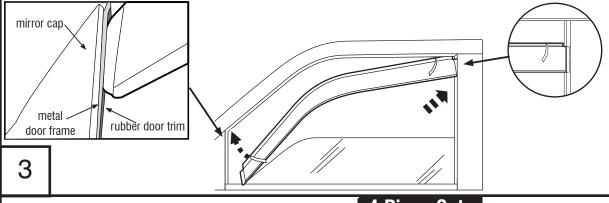


Remove tape liner by pulling on free ends. Raise window slowly and leave up for 24 hours to secure visor to window channel.

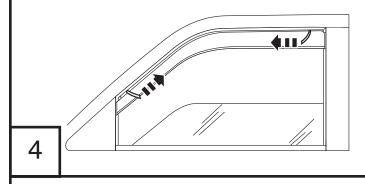

4 Piece Set

Install the rear visors using the same preparation and installation methods as the front visor. Note that front & rear flange fit between the rubber & post.

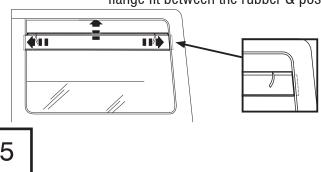

Repeat steps 1 thru 5 for passenger side

Care and Cleaning

· Wash only with mild soap & dry with a clean cloth.

Congratulations!

You have purchased one of the many quality Auto Ventshade™ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.





