


# **Important Safety Information**



- CAUTION Before driving, ensure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.







Side Visor



Alcohol Pad x2







Front Passenger Side Visor



Rear Passenger Side Visor



Scotch Brite Alcohol Pad x4 Pad

Alcohol Pad

> Alcohol Pad


**Tools Required** 



Car Wash Supplies







Putty Knife

# **Preparation Before Painting / Installation**

- · A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

## Installation Steps


**NOTE:** Actual application may vary slightly from illustrations.




Alcohol


Pad

Lower the window & scuff the outside of the rubber window trim where the visor will attach. Clean the scuffed area with an alcohol pad.

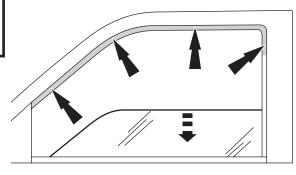

Remove the tape liner from the rear flange. Peel back 2" of tape liner from each end of top flange.

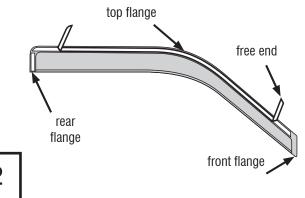

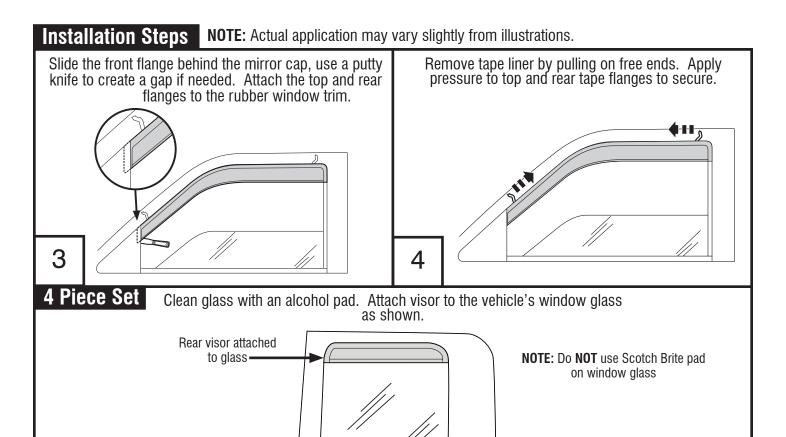

5

# **Care and Cleaning**

· Wash only with mild soap & dry with a clean cloth.

## **Congratulations!**

You have purchased one of the many quality Auto Ventshade™ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.





