

Installation Instructions



AUTO VENT SHADE™

Ventvisor® Deflector


Important Safety Information




- CAUTION - Before driving, ensure that the vent visors are properly secured to vehicle.
- Do not use automatic “brush-style” car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.
- When using Surface Prep, avoid contact with skin. Use in well ventilated area. If contact is made with material, flush area with large amounts of water. If irritation persists, get immediate medical attention. USE PREP ON RUBBER ONLY

Contents

NOTE: Actual product may vary from illustration.




Front Driver Visor




Front Passenger Visor



Alcohol Pad x2

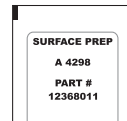

Surface Prep Pad



Scotch Brite pad

Tools Required



Car Wash Supplies



Clean Towel

Preparation Before Painting / Installation

- Please review your warranty card **BEFORE** installation of this product.
- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.


Installation Steps

NOTE: Actual application may vary slightly from illustrations.



Buff the outside rubber window channels where the visor will mount with a scotch brite pad, then clean with an alcohol pad.

Be sure to prep **all** windows before installing the first visor to prevent surface prep pad from drying out.

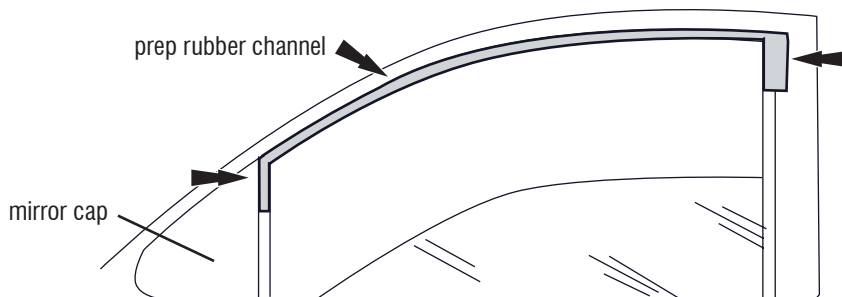


NOTE: See surface prep warning on page 1

1

Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Remove tape line from rear end flange. Expose 2" (5 cm) of tape from each end of top flange.

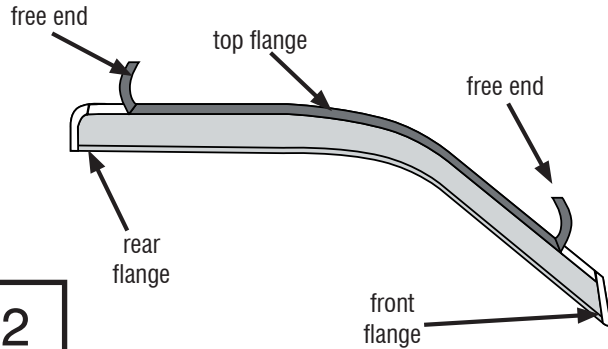


2

Position the driver side visor on the previously prepared surface. The front and top flanges attach directly to the rubber channel on the outside of the door. The rear flange attaches to the vertical plastic cap.

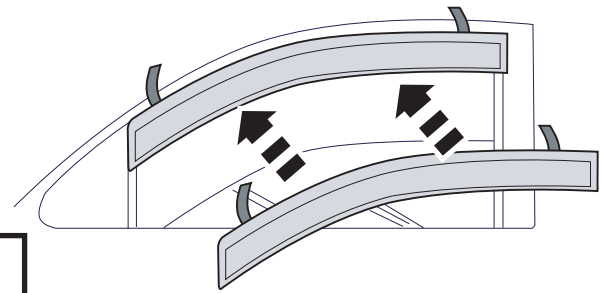


3

The upper lip of the visor will slide under the rubber door seal.

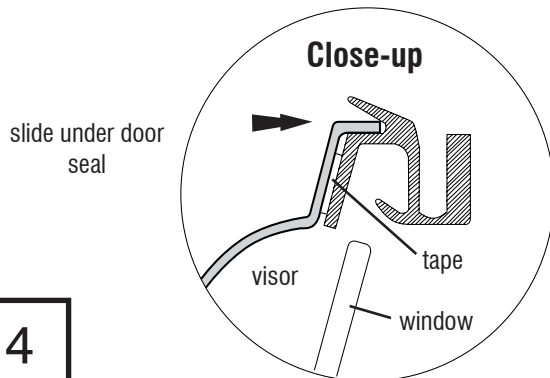


4

Verify proper positioning, and gently press on exposed areas of tape to secure in place.

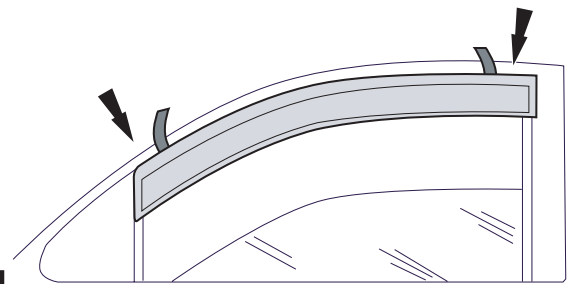


5

With the visor in its final position, remove remaining tape liner by pulling on free ends.

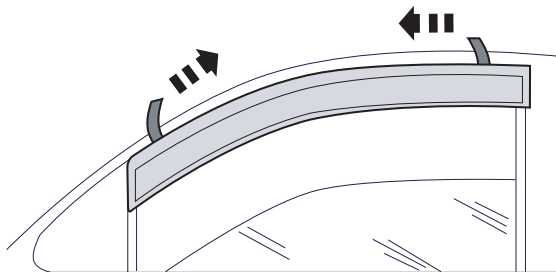

6

Apply pressure along flange edges to ensure adhesion and secure visor in place

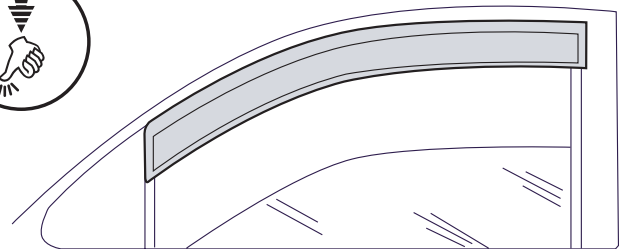

7

Repeat **Steps 1-7** for passenger side visor

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

Congratulations!

You have purchased one of the many quality Auto Ventshade™ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

