

# Installation Instructions



## Ventvisor® Deflector

### Important Safety Information



- CAUTION - Before driving, ensure that the vent visors are properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.
- When using Surface Prep, avoid contact with skin. Use in well ventilated area. If contact is made with material, flush area with large amounts of water. If irritation persists, get immediate medical attention. USE PREP ON RUBBER ONLY

### Contents

**NOTE:** Actual product may vary from illustration.




Front Driver  
Visor




Front Passenger  
Visor



Alcohol Pad x2



Surface Prep  
Pad

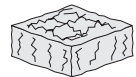

Scotch Brite pad


### Tools Required



Car Wash Supplies



Clean Towel



Nut driver

### Preparation Before Painting / Installation

- Please review your warranty card **BEFORE** installation of this product.
- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

### Installation Steps

**NOTE:** Actual application may vary slightly from illustrations.

Remove the plastic window guide from the channel by releasing the spring clip (store for future use if the visors are ever removed). Replace channel into window frame.

window guide

1

driver side visor



Remove triangular plastic mirror cover on the inside door panel of vehicle. Loosen, but do not remove the indicated nut, to create the necessary gap behind the mirror cap to install the front flange of visor.

loosen nut

2

mirror cap

inside door panel


## Front Visor Installation Steps

**NOTE:** Actual application may vary slightly from illustrations.



Buff the outside rubber window channels where the visor will mount with a scotch brite pad, then clean with an alcohol pad.


Be sure to prep **all** windows before installing the first visor to prevent surface prep pad from drying out.

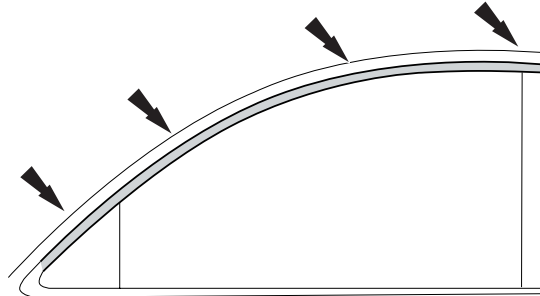

**NOTE:** See surface prep warning on page 1


3

Remove tape line from rear end flange. Expose 2" (5 cm) of tape from each end of top flange.

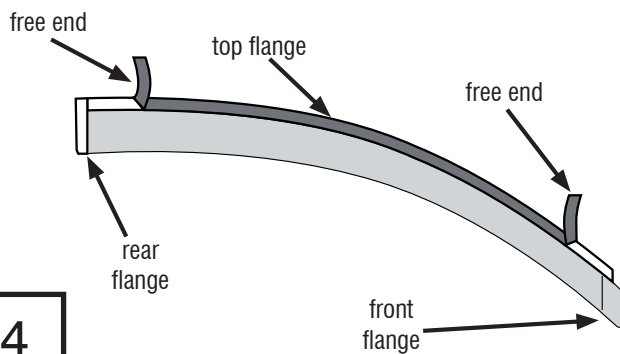


4

Align the visor with the previously prepared window surface. The front flange slides under the loosened mirror cap.

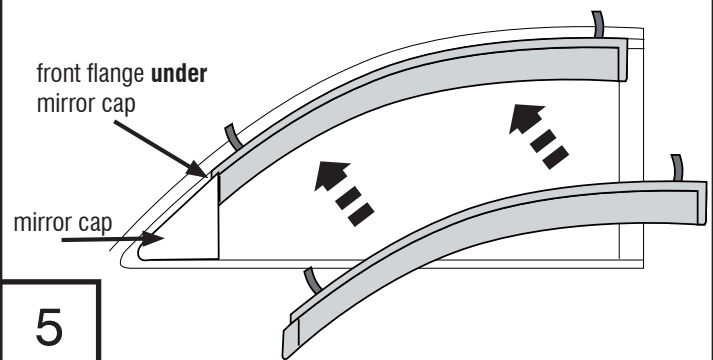


5

Verify proper positioning, and gently press on exposed areas of tape to secure in place.

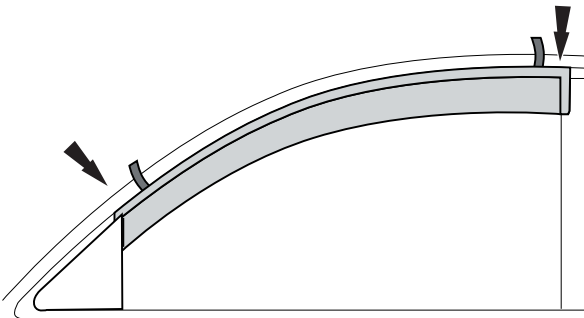


6

With the visor in its final position, remove remaining tape liner by pulling on free ends.

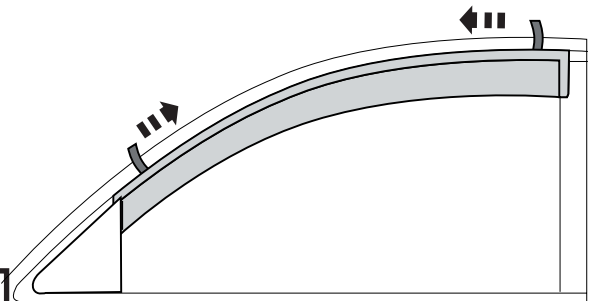


7

Apply pressure along flange edges to ensure adhesion and secure visor in place

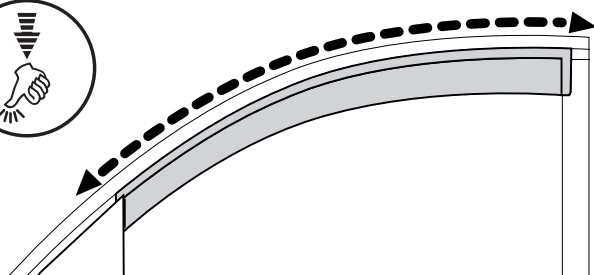

8

Retighten loosened nut and reinstall interior mirror cap.

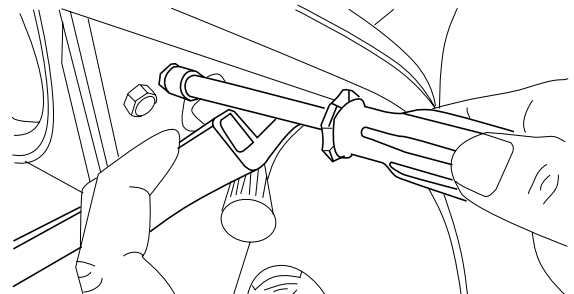

9

Repeat **Steps 1 - 9** for passenger side.

## Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

## Congratulations!

You have purchased one of the many quality Auto Ventshade™ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

