


#### **Important Safety Information**




- CAUTION Before driving, ensure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

# Contents - 2 Piece Set NOTE: Actual product may vary from illustration.



## **Contents - 4 Piece Set**




#### **Tools Required**



#### **Preparation Before Painting / Installation**

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

#### **Installation Steps NOTE:** Actual application may vary slightly from illustrations.

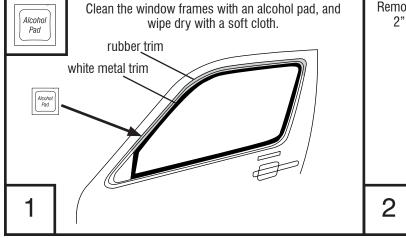

Remove tape liner from front and rear flanges of visor. Peel back 2" (5 cm) of tape liner from each end of the lateral flange.

free end lateral flange free end

front flange

flange

# **Installation Steps NOTE:** Actual application may vary slightly from illustrations. Align visor to the previously cleaned surface. The flanges of the visor attach to the surface of the window frame **ABOVE** the rubber trim of the window frame. tape inside face of window frame **PRESS** rubber trim visor rubber window channel 3 white metal trim door glass With the visor in its final position, remove the remaining tape liner Gently press the exposed areas of tape against the surface and by pulling on free ends. verify position. 5 4 **4 Piece Set** Apply pressure along all flanges to ensure proper adhesion of tape. The rear visor attaches with the same preparation methods as the front visor.



• Wash only with mild soap & dry with a clean cloth.

### **Congratulations!**

You have purchased one of the many quality Auto Ventshade™ branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



6





Repeat Steps 1-7 for opposite side.