

Installation Instructions



Ventvisor® Deflector

Contents - 2 Piece Set



Front Driver
Side Visor



Front Passenger
Side Visor



Alcohol Pad x2

Contents - 4 Piece Set



Front Driver
Side Visor



Front Passenger
Side Visor



Rear Driver
Side Visor



Rear Passenger
Side Visor



Alcohol Pad x4

Important



WARNING/CAUTION/NOTE

Please read this manual and follow instructions carefully. To emphasize special information, the symbol  and the words **WARNING**, **CAUTION** and **NOTE** have special meanings. These special meanings apply except when laws or regulations require that the signal words be used with a different meaning.

Preparation Before Painting / Installation

Ideal installation temperature is 65°-110°F (18°-43°C). A trial fit is recommended to ensure proper positioning and fit, since installing and then removing the Ventvisors will significantly degrade the adhesive performance of the tape. Please check fit of parts before painting as we will not accept the return of modified or painted parts, nor assume any responsibility for parts painted in error.



NOTE - Some vehicles are equipped with window guide tabs. These tabs may need to be moved slightly to line up with the notch in the Ventvisor. To do so, pull down the rubber window channel, adjust the window guide tab, and reposition the rubber window channel.

Care and Cleaning

1. Avoid the use of automatic "brush-style" car washes.
2. Do not use cleaning solvents of any kind.
3. Wash only with mild soap & dry with a clean cloth.


Congratulations!

You have purchased one of the many quality items offered by Auto Ventshade. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.


Installation Steps

Alcohol Pad

Clean the window channel with an alcohol pad.

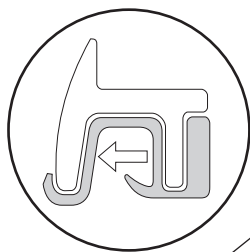

1

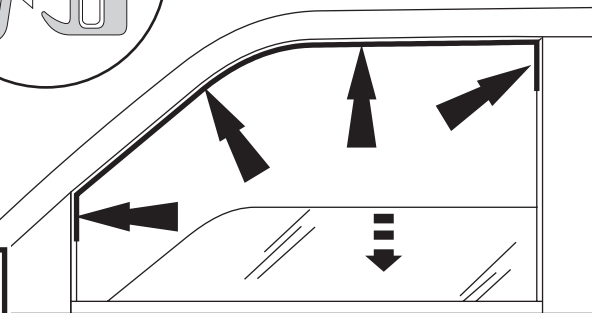


Peel back 2" of tape line from each end of top flange.

top flange


free end

front flange


2

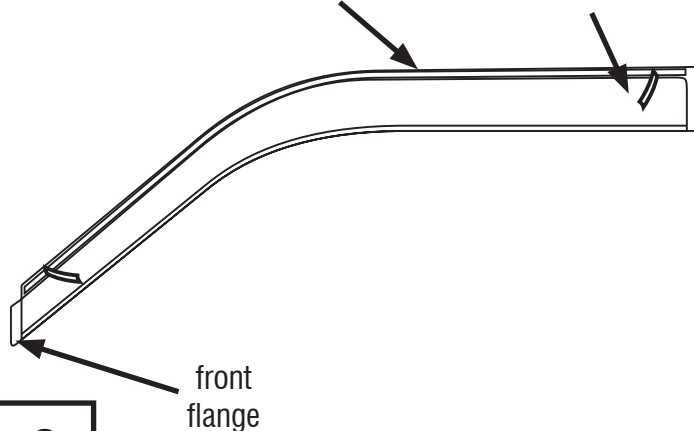

Insert visor into window channel, front flange first. Front and rear flanges insert between the rubber trim and the mirror cap / door frame. Top flange slides into the window channel.

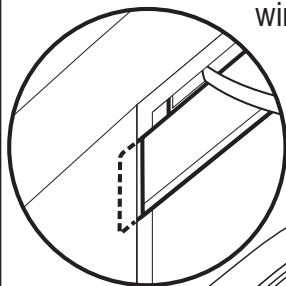


3

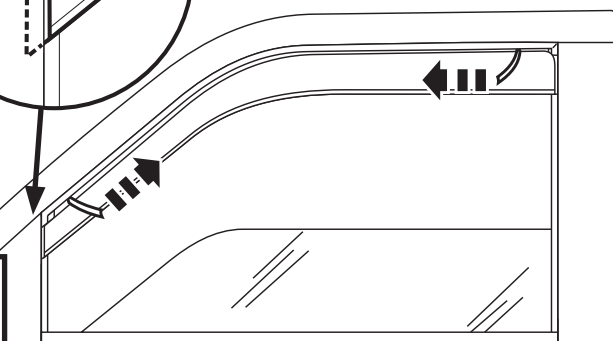


Remove tape liner by pulling on the free ends. Raise window slowly and leave up for 24 hours to secure visor to window channel.

4

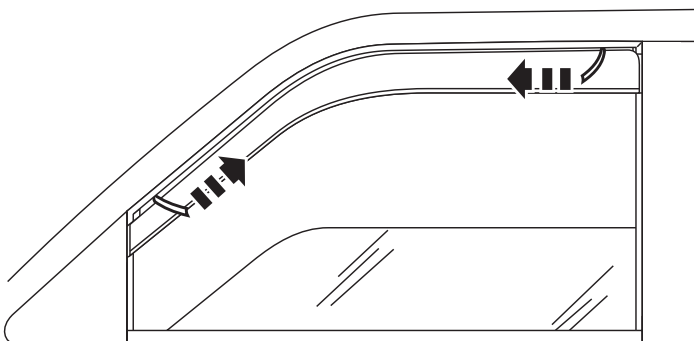

4 Piece Set

Install the rear visors using the same preparation and installation methods as the front visor. Note that the rear flange adheres to the outside of the window post, and the front flange inserts between the rubber & window frame.

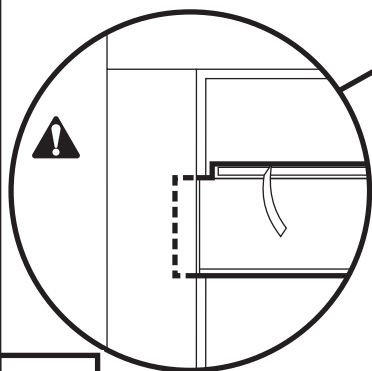

5

