



INSTALLATION GUIDE

2008+ Audi 3.0T, 4.2L, 3.2L S-FLO Filter

Congratulations on your purchase of the AWE Tuning S-FLO Filter for the 2008-10 A5 3.2L, 2008+ S5 4.2, 2010+ Audi B8 S4, 2008+ Q5 3.2L, and 2010+ S5 cabrio.

Exquisite build quality with industry leading performance distinguishes this air filter from all others.

PARTS AND TOOL LIST

- 1 AWE Tuning S-FLO air filter
- 2 M4 hex socket bolt

Required tools and materials:

- Flat tip screwdriver
- T25 Torx
- T15 Torx
- 3mm hex key

Step 1

Open the hood.

Using a flat tip screwdriver, loosen the hose clamp holding the factory intake hose in place.

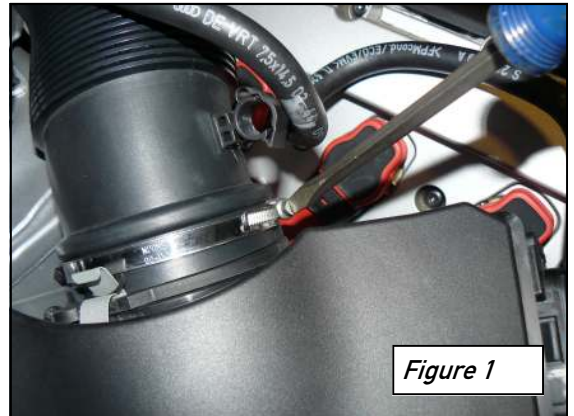


Figure 1

Step 2

Using a T25 Torx bit remove the air box lid and filter assembly.

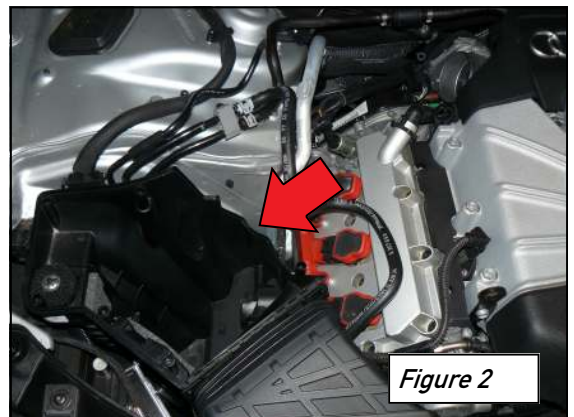


Figure 2

Step 3

Release the two metal clips holding the plastic hose collar to the lid. Next, using a T15 Torx bit, remove the two screws securing the air filter element to the lid.

Remove and discard the large rubber o-ring beneath the air filter element.




Figure 3

Step 4

Install the AWE Tuning S-FLO Filter into the airbox lid by lining up the rubber bosses on the filter with the openings in the airbox lid.



Use the supplied M4 bolts to secure the filter to the lid.

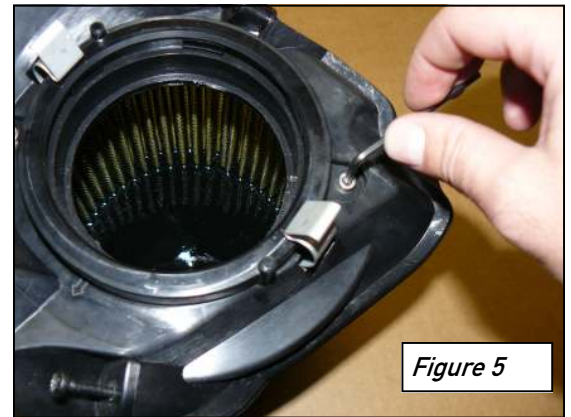


Step 5

Reinstall the plastic hose collar. Then reinstall the lid and filter assembly back in the car.

This is a re-usable air filter that can be cleaned when dirty and put back into service.

Please inspect the air filter element every 25,000 miles for integrity. Clean every 50,000 miles under normal operating conditions, sooner in dusty conditions. Contact AWE Tuning to purchase a filter maintenance kit.

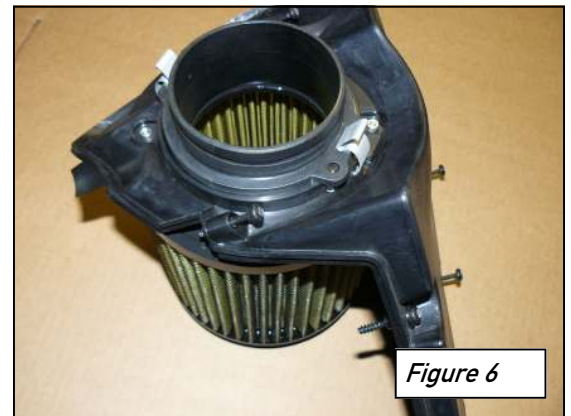

ENJOY