



Installation Instructions




Product: AlumSport Front & Rear

Instruction Part Number: 6000143

Vehicle

Make: GM
Model: C / K10 Pick-up / SUV
Year(s): 1999+

ATTENTION: Read this before going any farther! Returns will not be accepted for ANY installed PART or ASSEMBLY. Use great care to prevent cosmetic damage when performing wheel fit check. In the event that a product must be returned, please contact Baer Customer Service for a RMA Number.

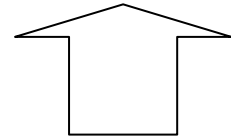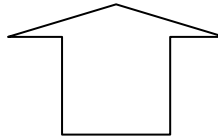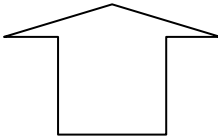



Notices – Read and Follow BEFORE ATTEMPTING INSTALLATION

-
-
- All references to the “left” side of the vehicle correlate to the driver’s side of the vehicle.
-
-
-
- SYSTEM OR “UPSIZED” ROTOR UPGRADE! In ad
- not

BAER Your Complete Performance Brake Supplier!



- hat area with either an arrow, or an “L” for left, or an “R” for right, or both. “L” or left always indicates the driver’s side of US spec vehicles. Images shown are “L” left rotors:

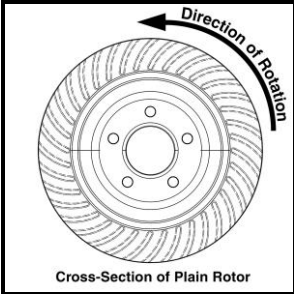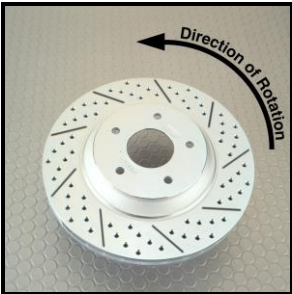

-
-

production is preferred) of your vehicle available when you call.

BAER Your Complete Performance Brake Supplier!

INSTALLATION:

IMPORTANT:

debris shield

imperative

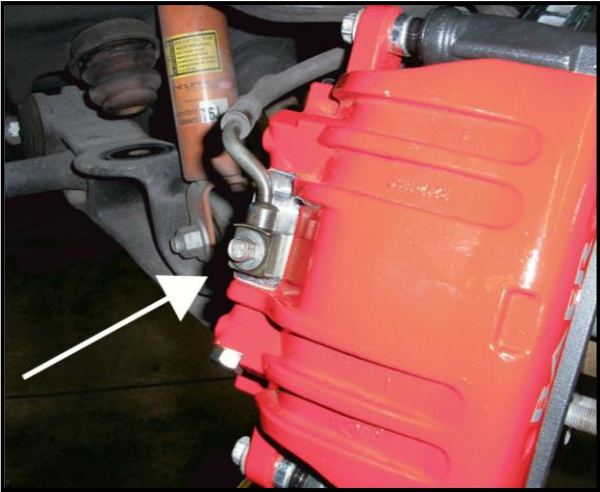


Figure 1:

BAER Your Complete Performance Brake Supplier!

Front only:

Pull brake hose through the retainer bracket on the spindle 3/8" for proper attachment to caliper.

MUST



Figure 2:



Figure 3: Incorrect installation