



baja designs®
The Scientists of Lighting

2018 Jeep JL A-pillar Kit Instructions






baja designs
The Scientists of Lighting

Step 1: Locate and remove the two bolts at the base of the windshield on the driver and passenger sides.



Step 2: With the hardware included in the kit, place one M6 washer onto each M6 bolt, insert the four bolts and washers into driver and passenger side brackets and then place one spacer onto each bolt.

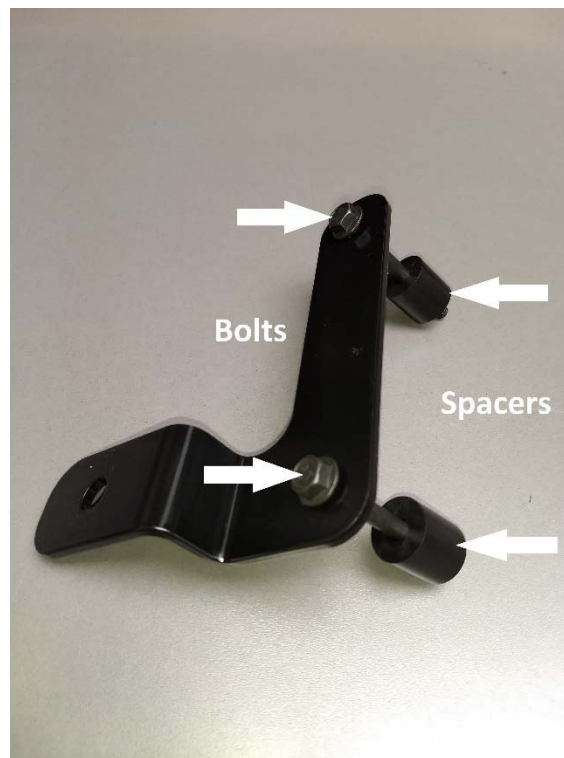

Step 3: Install driver and passenger side brackets onto their corresponding sides and tighten snugly.

Note: Do not overtighten the bracket bolts.



baja designs
The Scientists of Lighting



Step 4: Install lights onto brackets and tighten the 3/8" hardware included with the lights.

Step 5: Use wire harness included with the lights and connect directly to the battery with the positive and negative leads. Route the light switch to the desired location in the cab.

Rely only on high-grade off-road lights offered on our virtual shelves.