


Chevrolet Silverado (2016-18) Squadron Fog Pocket Kit 44-7534, 44-7535, 44-7536, 44-7537

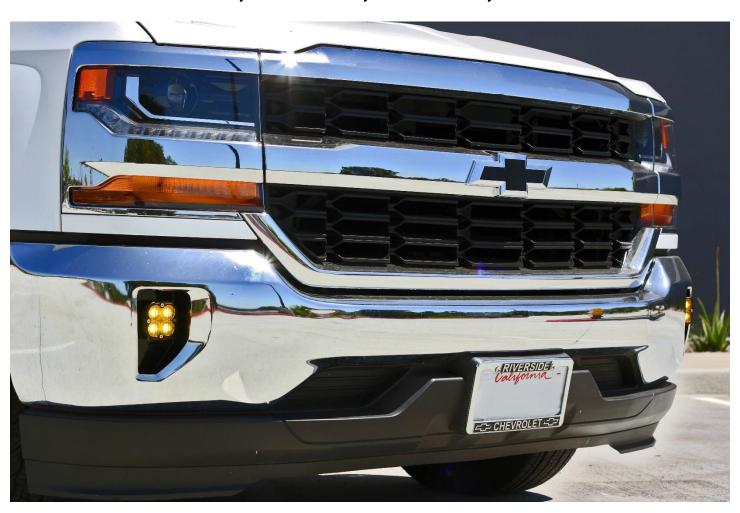

Silverado Squadron Fog Pocket kit

Tools Required

- 4mm Allen wrench
- 7mm socket wrench (1/4" drive)
- 1/4" drive extension

- 9/16" Socket wrench
- 9/16" wrench
- 1. To begin, put the car in park and disconnect the battery.
- You can access the OEM fog lights from the underside of the bumper. Unlock the fog lamp connector by sliding the red plastic portion in the direction shown on the right. To remove the connector, press in on the black detent and pull away from the light.
- 3. There are four 7mm head screws in the circled locations on the right. (Passenger side fog light shown). Remove the four screws and then the fog lamp assembly. The mounting hole shown by the dashed circle on the right will not be used again. Repeat for the opposite side.
- 4. The captive nuts that are in each mounting hole may come loose. To reset them, press on the small arrowed tab below in the direction shown. Slide the nut back over the mounting hole and they should snap into place.





- 5. Locate the hardware bag. Use the 9/16" hex head hardware to attach the Squadron bracket to the fog pocket mount (see passenger side exploded view below on the left for reference). Now, using the 4mm Allen head hardware, place the light onto the Squadron bracket through the front opening of the fog pocket mount (See exploded view on right below). Repeat for the opposite side.
- Place the new fog pocket assembly over the three circled mounting holes below and thread in the OEM screws. Tighten the fasteners. Plug the harness adapter into the OEM harness and into the Squadron power cord. Lock the OEM connector. Repeat for the opposite side.





7. Tie all wires away from any hot or rotating components. Reattach battery.

Re-torque all the fasteners after 100 miles. Your install is now complete! Thank you for choosing Baja Designs.





