

# 2015-2017 Chevy Colorado/GMC Canyon Fog Pocket Light Kit Installation Instructions

44-7582

+



- 1.) Remove the inner fender bolts on driver and passenger sides to expose the factory fog lights which are to be removed *Figure 1*.

Note: If equipped, it may be necessary to remove the fender flares and front bumper fascia as well.



Figure 1

- 2.) After removal of the factory fog lights, the Squadron light, light bracket and fog pocket bracket are assembled as shown in *Figure 2*.

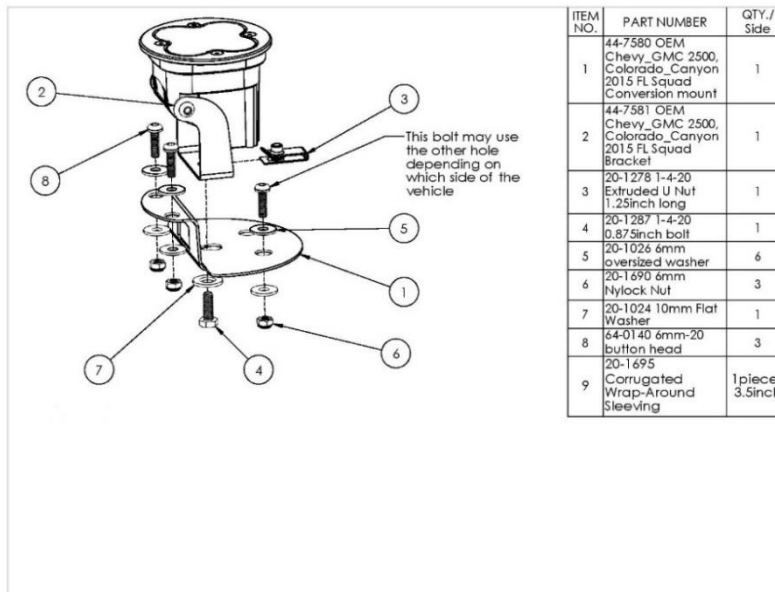


Figure 2

- 3.) The light and bracket assemblies are now installed and plugged into the factory wire harness on the driver and passenger sides of the truck *Figure 3*.



*Figure 3*

- 4.) Zip tie wiring away from sharp edges or moving objects.
- 5.) Reassemble the truck in the reverse order of disassembly.

Note: Use only the hardware included with the light and kit. Kits are designed to work specifically and are for use with only Baja Designs lights.