



***baja designs***<sup>®</sup>  
The Scientists of Lighting

## **Colorado, Canyon, Silverado, Sierra A-Pillar Kit**

**44-7603, 44-7604**






**baja designs**  
The Scientists of Lighting

## **A-Pillar Kit Installation Instructions**

**Step 1:** Remove backing and place a 1" x ½" adhesive backed rubber strip onto each A-pillar bracket.



**Step 2:** Remove the two hood bolts while another person supports the hood. The bracket containing the colored sticker is the passenger's side, place the A-pillar bracket on top of the hood hinge and reinstall the hood bolts.

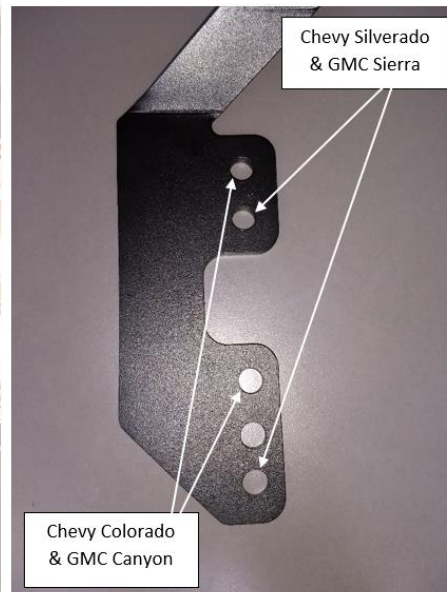

**Note:** Do the driver and passenger side independently so the hood does not become misaligned.

**Step 5:** Install Squadron lights onto brackets using the supplied 3/8" bolts, washers and nyloc nuts.

**Note:** Be sure to route and ziptie the light's wiring and wire harness away from the hood hinges and hot or rotating components so they do not get damaged while opening and closing hood or the with the engine running.

Rely only on high-grade off-road lights offered on our virtual shelves.