


2018 Jeep JL Sport & Sport-S Fog Light Kit Installation Instructions

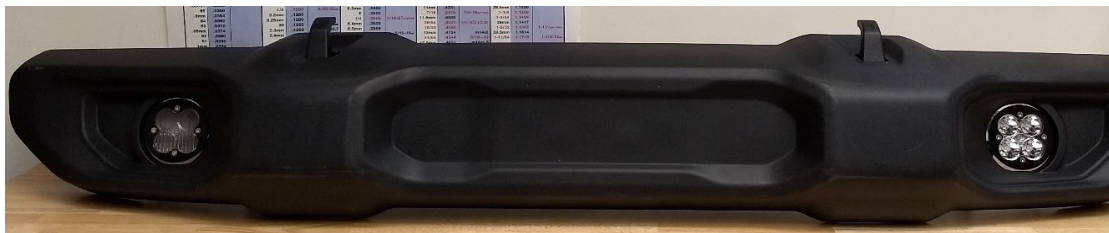

185 Bosstick Boulevard • San Marcos • CA • 92069

Step 1: Remove plastic splash shields from bumper (if equipped).



Step 2: Unplug factory fog lights and remove the three screws holding lights to bumper.




Step 3: Attach passenger and driver side brackets to Squadron-R lights with the serrated washers between the housing and the brackets.



Step 4: Place lights on each side by hand while aligning the mounting holes to get an approximate adjustment angle then tighten the M6 bolts attaching the brackets to the lights.

Note: Further adjustment may be necessary to achieve the desired lighting spread once lights have been fully mounted.

Step 5: Using the previously removed factory hardware mount the passenger and driver side Squadron-R lights with brackets.

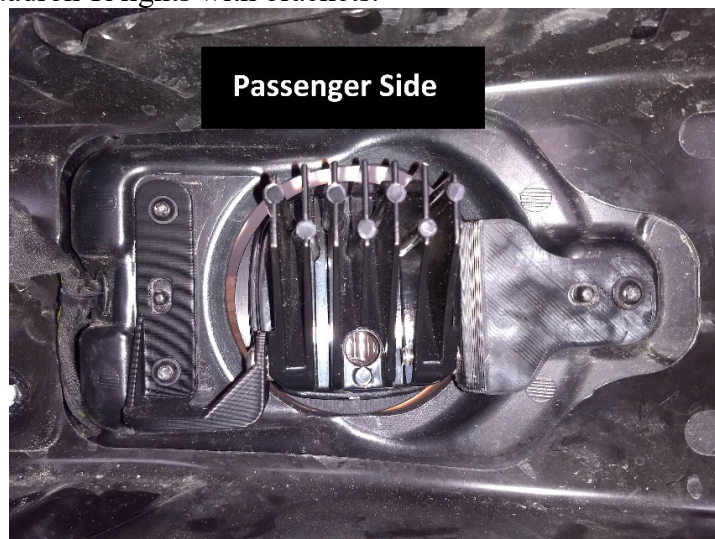

Step 6: With the two connectors included in the kit plug one side into the vehicle's harness and the other side into the Squadron's power cord. This will allow operation of the lights with the factory switch.

Note: Ziptie wiring away from hot, moving or rotating items to prevent damage to the wiring.

Step 7: Replace splash shields (if equipped).