



2018 Jeep JL Sahara Fog Light Installation Instructions





baja designs
The Scientists of Lighting

Step 1: Remove plastic shrouds on tire side of bumper which conceal the factory fog lights.




Step 2: Unplug and remove factory fog lights.





baja designs
The Scientists of Lighting

Step 3: With the included hardware bolt the kit brackets onto your Squadron lights.

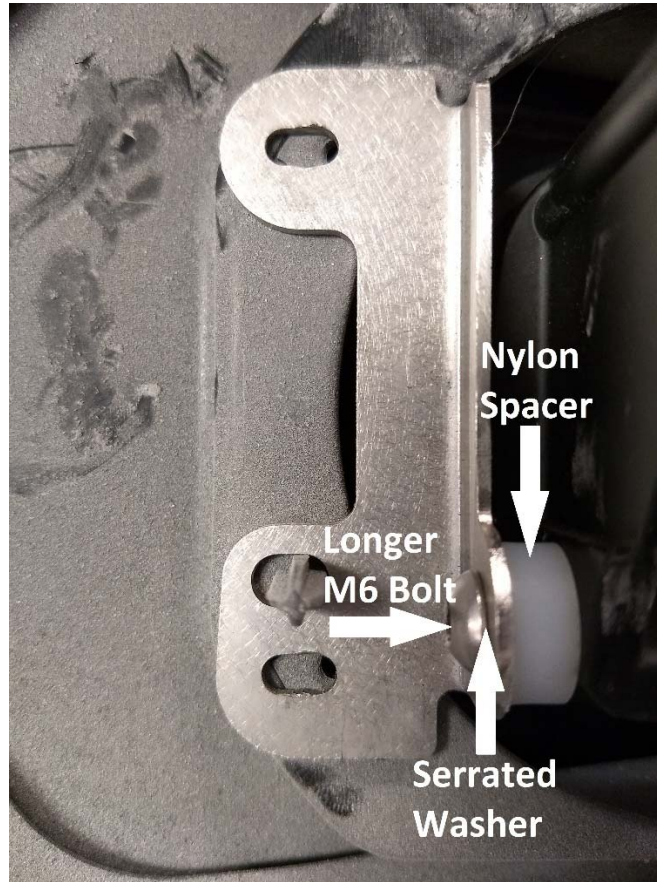

Step 4: Mount Squadrons onto the bumper with the 8 included plastic screws.





Step 5: Plug in the included 2 pin adapters to the Squadrons and into the factory harness.



Step 6: Turn on fog lights with the factory switch and adjust to the preferred location down-road.

Step 7: Ziptie wiring out of the way and replace previously removed plastic shrouds.