


Ford (06-14) F-150, Toyota Tundra (07-13), Toyota Tacoma (05-11) Fog Pocket Kit Instructions 44-7713, 44-7613, 44-7787, 44-7786

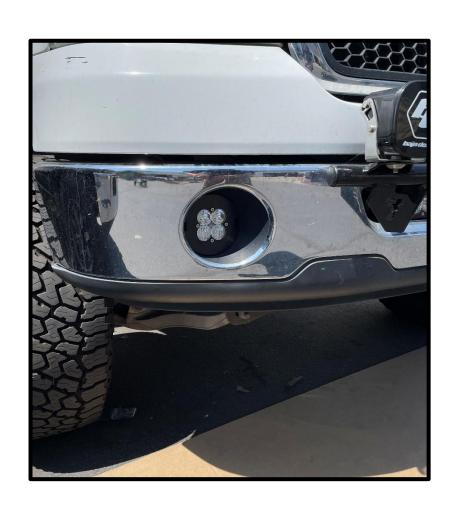



Ford (06-14) F-150, Toyota Tundra (07-13), Toyota Tacoma (05-11) 44-7103 Kit

Tools Required


- Flat Head
- 8mm, 7/16" wrench
- 8mm, 10mm, 7/16" socket
- Toyota Only: Remove the fender liner by taking out the 2x Plastic clips.
- Toyota Only: Using a 10mm socket, remove the two bolts mounting the fender liner.
- 3. <u>Totoya Only:</u> Using a 8mm socket, remove the 3 bolts mounting the fog light. Push down on the locking tabs and remove the fog light housing from the bumper.
- Ford Only: Using a 8mm socket, remove the 3 bolts mounting the fog light bracket.
- 5. Using a 2.5mm Allen key, remove the 4x bolts mounting the bezel.
- 6. Replace the stock aluminum bezel with the supplied steel bezel bracket. Using a 4mm Allen, Torque the Allen bolts to 25 in-lbs.




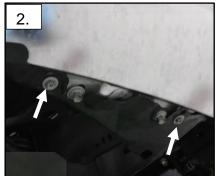

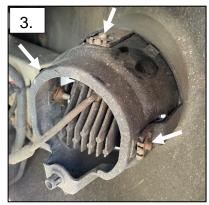



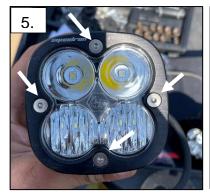

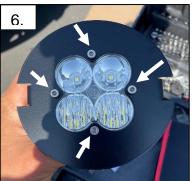



- Ford Only: Attach the 2x supplied extruded nuts to the back of the bracket.
- 8. Toyota Only: Attach 1x supplied extruded nuts to the back of the bracket. (For example, on passenger side light, place the extruded nut on the driver side of the light)
- After the stock fog light is removed.
 Push in the Baja Designs light into the plastic housing.
- 10. <u>Ford Only</u>: Using a 7/16" socket, mount the bracket by attaching the two bolts on the side.
- 11. <u>Toyota Only:</u> Using a 7/16" socket & 8mm wrench, mount the bracket with both the supplied hardware and OEM hardware as shown.
- 12. Using the supplied fog light harness adapter, plug in the OEM harness to the Baja Designs Light.
- 13. Re-install the light and angle accordingly.







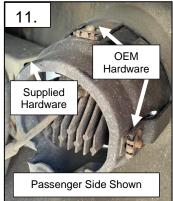

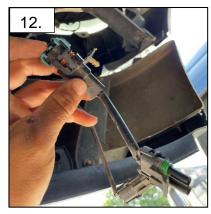



Tie all wires away from sharp, hot, and/or rotating components.

Re-torque all the fasteners after 100 miles.

Your install is now complete! Thank you for choosing Baja Designs.